



# **Thecus N7700**

# **Thecus N7700PRO**

FW v3.00.08

## User's Manual

## **Copyright and Trademark Notice**

Thecus and other names of Thecus products are registered trademarks of Thecus Technology Corp. Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation. Apple, iTunes and Apple OS X are registered trademarks of Apple Computers, Inc. All other trademarks and brand names are the property of their respective owners. Specifications are subject to change without notice.

Copyright © 2009 Thecus Technology Corporation. All rights reserved.

## **About This Manual**

All information in this manual has been carefully verified to ensure its correctness. In case of an error, please provide us with your feedback. Thecus Technology Corporation reserves the right to modify the contents of this manual without notice.

Product name: Thecus N7700 / N7700PRO

Manual Version: 2.2













Release Date: November 2009

## **Limited Warranty**

Thecus Technology Corporation guarantees all components of Thecus N7700 are thoroughly tested before they leave the factory and should function normally under general usage. In case of any system malfunctions, Thecus Technology Corporation and its local representatives and dealers are responsible for repair without cost to the customer if the product fails within the warranty period and under normal usage. Thecus Technology Corporation is not responsible for any damage or loss of data deemed to be caused by its products. It is highly recommended that users conduct necessary back-up practices.

## Safety Warnings

For your safety, please read and follow the following safety warnings:

-  Read this manual thoroughly before attempting to set up your N7700.
-  Your N7700 is a complicated electronic device. DO NOT attempt to repair it under any circumstances. In the case of malfunction, turn off the power immediately and have it repaired at a qualified service center. Contact your vendor for details.
-  DO NOT allow anything to rest on the power cord and DO NOT place the power cord in an area where it can be stepped on. Carefully place connecting cables to avoid stepping or tripping on them.
-  Your N7700 can operate normally under temperatures between 0°C and 40°C, with relative humidity of 20% – 85%. Using the N7700 under extreme environmental conditions could damage the unit.
-  Ensure that the N7700 is provided with the correct supply voltage (AC 100V ~ 240V, 50/60 Hz, 3A). Plugging the N7700 to an incorrect power source could damage the unit.
-  Do NOT expose the N7700 to dampness, dust, or corrosive liquids.
-  Do NOT place the N7700 on any uneven surfaces.
-  DO NOT place the N7700 in direct sunlight or expose it to other heat sources.
-  DO NOT use chemicals or aerosols to clean the N7700. Unplug the power cord and all connected cables before cleaning.
-  DO NOT place any objects on the N7700 or obstruct its ventilation slots to avoid overheating the unit.
-  Keep packaging out of the reach of children.
-  If disposing of the device, please follow your local regulations for the safe disposal of electronic products to protect the environment.

# Table of Contents

<b>Copyright and Trademark Notice .....</b>	<b>2</b>
<b>About This Manual .....</b>	<b>2</b>
<b>Limited Warranty.....</b>	<b>2</b>
<b>Safety Warnings .....</b>	<b>3</b>
<b>Table of Contents .....</b>	<b>4</b>
<b>Chapter 1: Introduction.....</b>	<b>9</b>
<b>Overview .....</b>	<b>9</b>
<b>Product Highlights.....</b>	<b>9</b>
File Server .....	9
FTP Server .....	9
iTunes Server.....	9
Media Server.....	10
Backup Server.....	10
Printer Server.....	10
Multiple RAID .....	10
Dual Mode Support .....	10
Superior Power Management .....	10
<b>Package Contents .....</b>	<b>11</b>
<b>Front Panel.....</b>	<b>12</b>
<b>Hard Disk Trays .....</b>	<b>13</b>
<b>Rear Panel.....</b>	<b>13</b>
<b>Chapter 2: Hardware Installation .....</b>	<b>15</b>
<b>Overview .....</b>	<b>15</b>
<b>Before You Begin.....</b>	<b>15</b>
<b>Hard Disk Installation.....</b>	<b>15</b>
<b>Cable Connections .....</b>	<b>16</b>
<b>Checking System Status .....</b>	<b>17</b>
System Status Normal.....	17
System Trouble .....	17
<b>Chapter 3: First Time Setup .....</b>	<b>18</b>
<b>Overview .....</b>	<b>18</b>
<b>Thecus Setup Wizard .....</b>	<b>18</b>
<b>LCD Operation .....</b>	<b>20</b>
LCD Controls.....	20
Display Mode .....	20
USB Copy .....	21
Management Mode.....	21
<b>Typical Setup Procedure .....</b>	<b>21</b>
Step 1: Network Setup .....	22
Step 2: RAID Creation .....	22
Step 3: Create Local Users or Setup Authentication .....	22
Step 4: Create Folders and Set Up ACLs.....	22
Step 5: Start Services .....	22
<b>Chapter 4: System Administration .....</b>	<b>24</b>
<b>Overview .....</b>	<b>24</b>
<b>Web Administration Interface .....</b>	<b>24</b>
Menu Bar.....	24
Message Bar .....	25
Logout .....	26
<b>Language Selection .....</b>	<b>26</b>



<b>System Information.....</b>	<b>26</b>
Product Information .....	26
System/Service Status .....	27
Logs .....	28
<b>System Management .....</b>	<b>29</b>
Time: Setting system time .....	29
Notification configuration .....	29
Firmware Upgrade .....	30
UPS Setting .....	31
Schedule Power On/Off.....	32
Wake-Up On LAN (WOL) .....	33
SNMP Support .....	33
Utility .....	34
<b>System Network .....</b>	<b>38</b>
WAN Configuration.....	38
LAN .....	40
LAN Configuration .....	40
DHCP Server Configuration.....	40
Samba / CIFS.....	41
Samba Service .....	41
File Access Cache.....	41
Samba Recycle Bin.....	41
Samba Anonymous Login Authentication .....	42
AFP (Apple Network Setup) .....	42
NFS Setup .....	42
<b>FTP .....</b>	<b>43</b>
<b>Media Server .....</b>	<b>44</b>
Media Manager Settings.....	44
Share Media Folders .....	45
Connecting DMAs to the Media Server .....	45
<b>HTTP/ Web Disk .....</b>	<b>46</b>
<b>UPnP .....</b>	<b>47</b>
<b>Nsync Target .....</b>	<b>47</b>
<b>Bonjour Setting .....</b>	<b>47</b>
<b>Storage Management.....</b>	<b>48</b>
Disks Information .....	48
S.M.A.R.T. Information .....	49
Bad Block Scan.....	50
RAID Information.....	50
Create a RAID .....	51
RAID Level.....	53
Edit RAID .....	54
Remove RAID.....	55
Expanding a RAID .....	56
Migrating a RAID .....	57
Space Allocation .....	60
Allocating Space for iSCSI Volume.....	61
Modify iSCSI Volume .....	62
Delete Volume.....	63
Advance Option .....	64
iSCSI Block Size .....	64
iSCSI CRC/Checksum .....	64
Share Folder .....	64
Adding Folders .....	65
Modify Folders.....	66
Remove Folders.....	67
NFS Share .....	67
Snapshot .....	69

Snap (Snapshot configuration) .....	69
Folder and sub-folders Access Control List (ACL) .....	70
Stackable NAS .....	72
ISO Mount .....	77
<b>User and Group Authentication .....</b>	<b>80</b>
ADS/NT Support .....	80
Local User Configuration .....	82
Add Users .....	83
Edit Users .....	84
Remove Users .....	85
Local Group Configuration .....	85
Add Groups .....	86
Edit Groups .....	86
Remove Groups .....	87
Batch Create Users and Groups .....	87
<b>Application Server .....</b>	<b>88</b>
Printer Information .....	88
Windows XP SP2 .....	89
Windows Vista .....	90
<b>iTunes® Server .....</b>	<b>93</b>
<b>Module Management .....</b>	<b>93</b>
<b>Module Installation .....</b>	<b>93</b>
<b>System Module .....</b>	<b>93</b>
<b>User Module .....</b>	<b>94</b>
<b>Backup .....</b>	<b>94</b>
Nsync .....	94
Add Nsync Task .....	94
Setting Up an Nsync Target on an Nsync Device .....	96
Setting Up an Nsync Target on Another Device .....	96
Designating N7700 as an Nsync Target .....	96
Thecus Backup Utility .....	97
Windows XP Data Backup .....	97
Apple OS X Backup Utilities .....	98
<b>Chapter 5: Using the N7700 .....</b>	<b>99</b>
<b>Overview .....</b>	<b>99</b>
<b>Login Page .....</b>	<b>99</b>
<b>Using WebDisk .....</b>	<b>99</b>
<b>Photo Server .....</b>	<b>101</b>
Windows XP Publishing Wizard .....	102
Managing Albums and Photos .....	107
Creating Albums .....	108
Password Protecting Albums .....	108
Uploading Pictures to Albums .....	108
EXIF Information .....	108
Slide Shows .....	109
<b>Mapping a Client PC to the N7700 .....</b>	<b>109</b>
Windows .....	109
Apple OS X .....	109
<b>Mapping the N7700 as an iSCSI Drive .....</b>	<b>110</b>
Windows 2000/XP .....	110
Windows Vista .....	114
<b>Chapter 6: Tips and Tricks .....</b>	<b>115</b>
<b>USB and eSATA Storage Expansion .....</b>	<b>115</b>
<b>Adding a Spare Disk .....</b>	<b>115</b>
<b>Remote Administration .....</b>	<b>115</b>
Part I - Setup a DynDNS Account .....	116
Part II - Enable DDNS on the Router .....	116

Part III - Setting up Virtual Servers (HTTPS) .....	116
<b>Firewall Software Configuration</b> .....	<b>116</b>
<b>Replacing Damaged Hard Drives</b> .....	<b>117</b>
Hard Drive Damage .....	117
Replacing a Hard Drive .....	117
RAID Auto-Rebuild .....	117
<b>Chapter 7: Troubleshooting</b> .....	<b>118</b>
<b>Forgot My Network IP Address</b> .....	<b>118</b>
<b>Can't Map a Network Drive in Windows XP</b> .....	<b>118</b>
<b>Restoring Factory Defaults</b> .....	<b>118</b>
<b>Problems with Time and Date Settings</b> .....	<b>118</b>
<b>Dual DOM Supports for Dual Protection</b> .....	<b>119</b>
<b>Chapter 8: Revision updated (FW 3.00.03 to 3.00.06)</b> .....	<b>120</b>
<b>What's New</b> .....	<b>120</b>
RAID Expansion for iSCSI Target Volume .....	120
RAID Volume Encryption .....	121
iSCSI Thin-Provisioning .....	122
iSCSI LUN ID .....	126
<b>Error Corrections</b> .....	<b>127</b>
<b>Chapter 9: Revision updated up to FW 3.00.08</b> .....	<b>128</b>
<b>What's New</b> .....	<b>128</b>
Updated Login User Interface .....	128
Updated Photo Server User Interface .....	128
Disclaimer Page Added .....	129
Updated Main User Interface .....	130
Add On-Line Register Service .....	130
Added Rsync Setting under Nsync Target .....	131
Added Rsync Backup Feature .....	131
Added 2 <sup>nd</sup> Gateway for Clients of DHCP Server Route .....	132
Added Dual DOM for Auto Repair .....	133
<b>Appendix A: Product Specifications</b> .....	<b>134</b>
<b>Hardware Specifications</b> .....	<b>134</b>
<b>Software Specifications</b> .....	<b>134</b>
<b>Appendix B: Customer Support</b> .....	<b>136</b>
<b>Appendix C: RAID Basics</b> .....	<b>137</b>
<b>Overview</b> .....	<b>137</b>
<b>Benefits</b> .....	<b>137</b>
Improved Performance .....	137
Data Security .....	137
<b>RAID Levels</b> .....	<b>137</b>
RAID 0 .....	137
RAID 1 .....	137
RAID 5 .....	138
RAID 6 .....	138
RAID 10 .....	138
JBOD .....	138
<b>Stripe Size</b> .....	<b>138</b>
<b>Disk Usage</b> .....	<b>139</b>
<b>Appendix D: Active Directory Basics</b> .....	<b>140</b>
<b>Overview</b> .....	<b>140</b>
<b>What is Active Directory?</b> .....	<b>140</b>
<b>ADS Benefits</b> .....	<b>140</b>
<b>Appendix E: UPS Compatibility List</b> .....	<b>141</b>

<b>Appendix F: Licensing Information .....</b>	<b>145</b>
<b>Overview .....</b>	<b>145</b>
<b>Source Code Availability .....</b>	<b>145</b>
<b>CGIC License Terms.....</b>	<b>146</b>
<b>GNU General Public License .....</b>	<b>146</b>

# Chapter 1: Introduction

## **Overview**

Thank you for choosing the Thecus N7700 IP Storage Server. The Thecus N7700 is an easy-to-use storage server that allows a dedicated approach to storing and distributing data on a network. Data reliability is ensured with RAID features that provide data security and recovery—over ten Terabyte of storage is available using RAID 5 and RAID 6. Gigabit Ethernet ports enhance network efficiency, allowing the N7700 to take over file management functions, increase application and data sharing and provide faster data response. The N7700 offers data mobility with a disk roaming feature that lets you hot swap working hard drives for use in another N7700, securing the continuity of data in the event of hardware failure. The N7700 allows data consolidation and sharing between Windows (SMB/CIFS), UNIX/Linux, and Apple OS X environments. The N7700's user-friendly GUI supports multiple languages.

## **Product Highlights**

### **File Server**

First and foremost, the N7700 allows you to store and share files over an IP network. With a Network Attached Storage (NAS) device, you can centralize your files and share them easily over your network. With the easy-to-use web-based interface, users on your network can access these files in a snap.

To learn about the Web User Interface, go to  
**Chapter 5: Using the N7700 > [Using WebDisk](#).**

### **FTP Server**

With the built-in FTP Server, friends, clients, and customers can upload and download files to your N7700 over the Internet with their favorite FTP programs. You can create user accounts so that only authorized users have access.

To set up the FTP Server, refer to  
**Chapter 4: System Network > [FTP](#) .**

### **iTunes Server**

With the built-in iTunes server capability, the N7700 enables digital music to be shared and played anywhere on the network!

To set up the iTunes Server, refer to  
**Chapter 4: Application Server > [iTunes Configuration](#).**

## Media Server

With the built-in Media Server capability, the N7700 provides media streaming service to stand-alone networked home media adapters that support the UPnP AV protocol or are Digital Living Network Alliance (DLNA) standard compliant.

To set up the Media Server, refer to  
**Chapter 4: System Network > [Media Server](#).**

## Backup Server

Don't leave precious data to chance. With advanced backup capabilities, you can easily upload mission critical files to the N7700, and even automate your backup tasks for true peace-of-mind.

To find out how to backup your files with the N7700, refer to  
**Chapter 4: Backup > [Nsync](#).**

## Printer Server

With the N7700's Printer Server, you can easily share an IPP printer with other PCs connected to your network.

To set up the Printer Server, refer to  
**Chapter 4: Application Server > [Printer Information](#).**

## Multiple RAID

N7700 supports multiple RAID volumes on one system. So, you can create RAID 0 for your non-critical data, and create RAID 5 for mission-critical data. Create the RAID levels depending on your needs.

To configure RAID modes on the N7700, refer to  
**Chapter 4: Storage Management > [RAID Information](#).**

## Dual Mode Support

N7700 is not only a file server, but it also supports iSCSI initiators. Your server can access N7700 as a direct-attached-storage over the LAN or Internet. There is no easier way to expand the capacity of your current application servers. All the storage needs can be centrally managed and deployed. This brings ultimate flexibility to users.

To set up an iSCSI volume, refer to  
**Chapter 4: Storage Management > Space Allocation > [Allocating Space for iSCSI Volume](#).**

## Superior Power Management

N7700 supports schedule power on/off. With this feature, administrator can set at what time to turn on or off the system. This feature is a big plus for people who want to conserve energy. Wake-On-LAN enables administrator to remotely turn on the system without even leaving their own seat.

To schedule system on and off, refer to  
**Chapter 4: System Management > [Scheduled Power On/Off](#)**

## Package Contents

Your N7700 package should contain the following items:


- N7700 Unit x1
- Power Cord x1
- QIG (Quick Installation Guide) x1
- CD-Title x2 (DriveClone5 Pro CD & Universal CD)
- Ethernet Cable x1
- Screw Kit & Key-Lock x1
- HDD Compatibility list Card x1
- Multiple Languages Warranty Card x1



Please check to see if your package is complete. If you find that some items are missing, contact your dealer.

## Front Panel

The Thecus N7700's front panel has the device's controls, indicators, and hard disk trays:

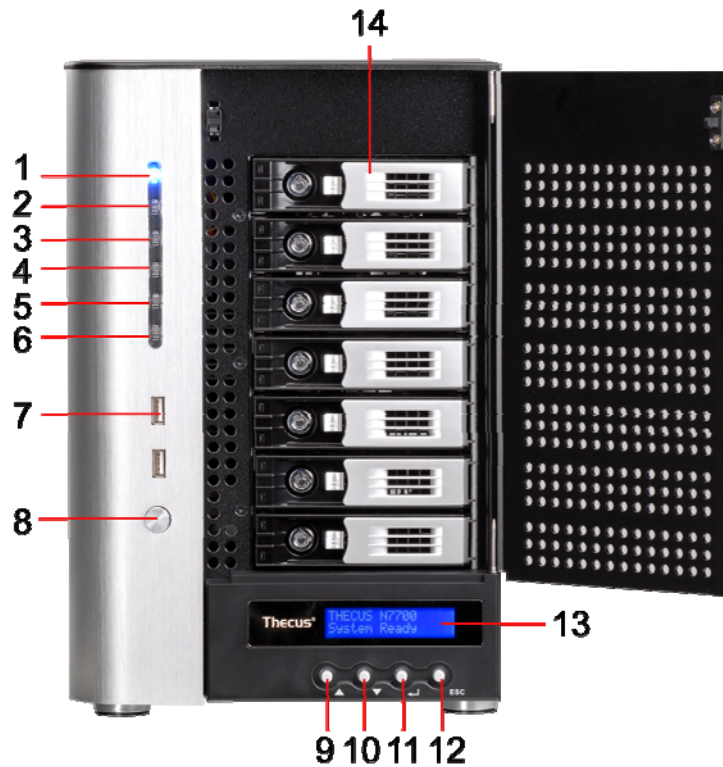


Front Panel	
Item	Description
1.Power LED	<ul style="list-style-type: none"> <li>• <b>Solid blue:</b> System is power on.</li> </ul>
2.System LED	<ul style="list-style-type: none"> <li>• <b>Solid orange:</b> system is being upgraded or system startup; data currently inaccessible</li> </ul>
3.WAN LED	<ul style="list-style-type: none"> <li>• <b>Solid green:</b> network link</li> <li>• <b>Blinking green:</b> network activity</li> </ul>
4.LAN LED	<ul style="list-style-type: none"> <li>• <b>Solid green:</b> network link</li> <li>• <b>Blinking green:</b> network activity</li> </ul>
5.USB Copy LED	<ul style="list-style-type: none"> <li>• <b>Solid blue:</b> files are being copied from a USB storage device</li> </ul>
6.eSATA link LED	<ul style="list-style-type: none"> <li>• <b>Solid blue:</b> external eSATA device has connected</li> </ul>
7.USB Port	<ul style="list-style-type: none"> <li>• USB 2.0 port for compatible USB devices, such as USB disks, USB printers, and USB wireless dongles*</li> </ul> <p><b>Note:</b> For supported USB wireless dongles, please contact <a href="http://esupport.thecus.com/support">http://esupport.thecus.com/support</a></p>
8.Power Button	<ul style="list-style-type: none"> <li>• Power on/off N7700</li> </ul>
9.Up Button ▲	<ul style="list-style-type: none"> <li>• Push to scroll up when using the LCD display</li> </ul>
10.Down Button ▼	<ul style="list-style-type: none"> <li>• Push to enter USB copy operation screen</li> </ul>
11.Enter Button ↵	<ul style="list-style-type: none"> <li>• Push to enter LCD operate password for basic system setting</li> </ul>
12.Escape Button <b>ESC</b>	<ul style="list-style-type: none"> <li>• Push to leave the current LCD menu</li> </ul>
13.LCD Display	<ul style="list-style-type: none"> <li>• Displays current system status and warning messages</li> </ul>
14.HDD Trays	<ul style="list-style-type: none"> <li>• Seven 3.5" SATA HDD trays</li> <li>• Locks are provided for added security</li> </ul>



## Hard Disk Trays

Each of the N7700's hard disk trays has

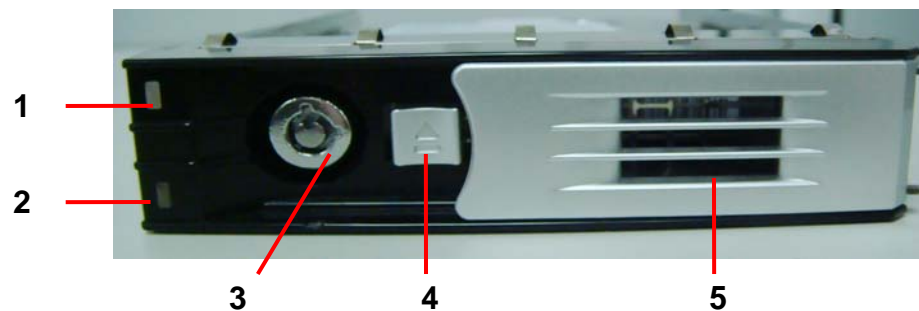


a lock, a latch, and two LED indicators:

Hard Disk Trays	
Item	Description
1.HDD Power LED	• <b>Solid blue:</b> hard disk is powered on
2.HDD Access/Error LED	• <b>Blinking green:</b> system is accessing data on the hard disk
3.Lock	• Use the lock to physically secure the hard disk to the unit
4.Latch	• Use to open and remove or close and secure the tray
5.Handle	• Pull out HDD tray

## Rear Panel

The N7700 rear panel features ports and connectors.

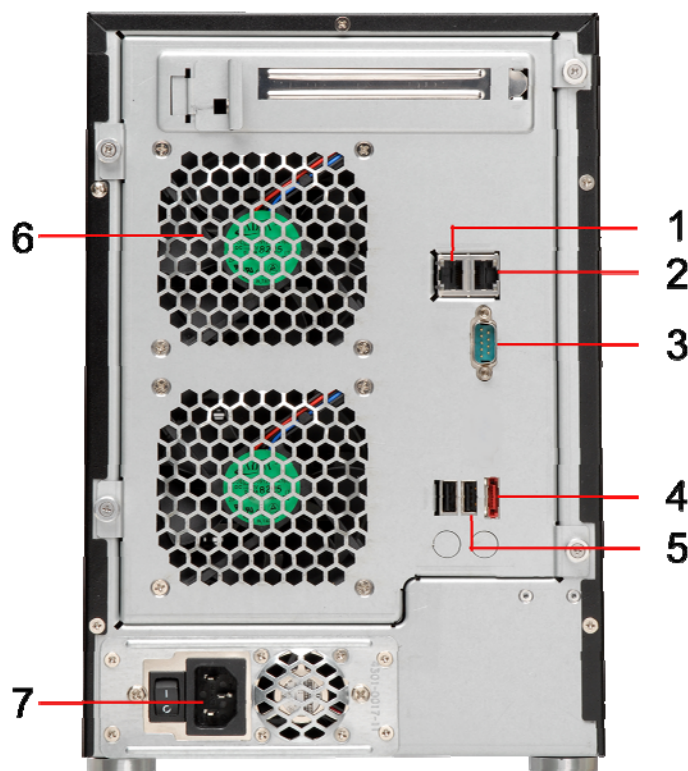

Back Panel	
Item	Description
1.LAN Port	<ul style="list-style-type: none"> <li>• LAN port for connecting to an Ethernet network through a switch or router</li> </ul>
2.WAN Port	<ul style="list-style-type: none"> <li>• WAN port for connecting to an Ethernet network through a switch or router</li> </ul>
3.Serial Port	<ul style="list-style-type: none"> <li>• This port is for external UPS device</li> </ul>
4.eSATA Port	<ul style="list-style-type: none"> <li>• eSATA port for high-speed storage expansion</li> </ul>
5.USB Port	<ul style="list-style-type: none"> <li>• USB 2.0 port for compatible USB devices, such as USB disks, and USB printers</li> </ul>
6.System Fan	<ul style="list-style-type: none"> <li>• System fan that exhausts heat from the unit</li> </ul>
7.Power Connector	<ul style="list-style-type: none"> <li>• Connect the included power cords to these connectors</li> </ul>

## Chapter 2: Hardware Installation

### Overview

Your N7700 is designed for easy installation. To help you get started, the following chapter will help you quickly get your N7700 up and running. Please read it carefully to prevent damaging your unit during installation.

### Before You Begin

Before you begin, be sure to take the following precautions:

1. Read and understand the **Safety Warnings** outlined in the beginning of the manual.
2. If possible, wear an anti-static wrist strap during installation to prevent static discharge from damaging the sensitive electronic components on the N7700.
3. Be careful not to use magnetized screwdrivers around the N7700's electronic components.

### Hard Disk Installation

The N7700 supports seven standard 3.5" Serial ATA (SATA) hard disks. To install a hard disk into the N7700, follow the steps below:

1. Remove a hard disk tray from the N7700.
2. Slide the new SATA hard disk into the tray and fasten the screws.
3. Insert the hard disk and tray back into the N7700 until it snaps into place and lock it with a key if desired.
4. The LED blinks green when the hard disk is accessed.

#### NOTE

If your HDD was part of a RAID 1, RAID 5 or RAID 6 array previously, it automatically rebuilds. If you replace all the drives with higher capacity drives, you will need to go to Administrator login and format the drives.

## ***Cable Connections***

To connect the N7700 to your network, follow the steps below:

1. Connect an Ethernet cable from your network to the WAN port on the back panel of the N7700.



2. Connect the provided power cord into the universal power socket on the back panel. Plug the other end of the cord into a surge protector socket. Press the power supply switch to turn on the power supply.



3. Press the power button on the Front Panel to boot up the N7700.




## Checking System Status

After making connections on the N7700 and powering up, check whether the system status is normal or has trouble by observing indicators on the front panel and hard disk trays.

### System Status Normal

The system status is normal if:

1. The WAN and LAN LEDs glow green (assuming both are connected).
2. The Power LED on the Front Panel glows blue.
3. The HDD Power LED on each HDD tray glows blue (assuming all disks are installed).
4. The default IP address of the WAN port is 192.168.1.100 displayed on LCD.

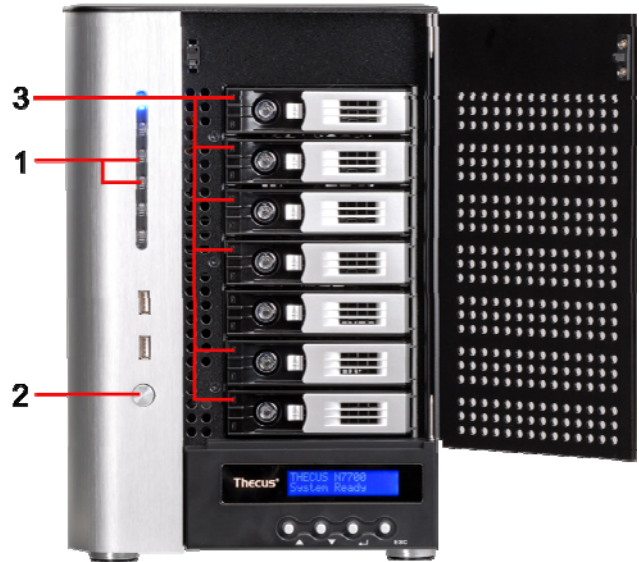

### System Trouble

The system has trouble if:

1. System Busy LED glows red.

If the system has trouble, please refer to [Chapter 7: Troubleshooting](#).



## WARNING

There are no user serviceable parts inside the N7700. Please contact your

## Chapter 3: First Time Setup


### Overview

Once the hardware is installed, physically connected to your network, and powered on, you can configure the N7700 so that it is accessible to your network users. There are two ways to set up your N7700: using the **Thecus Setup Wizard** or the **LCD display**. Follow the steps below for initial software setup.

### Thecus Setup Wizard

The handy Thecus Setup Wizard makes configuring N7700 a snap. To configure the N7700 using the Setup Wizard, perform the following steps:


1. Insert the installation CD into your CD-ROM drive (the host PC must be connected to the network).
2. The Setup Wizard should launch automatically. If not, please browse your CD-ROM drive and double click on **Setup.exe**.

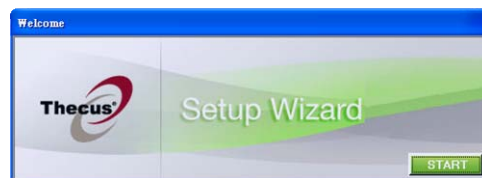

#### NOTE

For MAC OS X users, double click on Thecus Setup Wizard .dmg file.

3. The Setup Wizard will start and automatically detect all Thecus storage devices on your network. If none are found, please check your connection and refer to [Chapter 7: Troubleshooting](#) for assistance.

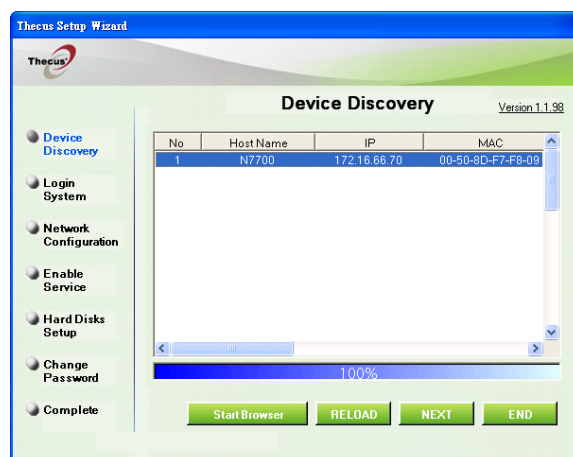


4. Select the N7700 that you like to configure.
5. Login with the administrator account and password. The default account and password are both "admin".



The screenshot shows the 'Login System' screen of the Thecus Setup Wizard. On the left, a vertical list of steps includes 'Device Discovery', 'Login System' (highlighted), 'Network Configuration', 'Enable Service', 'Hard Disks Setup', 'Change Password', and 'Complete'. The main area contains a green box with 'Admin ID:' and 'Password:' labels, each followed by a text input field. The 'Admin ID' field contains the text 'admin'. Below the green box are three buttons: 'PREV', 'NEXT', and 'END'. The version number 'Version 1.2.0' is in the top right corner.

6. Name your N7700 and configure the network IP address. If your switch or router is configured as a DHCP Server, configuring the N7700 to automatically obtain an IP address is recommended. You may also use a static IP address and enter the DNS Server address manually.

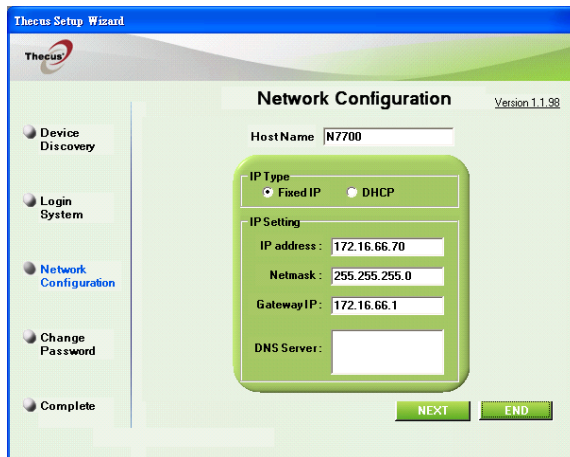

The screenshot shows the 'Network Configuration' screen of the Thecus Setup Wizard. The left sidebar shows 'Network Configuration' as the active step. The main area has a 'Host Name' field with 'N7700' entered. Below it is a green box containing 'IP Type' with radio buttons for 'Fixed IP' (selected) and 'DHCP'. Under 'IP Setting', there are fields for 'IP address' (172.16.66.70), 'Netmask' (255.255.255.0), 'Gateway IP' (172.16.66.1), and 'DNS Server'. At the bottom right of the green box are 'NEXT' and 'END' buttons. The version number 'Version 1.1.98' is in the top right corner.


7. Change the default administrator password.



The screenshot shows the 'Change Password' screen of the Thecus Setup Wizard. The left sidebar shows 'Change Password' as the active step. The main area contains a green box with 'New Password:' and 'Confirm Again:' labels, each followed by a text input field. Below the green box are three buttons: 'PREV', 'APPLY', and 'END'. The version number 'Version 1.2.0' is in the top right corner.

8. Finished! Access the N7700 Web Administrator Interface by pressing the **Start Browser** button. You can also configure another N7700 at this point by clicking the **Setup Other Device** button. Press **Exit** to exit the wizard.



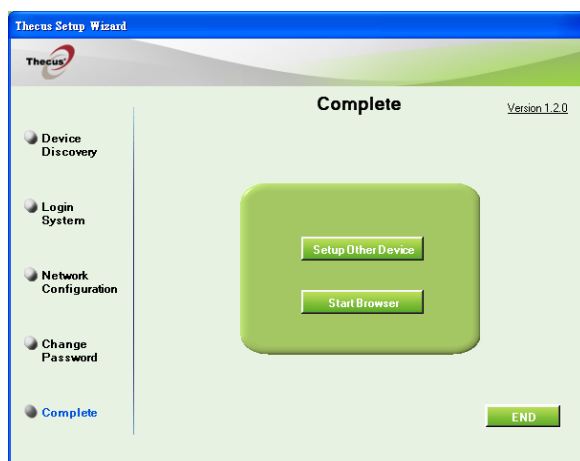

## NOTE

The Thecus Setup Wizard is designed for installation on systems running Windows XP/2000 or Mac OSX or later. Users with other operating systems will need to install the Thecus Setup Wizard on a host machine with one of these operating systems before using the unit.

## LCD Operation

The N7700 is equipped with an LCD on the front for easy status display and setup. There are four buttons on the front panel to control the LCD functions.

### LCD Controls

Use the **Up** (▲), **Down** (▼), **Enter** (↵) and **Escape** (ESC) keys to select various configuration settings and menu options for N7700 configuration.

The following table illustrates the keys on the front control panel:

LCD Controls		
Icon	Function	Description
▲	Up Button	Select the previous configuration settings option.
▼	Down Button	USB copy confirmation display.
↵	Enter	Enter the selected menu option, sub-menu, or parameter setting.
ESC	Escape	Escape and return to the previous menu.

There are two modes of operation for the LCD: **Display Mode** and **Management Mode**.

### Display Mode

During normal operation, the LCD will be in **Display Mode**.

Display Mode	
Item	Description
Host Name	Current host name of the system.
WAN	Current WAN IP setting.
LAN	Current LAN IP setting.
Link Aggregation	Current Link Aggregation status
System Fan1	Current system fan1 status.
System Fan2	Current system fan2 status.
CPU Fan	Current CPU fan status



2009/05/22 12:00	Current system time.
Disk Info	Current status of disk slot has been installed
RAID	Current RAID status.

The N7700 will rotate these messages every one-two seconds on the LCD display.

### USB Copy

The USB Copy function enables you to copy files stored on USB devices such as USB disks and digital cameras to the N7700 by press button. To use USB copy, follow the steps below:

1. Plug your USB device into an available USB port on the Front end.
2. In **Display Mode**, press the **Down Button (▼)**.
3. The LCD will display "**USB Copy?**"
4. Press **Enter (↵)** and the N7700 will start copying USB disks connected to the front USB port.
5. All of data will be copied into system folder named "USB copy".

### Management Mode

During setup and configuration, the LCD will be in **Management Mode**.

To enter into Management Mode, press **Enter (↵)** and an "*Enter Password*" prompt will show on the LCD.

At this time, the administrator has to enter the correct LCD password. System will check whether the correct LCD password has been entered. The default LCD password is " 0000 ". If correct password is entered, you will enter into the **Management Mode** menu.

Management Mode	
Item	Description
WAN Setting	IP address and netmask of your WAN ports.
LAN Setting	IP address and netmask of your LAN ports.
Link Agg. Setting	Select <b>Load Balance</b> , <b>802.3ad</b> or <b>Failover</b> .
Change Admin Passwd	Change administrator's password for LCD operation.
Reset to Default	Reset system to factory defaults.
Exit	Exit <b>Management Mode</b> and return to <b>Display Mode</b> .

#### NOTE

You can also change your LCD password using the Web Administration Interface by navigating to **System Management >Utility> Administrator Password**. For more on the Web Administration Interface, see **Chapter 4: System Management**.

### Typical Setup Procedure

From the Web Administration Interface, you can begin to setup your N7700 for use on your network. Setting up the N7700 typically follows the five steps outlined below.

For more on how to use the Web Administration Interface, see **Chapter 4: Web Administration Interface**.

## Step 1: Network Setup

From the Web Administration Interface, you can configure the network settings of the N7700 for your network. You can access the **Network** menu from the menu bar. For details on how to configure your network settings, refer to **Chapter 4: [System Network](#)**.

## Step 2: RAID Creation

Next, administrators can configure their preferred RAID setting and build their RAID volume. You can access RAID settings from the menu bar of the Web Administration Interface by navigating to **Storage Management > RAID Configuration**.

For more information on configuring RAID, see **Chapter 4: System Management > [RAID Configuration](#)**.

Don't know which RAID level to use? Find out more about the different RAID levels from **[Appendix C: RAID Basics](#)**.

## Step 3: Create Local Users or Setup Authentication

Once the RAID is ready, you can begin to create local users for the N7700, or choose to setup authentication protocols such as Active Directory (AD).

For more on managing users, go to **Chapter 4: [User and Group Authentication](#)**.

For more information on configuring Active Directory, see **Chapter 4: User and Group Authentication > [ADS/NT Support](#)**.

For information about the benefits of Active Directory, see **[Appendix D: Active Directory Basics](#)**.

## Step 4: Create Folders and Set Up ACLs

Once users are introduced into your network, you can begin to create various folders on the N7700 and control user access to each using Folder Access Control Lists.

More information on managing folders, see **Chapter 4: Storage Management > [Share Folder](#)**.

To find out about configuring Folder Access Control Lists, see **Chapter 4: Storage Management > Share Folder > [Folder Access Control List \(ACL\)](#)**.

## Step 5: Start Services

Finally, you can start to setup the different services of the N7700 for the users on your network. You can find out more about each of these services by clicking below:

**[SMB/CIFS](#)**

**[Apple File Protocol \(AFP\)](#)**

**[Network File System \(NFS\)](#)**

**[File Transfer Protocol \(FTP\)](#)**

**[iTunes Server](#)**

**[Media Server](#)**

**Printer Server**

**Photo Server**

## Chapter 4: System Administration


### Overview

The N7700 provides an easily accessible **Web Administration Interface**. With it, you can configure and monitor the N7700 anywhere on the network.

### Web Administration Interface

Make sure your network is connected to the Internet. To access the N7700 **Web Administration Interface**:

1. Type the N7700's IP address into your browser. (Default IP address is `http://192.168.1.100`)

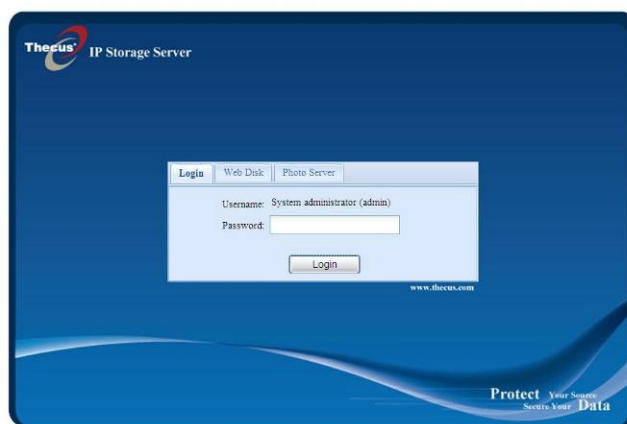

b

#### NOTE

Your computer's network IP address must be on the same subnet as the N7700. If the N7700 has default IP address of 192.168.1.100, your managing PC IP address must be 192.168.1.x, where x is a number between 1 and 254, but not 100.

2. Login to the system using the administrator user name and password. The factory defaults are:

**User Name:** admin  
**Password:** admin

※ If you changed your password in the setup wizard, use the new password.

Once you are logged in as an administrator, you will see the **Web Administration Interface**. From here, you can configure and monitor virtually every aspect of the N7700 from anywhere on the network.

### Menu Bar

The **Menu Bar** is where you will find all of the information screens and system settings of the N7700. The various settings are placed in the following groups on the menu bar:



Menu Bar	
Item	Description
System Information	Current system status of the N7700.
System Management	Various N7700 system settings and information.
System Network	Information and settings for network connections, as well as various services of the N7700.
Storage	Information and settings for storage devices installed into the N7700.
User and Group Authentication	Allows configuration of users and groups.
Application Server	Printer Server and iTunes Server to set up of the N7700.
Module Management	System and user Module to install of the N7700.
Backup	Category of Backup Features set up of the N7700.





Moving your cursor over any of these items will display the dropdown menu selections for each group.



In the following sections, you will find detailed explanations of each function, and how to configure your N7700.

## Message Bar

You can get information about system status quickly by moving mouse over.



Message Bar		
Item	Status	Description
	RAID Information.	Display the status of created RAID volume. Click to go to RAID information page as short cut.
	Disks Information.	Display the status of disks installed in the system. Click to go to Disk information page as short cut.
	FAN.	Display system FAN Status. Click to go to System Status page as short cut.
	UPS.	Display UPS device status. Click to go to UPS Setting page as short cut.

	Temperature.	Green: Systematic temperature is normal. <b>Red:</b> Systematic temperature is unusual. Click to go to System Status page as short cut.
	Network.	Green: Connection to network is normal. <b>Red:</b> abnormal connection to the network

## Logout



Click to logout Web Administration Interface.

## Language Selection

The N7700 supports multiple languages, including:

- English
- Japanese
- Traditional Chinese
- Simplified Chinese
- French
- German
- Italian
- Korean
- Spanish
- Russia
- Polish

On the menu bar, click **Language** and the **selection** list appears. This user interface will switch to selected language for the N7700.




## System Information

Information provides viewing on current Product info, System Status, Service Status and Logs.

The menu bar allows you to see various aspects of the N7700. From here, you can discover the status of the N7700, and also other details.

## Product Information


Once you login, you will first see the basic **Product Information** screen providing **Manufacturer**, **Product No.**, **Firmware Version**, and **System Up Time** information.

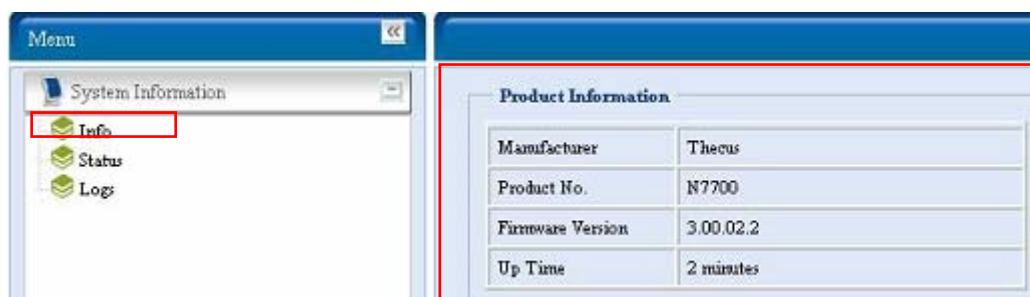

Product Information	
Item	Description
Manufacturer	Displays the name of the system manufacturer.
Product No.	Shows the model number of the system.
Firmware version	Shows the current firmware version.
Up time	Displays the total run time of the system.

## System/Service Status

From the **Status** menu, choose the **System** item, **System Status** and **Service Status** screens appear. These screens provide basic system and service status information.


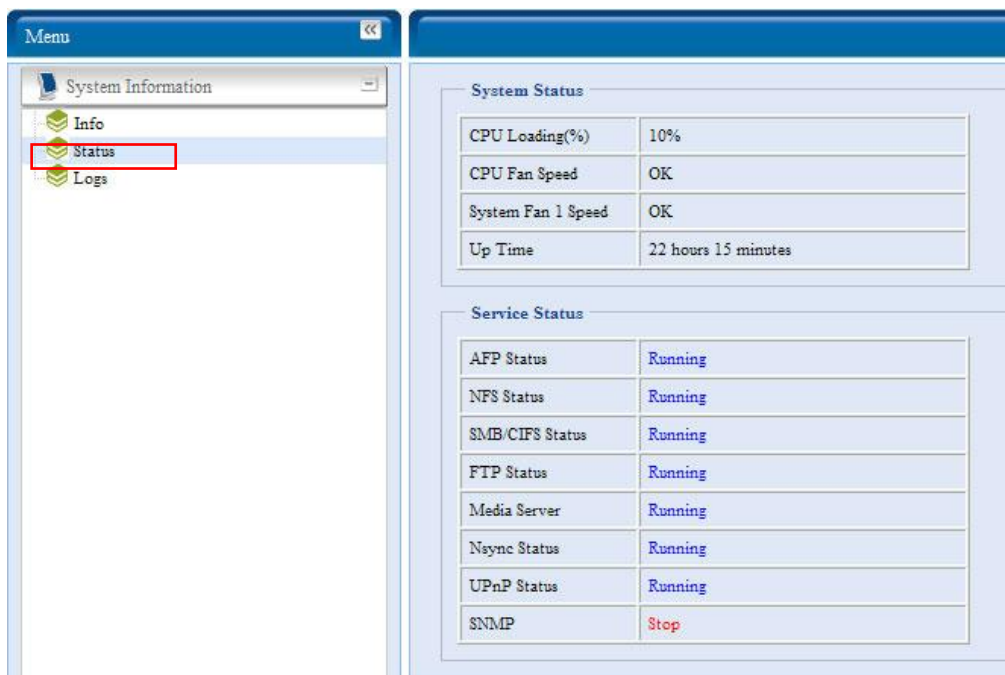


System Status	
Item	Description
CPU Loading (%)	Displays current CPU workload of the N7700.
CPU Fan Speed	Displays current CPU fan status.
System Fan Speed	Displays the current status of the system fan.
Up Time	Shows how long the system has been up and running.


Service Status	
Item	Description
AFP Status	The status of the Apple Filing Protocol server.
NFS Status	The status of the Network File Service Server.
SMB/CIFS Status	The status of the SMB/CIFS server.
FTP Status	The status of the FTP server.
Media Server	The status of the Media Server
Nsync Status	The status of the Nsync server.
UPnP Status	The status of the UPnP service.
SNMP	The status of the SNMP service.

## Logs

From the **System Information** menu, choose the **Logs** item and the **System Logs** screen appears. This screen shows a history of system usage and important events such as disk status, network information, and system booting. See the following table for a detailed description of each item:

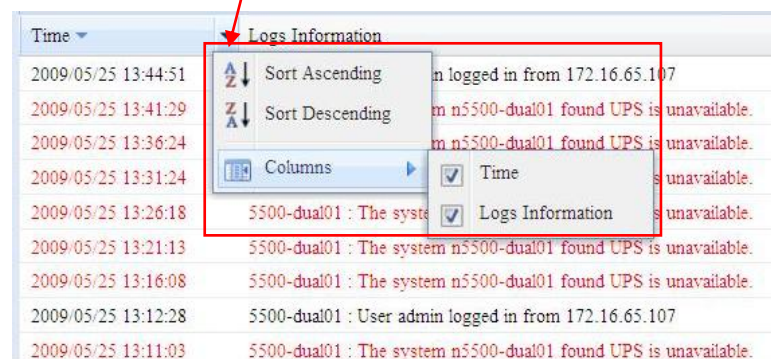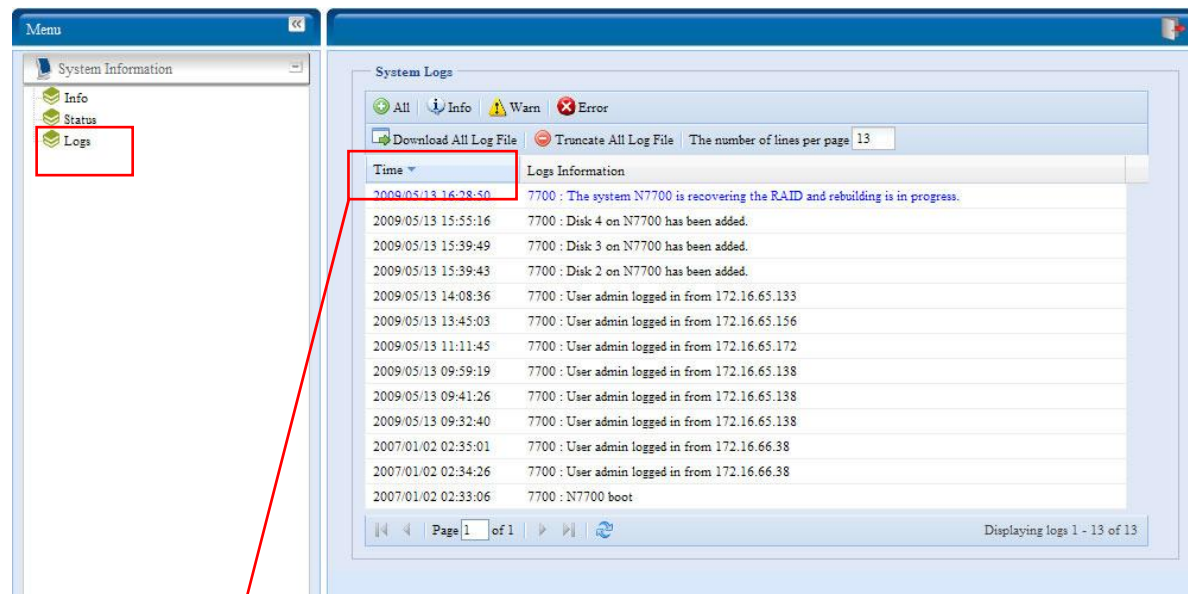

See the following table for a detailed description of each item:

System Logs	
Item	Description
All	Provides all log information including system messages, warning messages and error messages.
INFO	Records information about system messages.
WARN	Shows only warning messages.
ERROR	Shows only error messages.
Download All Log File	Export all logs to an external file.
Truncate All Log File	Clear all log files.
The number of lines per page <input type="text"/>	Specify desired number of lines to display per page.
Sort Ascending	Shows logs by date in ascending order.
Sort Descending	Shows logs by date in descending order.
<< < > >>	Use the forward ( > >>  ) and backward (  << < ) buttons to browse the log pages.
	Re-loading logs.




## System Management

The **System Management** menu gives you a wealth of settings that you can use to configure your N7700's system administration functions. You can set up system time, system notifications, and even upgrade firmware from this menu.

### Time: Setting system time

From the **time** menu, choose the **Time** item and the **Time** screen appears. Set the desired **Date**, **Time**, and **Time Zone**. You can also elect to synchronize the system time on the N7700 with an **NTP (Network Time Protocol) Server**.

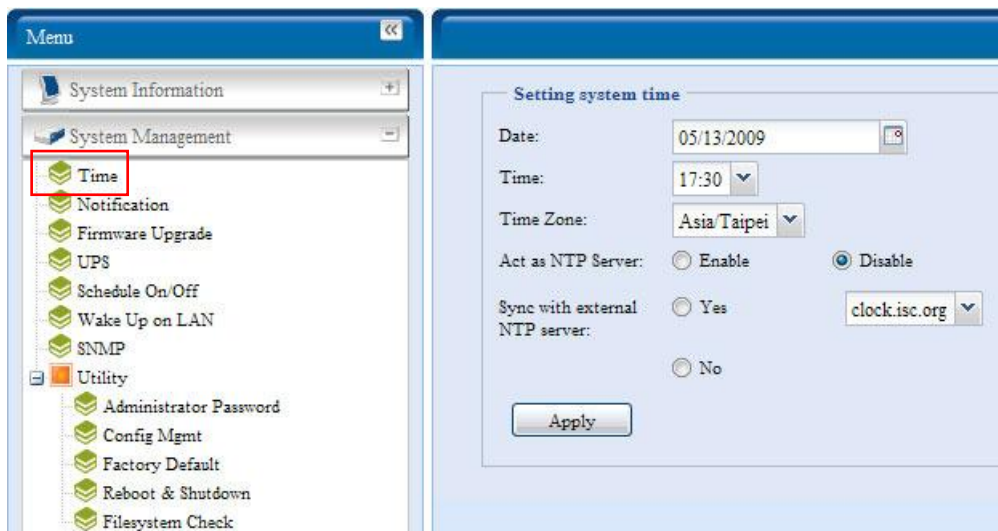

See the following table for a detailed description of each item:

Time	
Item	Description
Date	Sets the system date.
Time	Sets the system time.
Time Zone	Sets the system time zone.
Act as NTP Server	Select <b>Enable</b> to synchronize with the NTP server. Select <b>Disable</b> to close the NTP server synchronization.
Sync with external NTP Server	Select <b>YES</b> to allow the N7700 to synchronize with an NTP server of your choice. Press <b>Apply</b> to change.

#### WARNING

If an NTP server is selected, please make sure your N7700's network has been setup to access the NTP server.

### Notification configuration

From the menu, choose the **Notification** item, and the **Notification Configuration** screen appears. This screen lets you have the N7700 notify you in case of any system malfunction. Press **Apply** to confirm all settings. See following table for a detailed description of each item.

The screenshot shows a web-based configuration interface. On the left, a 'Menu' sidebar lists various system management options, with 'Notification' selected and highlighted by a red box. The main content area is titled 'Notification Configuration'. It includes two radio buttons for 'Beep Notification' (set to 'Enable') and 'Email Notification' (set to 'Disable'). Below these are input fields for 'SMTP Server', 'Port', 'Auth Type' (a dropdown menu currently showing 'off'), 'SMTP Account ID', 'Account Password', 'E-Mail From', and four 'Receivers' E-Mail Address' fields. At the bottom of the configuration area are two buttons: 'E-Mail Test' and 'Apply'.


Notification Configuration	
Item	Description
Beep Notification	Enable or disable the system beeper that beeps when a problem occurs.
Email Notification	Enable or disable email notifications of system problems.
SMTP Server	Specifies the hostname/IP address of the SMTP server.
Port	Specifies the port to send outgoing notification emails.
Auth Type	Select the SMTP Server account authentication type.
SMTP Account ID	Set the SMTP Server Email account ID.
Account Password	Enter a new password.
E-mail From	Set email address to send email.
Receiver's E-mail Address (1,2,3,4)	Add one or more recipient's email addresses to receive email notifications.

## NOTE


Consult with your mail server administrator for email server information.

## Firmware Upgrade

From the menu, choose the **Firmware Upgrade** item and the **Firmware Upgrade** screen appears.

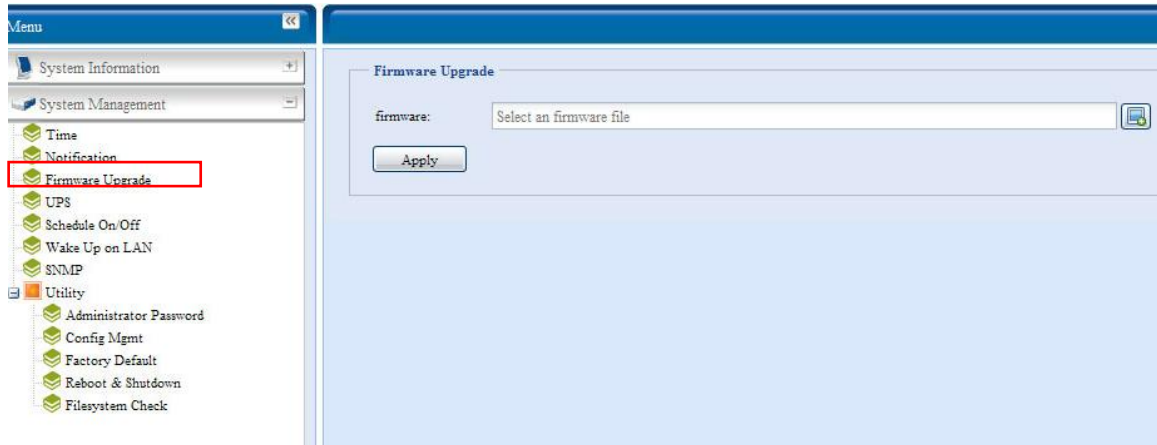

Follow the steps below to upgrade your firmware:

1. Use the **Browse** button  to find the firmware file.
2. Press **Apply**.
3. The beeper beeps and the Busy LED blinks until the upgrade is complete.

#### NOTE

- The beeper only beeps if it is enabled in the System Notification menu.
- Check Thecus website for the latest firmware release and release notes.
- Downgrading firmware is not permitted.


#### WARNING

Do not turn off the system during the firmware upgrade process.  
This will lead to a catastrophic result that may render the system inoperable.

## UPS Setting

The N7700 can also support various uninterruptible power supply units via either "Serial" or "USB" interface, providing extra data security and accessibility in the case of a power failure.

From the **Status** menu, choose the **UPS** item and the **UPS Setting** screen appears. Make any changes you wish, and press **Apply** to confirm changes.

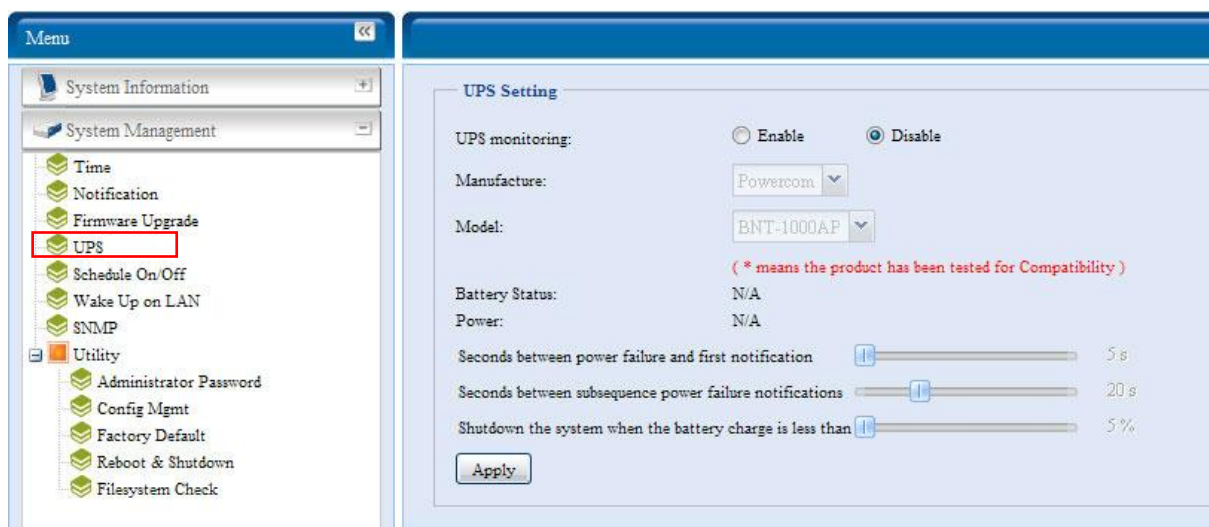

See the following table for a detailed description of each item.

UPS Setting	
Item	Description
UPS Monitoring	Enable or disable UPS monitoring.
Manufacturer	Choose the UPS manufacturer from the dropdowns.
Model	Choose the UPS model number from the dropdowns.
Battery Status	Current status of the UPS battery
Power	Current status of the power being supplied to the UPS
Seconds between power failure and first notification	Delay between power failure and first notification in seconds.
Seconds between subsequent power failure notifications	Delay between subsequent notifications in seconds.
Shutdown the system when the battery charge is less than	Amount of UPS battery remaining before system should auto-shutdown.
Apply	Press <b>Apply</b> to save your changes.

For a list of supported UPS units, see [Appendix E: UPS Compatibility List](#).

## Schedule Power On/Off

Using the N7700's System Management, you can save energy and money by scheduling the N7700 to turn itself on and off during certain times of the day.

From the menu, choose the **Schedule Power On/Off** item and the **Schedule Power On/Off** screen appears.

To designate a schedule for the N7700 to turn on and off, first enable the feature by checking the **Enable Schedule Power On/Off** checkbox.

Then, simply choose an on and off time for each day of the week that you would like to designate a schedule by using the various dropdowns.

Finally, click **Apply** to save your changes.

The screenshot shows the N7700 System Management interface. On the left is a 'Menu' sidebar with a tree view containing 'System Information', 'System Management', 'Time', 'Notification', 'Firmware Upgrade', 'UPS', 'Schedule On/Off' (highlighted with a red box), 'Wake Up on LAN', 'SNMP', 'Utility', 'Administrator Password', 'Config Mgmt', 'Factory Default', 'Reboot & Shutdown', and 'Filesystem Check'. The main panel is titled 'Schedule Power On/Off' and features a checkbox 'Enable Schedule Power On/Off' which is checked. Below this is a table for configuring schedules for each day of the week. Each day row has two 'Action' dropdown menus (both set to 'None') and two 'Time' dropdown menus (both set to '00:00'). At the bottom of the main panel is an 'Apply' button.

	Action	Time	Action	Time
Sunday:	None	00:00	None	00:00
Monday:	None	00:00	None	00:00
Tuesday:	None	00:00	None	00:00
Wednesday:	None	00:00	None	00:00
Thursday:	None	00:00	None	00:00
Friday:	None	00:00	None	00:00
Saturday:	None	00:00	None	00:00

**Example - Monday: On: 8:00; Off: 16:00**

System will turn on at 8:00 AM on Monday, and off at 16:00 on Monday. System will turn on for the rest of the week.

If you choose an on time, but do not assign an off time, the system will turn on and remain on until a scheduled off time is reached, or if the unit is shutdown manually.

**Example - Monday: On: 8:00**

System will turn on at 8:00 AM on Monday, and will not shut down unless powered down manually.


You may also choose two on times or two off times on a particular day, and the system will act accordingly.

**Example - Monday: Off: 8:00; Off: 16:00**

System will turn off at 8:00 AM on Monday. System will turn off at 16:00 PM on Monday, if it was on. If the system was already off at 16:00 PM on Monday, system will stay off.

**Wake-Up On LAN (WOL)**

The N7700 has the ability to be awoken from sleep mode via WAN port.

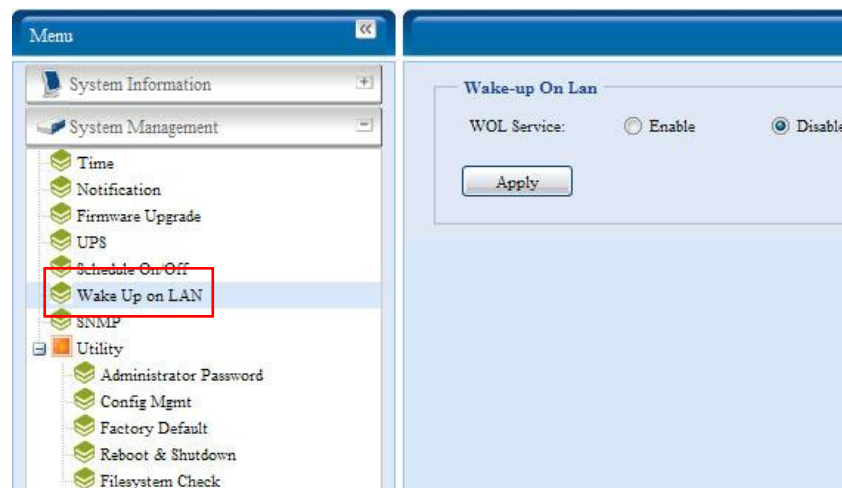


From the menu, choose the **WOL** item, and the **Wake-up On LAN** screen appears. From here, you can **Enable** or **Disable**.

Wake-up On LAN Configuration	
Item	Description
WOL Service	<b>Enable</b> or <b>Disable</b> WOL service
Apply	Click <b>Apply</b> to save changes.

**SNMP Support**

From the menu, choose the **SNMP** item and the **SNMP Support** screen appears. You could enable the SNMP function and filled in the related information in each fields. With the SNMP management software could get system basic information.

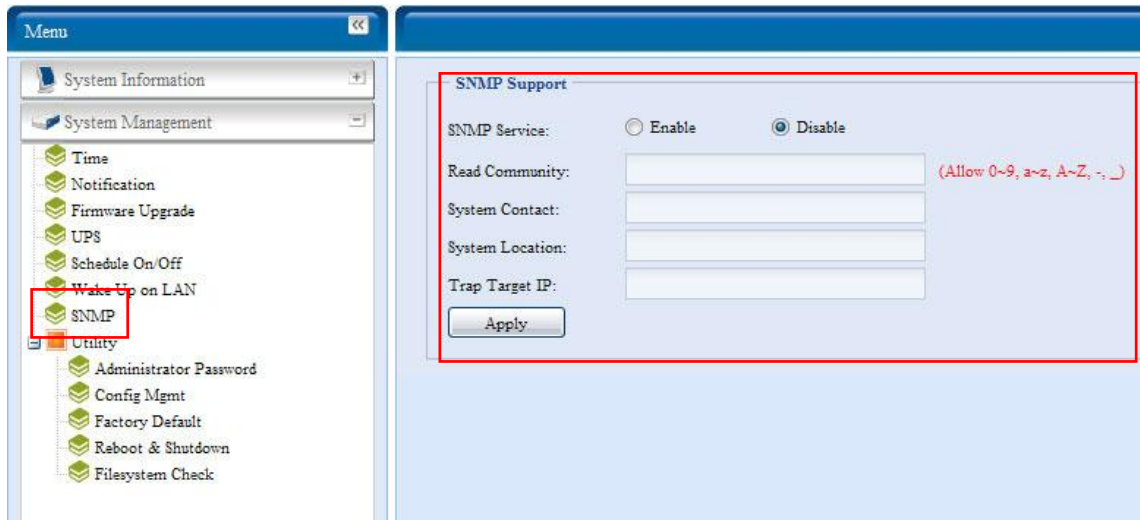


From the menu, choose the **SNMP** item, and the **SNMP Support** screen appears. From here, you can **Enable** or **Disable**.

## Utility

### · Administrator password

From the menu, choose the **Administrator Password** item and the **Change Administrator Password** screen appears. Enter a new password in the **New Password** box and confirm your new password in the **Confirm Password** box. Press **Apply** to confirm password changes.

There is also **password** for enter **LCD** setting you could setup here. Enter a new password in the **New Password** box and confirm your new password in the **Confirm Password** box. Press **Apply** to confirm password changes.

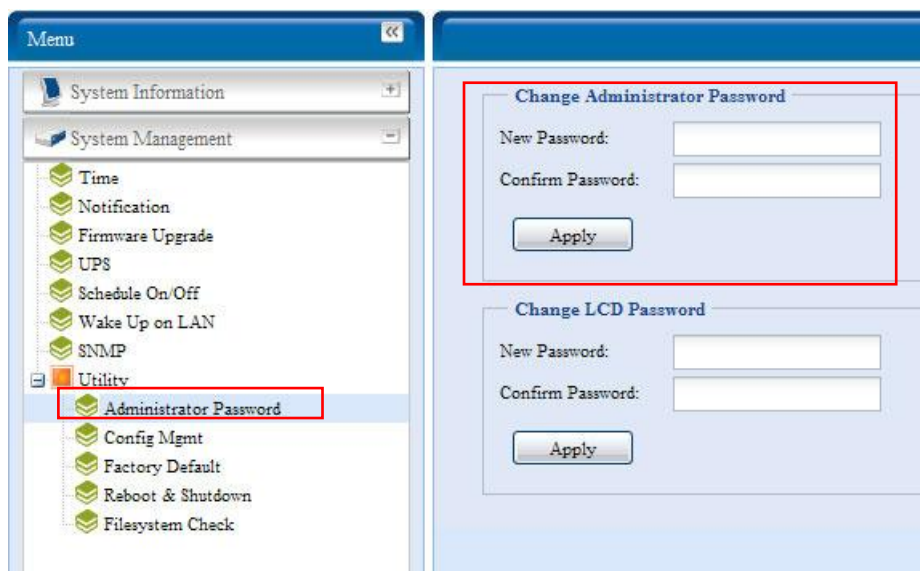


See the following table for a detailed description of each item.

Change Administrator and LCD Entry Password	
Item	Description
New Password	Type in a new administrator password.

Confirm Password	Type the new password again to confirm.
Apply	Press this to save your changes.

#### · Config Mgmt

From the menu, choose the **Config Mgmt** item and the **System Configuration Download/Upload** screen appears. From here, you can download or upload stored system configurations.

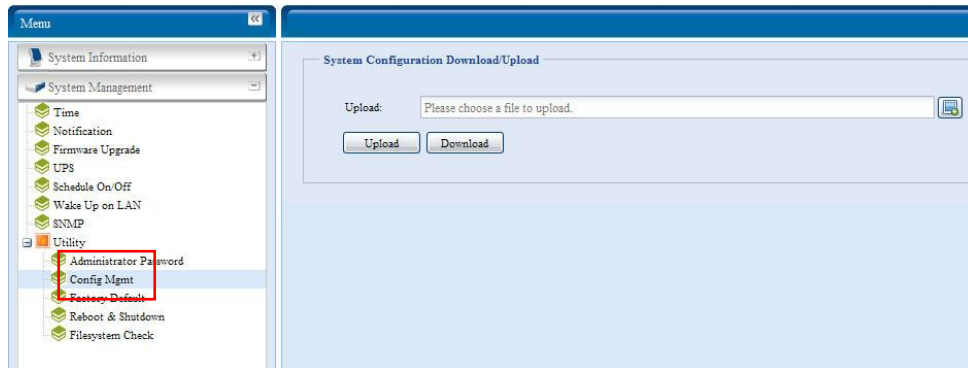

See the following table for a detailed description of each item.


System Configuration Download/Upload	
Item	Description
Download	Save and export the current system configuration.
Upload	Import a saved configuration file to overwrite current system configuration.

#### NOTE

Backing up your system configuration is a great way to ensure that you can revert to a working configuration when you are experimenting with new system settings. The system configuration you have backup can be only restore in same firmware version. And the backup details have excluded user/group accounts.

#### · Factory default

From the menu, choose the **Factory Default** item and the **Reset to Factory Default** screen appears. Press **Apply** to reset the N7700 to factory default settings.

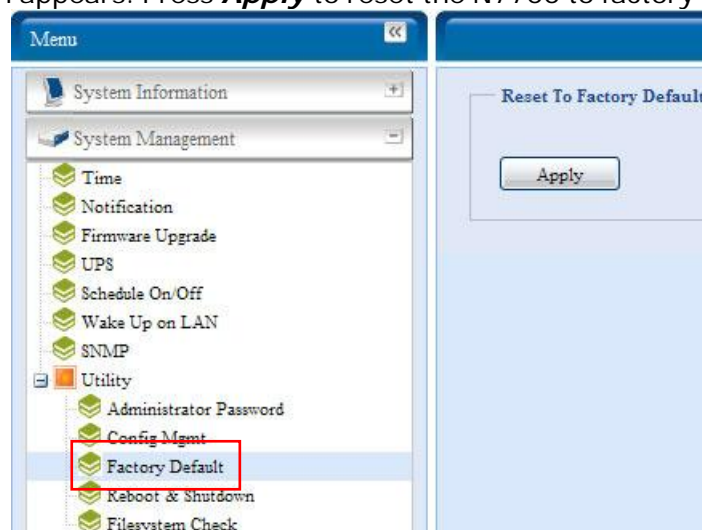


#### WARNING

Resetting to factory defaults will not erase the data stored in the hard disks, but WILL revert all the settings to the factory default values.




### · Reboot & Shutdown

From the menu, choose **Reboot & Shutdown** item, and the **Shutdown/Reboot System** screen appears. Press **Reboot** to restart the system or **Shutdown** to turn the system off.

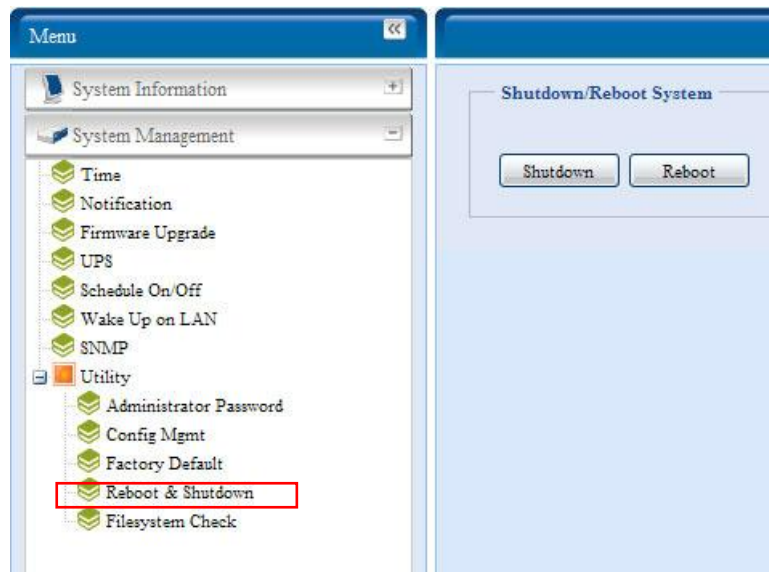


### · File System check

The File System Check allows you to perform a check on the integrity of your disks' file system. Under the menu, click **File system Check** and the **File System Check** prompt appears.

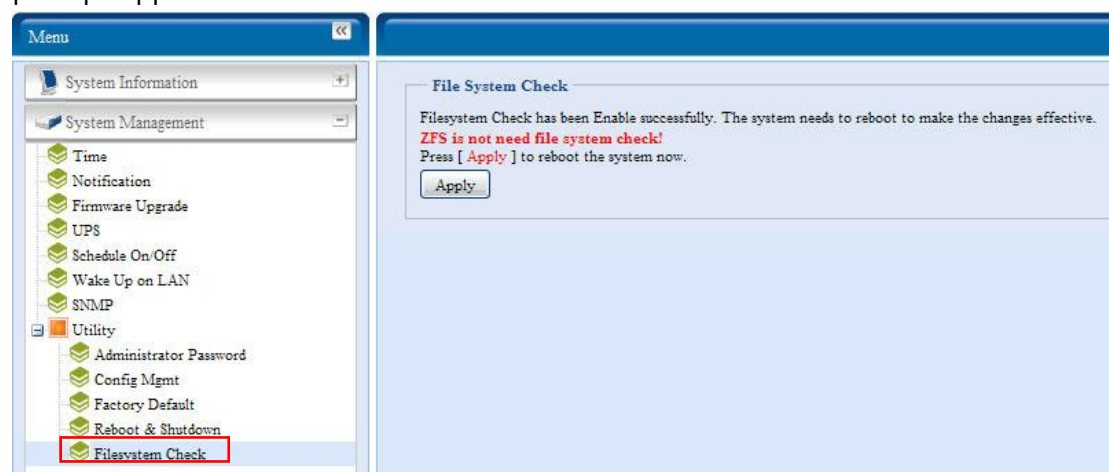


To perform a file system check, click **Apply**.

Once clicked, the following prompt will appear:

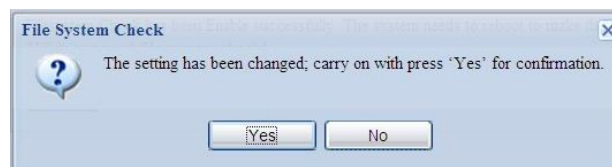


Click **Yes** to reboot the system.




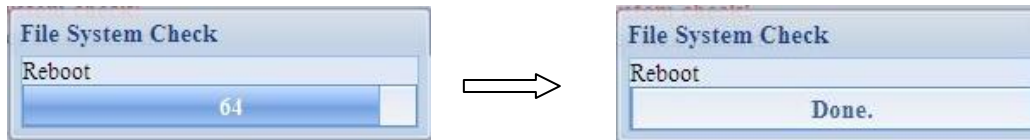


Once the system has rebooted, you will be returned to the **File System Check** prompt. There you will see the available RAID volumes to run the file system check on except ZFS volume, ZFS has no need to perform file system check. Check the desired RAID volumes and click **Next** to proceed with the file system check. Click **Reboot** to reboot without running the check.

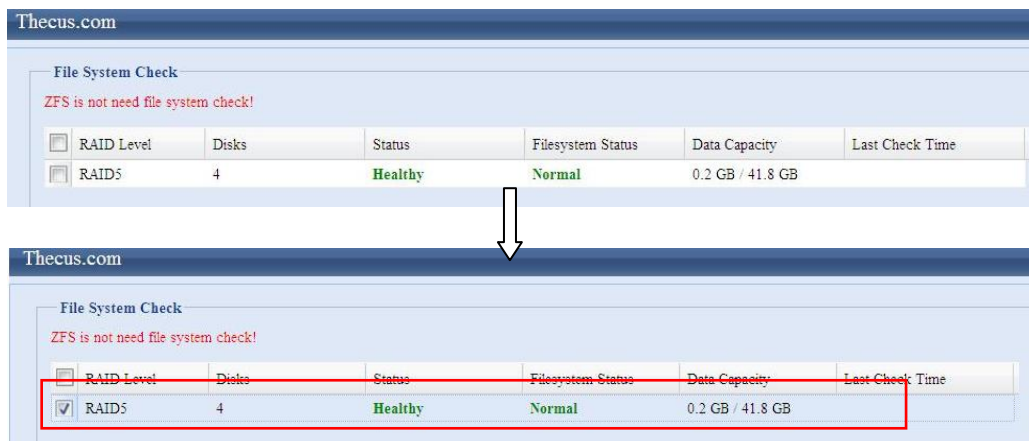

Once you click **Next**, you will see the following screen:

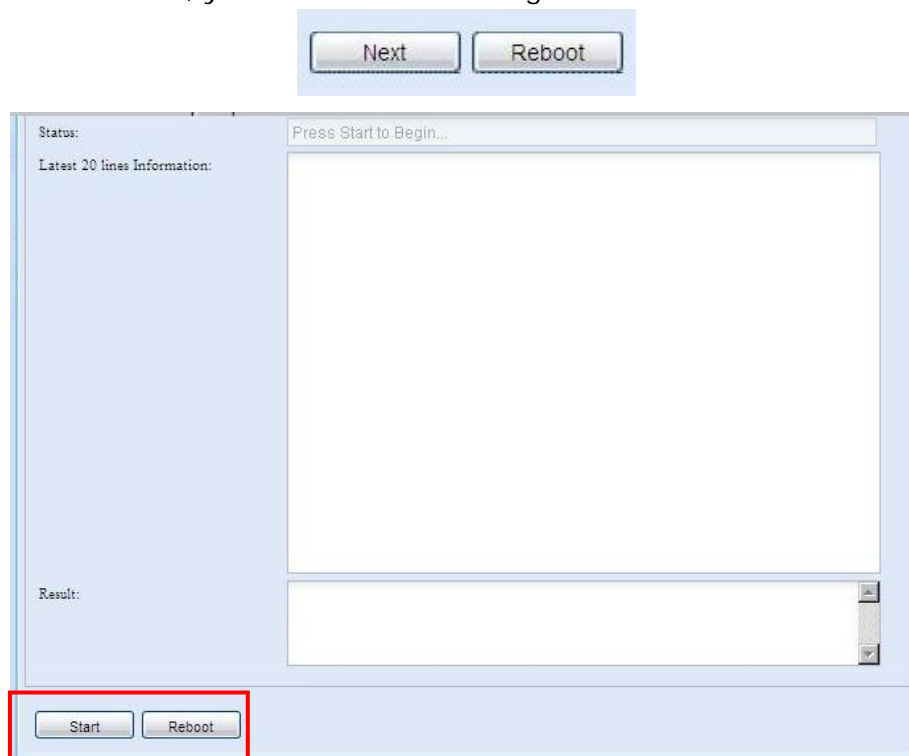

Click **Start** to begin the file system check. Click **Reboot** to reboot the system. When the file system check is run, the system will show 20 lines of information until it is complete. Once complete, the results will be shown at the bottom.

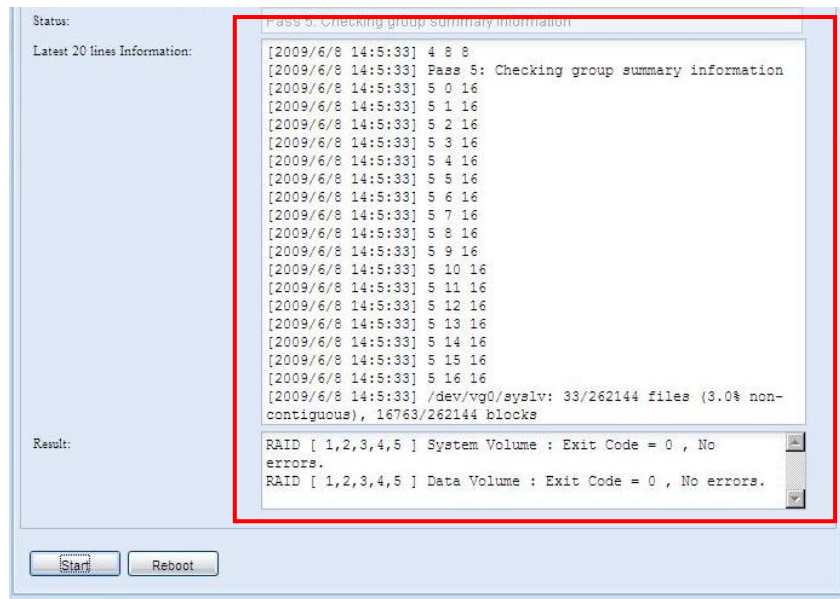

## NOTE

The system must be rebooted before the N7700 can function normally after file system check complete.

## System Network

Use the **System Network** menu to make network configuration settings as well as service support settings.

### WAN Configuration

From the **System Network** menu, choose **WAN**, and the **WAN Configuration** screen appears. This screen displays the network parameters of the WAN connection. You may change any of these items and press **Apply** to confirm your settings. See a description of each item in the following table:

WAN Configuration	
Item	Description
Host name	Host name that identifies the N7700 on the network.
Domain name	Specifies the domain name of the N7700.
WINS Server	To set a server name for NetBIOS computer.
MAC Address	MAC address of the network interface.
Jumbo Frame Support	Enable or disable Jumbo Frame Support of the WAN interface on your N7700.
IP Sharing Mode	When enabled, PCs connected to the LAN port will be able to access the WAN.
Link Aggregation	Specifies whether WAN and LAN ports will be aggregated and act as one port. <b>Load Balance:</b> Ethernet traffic will flow alternative between two Ethernet ports. <b>Failover:</b> When one port fails, the other one will take over. <b>802.3ad:</b> Linkage two Ethernet ports in parallel to increase throughput.
Set IP Address by: Static / Dynamic	You can choose a static IP or Dynamic IP, and input your network configuration.
IP	IP address of the WAN interface.
Netmask	Network mask, which is generally: 255.255.255.0
Gateway	Default Gateway IP address.
DNS Server	Domain Name Service (DNS) server IP address.

## NOTE

- Only use Jumbo Frame settings when operating in a Gigabit environment where all other clients have Jumbo Frame Setting enabled.
- Enabling DHCP automatically turns on UPnP— see the Service Support Screen.
- If you are only using the WAN port, we suggest that you disable IP Sharing Mode. This will result in higher throughput.
- A correct DNS setting is vital to networks services, such as SMTP and NTP.
- To use the Link Aggregation with “802.3ad selected” feature, please make sure the networking equipment on the other end of Ethernet cable also supports 802.3ad protocol.

## WARNING

Most Fast Ethernet (10/100) Switches/Routers do not support Jumbo Frame and you will not be able to connect to your N7700 after Jumbo Frame is turned on. If this happens, turn off the N7700. Then, insert USB disk with factory reset utility included and power on the N7700. Till the system power on complete then it will bring your system settings back to factory default.

## LAN

### LAN Configuration

The N7700 supports two Gigabit Ethernet ports for higher service availability. To configure these ports, choose **LAN** from the **System Network** menu, and the **LAN Configuration** screen appears. Press **Apply** to save your changes.

The screenshot shows the LAN Configuration interface. On the left, a 'Menu' sidebar lists 'System Information', 'System Management', and 'System Network'. Under 'System Network', 'LAN' is highlighted. The main panel contains two configuration sections. The 'LAN Configuration' section has fields for MAC Address (00:14:FD:11:C8:4D), Jumbo Frame Support (set to 'Disable'), IP (192.168.2.254), and Netmask (255.255.255.0). The 'DHCP Server Configuration' section has a 'DHCP Server' toggle set to 'Disable', a 'Start IP' of 192.168.2.1, an 'End IP' of 192.168.2.100, and 'DNS Server' addresses of 172.16.66.244 and 168.95.1.1. An 'Apply' button is located at the bottom of the configuration area.

LAN Configuration	
Item	Description
MAC Address	Displays the MAC address of the LAN interface.
Jumbo Frame Support	Enable or disable Jumbo Frame Support on the LAN interface.
IP	Specifies the IP address of the LAN interface.
Netmask	Specifies the Network Mask of the LAN interface.

## NOTE

Before enabling Jumbo Frame Support, please make sure your network equipment supports Jumbo Frame. If your equipment is incompatible, you might not be able to connect to your N7700.

### DHCP Server Configuration

A DHCP server can be configured to assign IP addresses to devices connected to the LAN port. To configure these ports, choose **LAN** from the **System Network** menu.

DHCP Configuration	
Item	Description
DHCP Server	Enable or disable the DHCP server to automatically assign IP address to PCs connected to the LAN interface.
Start IP	Specifies the starting IP address of the DHCP range.
End IP	Specifies the ending IP address of the DHCP range.
DNS Server	Displayed the DNS server IP address.

## NOTE


The IP Segment of WAN and LAN should not overlap.

## WARNING

The IP address of the LAN interface should not be in the range of the Start IP address and End IP address.

## Samba / CIFS

There are 4 options is currently allow Admin to Enable/Disable to operate N7700 associated with Samba / CIFS protocol. With the option changed, it will need to reboot system to activate.

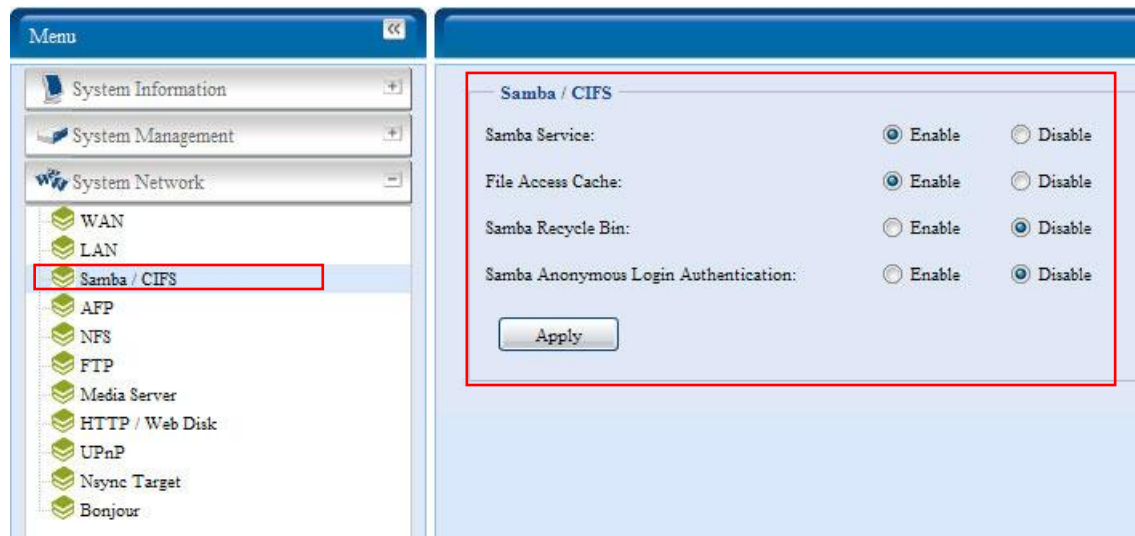

### Samba Service

Used for letting the operating system of UNIX series and SMB/CIFS of Microsoft Windows operating system (Server Message Block / Common Internet File System). Do the link in network protocol. Enable or Disable SMB/CIFS protocol for Windows, Apple, Unix drive mapping.

### File Access Cache

File Access Cache is default **Enable**. This option will help to increase the performance while single client access share folder in writing under SMB/CIFS protocol.

### Samba Recycle Bin

The N7700 is supported recycle bin via SMB/CIFS protocol. Simply enable it then all of deleted files/folders will reside in the ".recycle" folder with hidden attribution in each share.



In general, Windows has default to invisible all of hidden folders/files. So please enable this option to view ".recycle" folder.

### Samba Anonymous Login Authentication


To enable this option, no matter there is share folder has been created in public access. The user account and password is needed from system to access under SMB/CIFS protocol. On the other hand, no more anonymous login is allowed.

#### NOTE

- In some environments, due to security concerns, you may wish to disable SMB/CIFS as a precaution against computer viruses.

### AFP (Apple Network Setup)

From the **System Network** menu, choose the **AFP** item, and the **AFP Support** screen appears. This screen displays the configuration items for the Apple Filing Protocol. You can change any of these items and press **Apply** to confirm your settings.

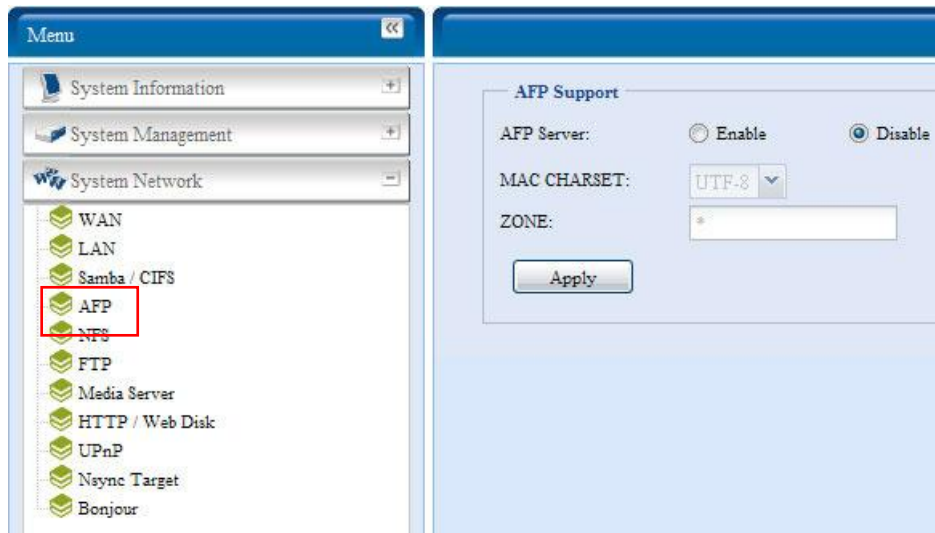


A description of each item follows:

Apple Network Configuration	
Item	Description
AFP Server	Enable or disable Apple File Service to use the N7700 with MAC OS-based systems.
Zone	Specifies Zone for Appletalk service. If your AppleTalk network uses extended networks and is assigned with multiple zones, assign a zone name to the N7700. If you do not want to assign a network zone, enter an asterisk (*) to use the default setting.

### NFS Setup

From the **System Network** menu, choose the **NFS** item, and the **NFS Support** screen appears. The N7700 can act as an NFS server, enabling users to download and upload files with the favorite NFS clients. Press **Apply** to confirm your settings.

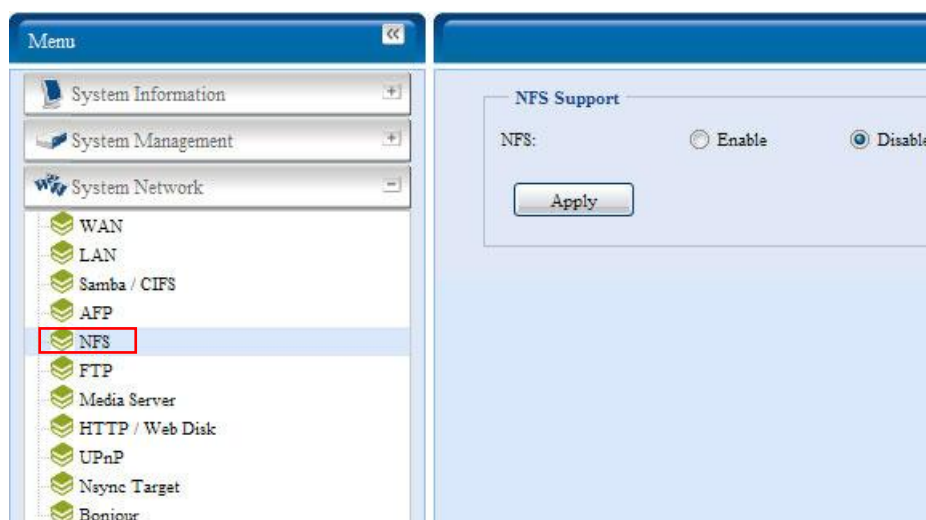


A description of each item follows:

NFS Server Setting	
Item	Description
NFS	<b>Enable</b> or <b>Disable</b> NFS support.
Apply	Click <b>Apply</b> to save your changes.

## FTP

N7700 can act as a FTP server, enabling users to download and upload files with their favorite FTP programs. From the **System Network** menu, choose the **FTP** item, and the **FTP** screen appears. You can change any of these items and press **Apply** to confirm your settings.

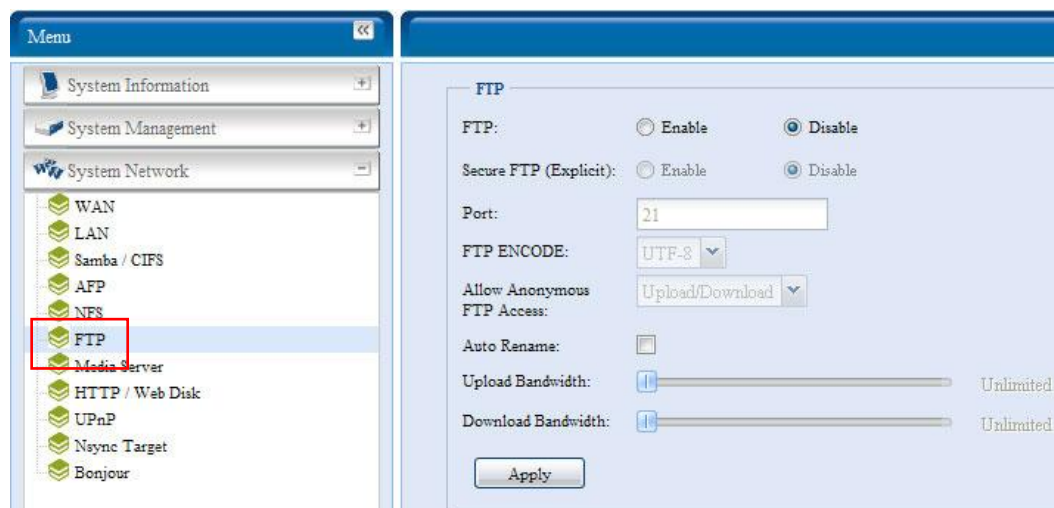

A description of each item follows:

FTP	
Item	Description
FTP	Enable FTP Service on the N7700.


Security FTP	Enable or disable Security FTP, be sure the client FTP software has also security FTP setting enabled.
Port	Specifies the port number of an incoming connection on a non-standard port.
FTP ENCODE	If your FTP client or operating system does not support Unicode (e.g. Windows® 95/98/ME or MAC OS9/8), select the same encoding as your OS here in order to properly view the files and directories on the server. Available options are BIG5, HZ, GB2312, GB18030, ISO, EUC-JP, SHIFT-JIS and UTF-8.
Allow Anonymous FTP Access	<b>Upload/Download:</b> Allow anonymous FTP users to upload or download files to/from public folders. <b>Download:</b> Allow anonymous FTP users to download files from public folders. <b>No access:</b> Block anonymous FTP user access.
Auto Rename	If checked, the system will automatically rename files that are uploaded with a duplicate file name. The renaming scheme is [filename].#, where # represents an integer.
Upload Bandwidth	You may set the maximum bandwidth allocated to file uploads. Selections include <b>Unlimited, 1, 2, 4, 8, 16</b> and <b>32 MB/s</b> .
Download Bandwidth	You may set the maximum bandwidth allocated to file downloads. Selections include <b>Unlimited, 1, 2, 4, 8, 16</b> and <b>32 MB/s</b> .

To access the share folder on the N7700, use the appropriate user login and password set up on the **Users** page. Access control to each share folder is set up on the **ACL** page (**Storage Management > Share Folder > ACL**).

## Media Server

With the built-in Media Server capability, the N7700 provides media streaming service to stand-alone networked home media adapters that support the UPnP AV protocol or are Digital Living Network Alliance (DLNA) standard compliant.


With the N7700's built-in media server capability, you can share digital media such as music, pictures, and movies with any compatible device throughout your entire home.

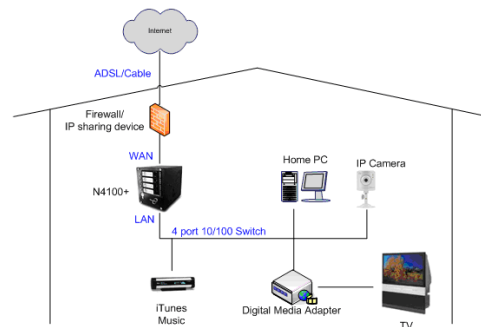

## Media Manager Settings

To configure the media server, under the **System Network** menu, click Media Server and the Media Manager Settings window will appear.



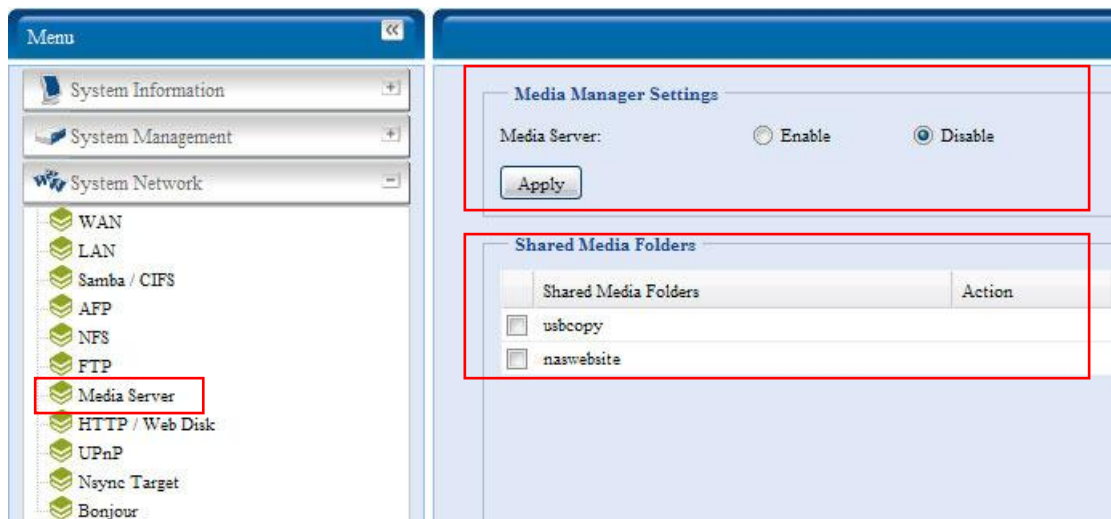

A description of each field follows:

Media Manager Settings	
Item	Description
Media Server	Enable or disable the Media Server service.
Shared Media Folders	Select the folder(s) that contains media files to be shared.
Rescan	Click the <b>Rescan</b> button to have the N7700 for new contents in the selected media folder.

## Share Media Folders

Once the Media Server software is installed, you can start adding folders that contain the media that you would like to share. To create a media share folder, follow the steps below:

1. Click on **System Network** > **Media Server** in the menu bar.
2. From the **Shared Media Folders** window, select the folder that contains your media files, and click its checkbox.
3. The contents in the folder will be scanned for the Media Server. The time required for scanning depends on the size of the folder.

## Connecting DMAs to the Media Server


Next, it's time to connect your Digital Media Adapter (DMA) to the media server:

1. Connect your DMA to your Media Server
  - a. Configure your DMA to use a Dynamic IP address. The IP address will be assigned by the router.
  - b. Some DMAs are wireless enabled. You can connect the DMA to a wireless router. For instructions on how to connect your DMA to a wireless router, please refer to your DMA's user manual.
2. Connect your DMA's video output to video input of your TV set.
3. Turn on the TV and change the video signal input to DMA.

4. Setup the DMA (These steps will be different if you use a different DMA)
  - a. From the Server List screen, select "**N7700: Media Server**" as the server.
  - b. Go to **My Media**
  - c. Click on the **Up/Down Arrow** buttons to select **Music Jukebox**, **Photo Albums**, or **Video Clips**
  - d. Start enjoying the contents stored in your N7700.

## HTTP/ Web Disk

From the **System Network** menu, choose the **HTTP/ Web Disk** item, and the **Web Disk (HTTP) Support** screen appears. This screen displays the service support parameters of the system. You can change any of these items and press **Apply** to confirm your settings.

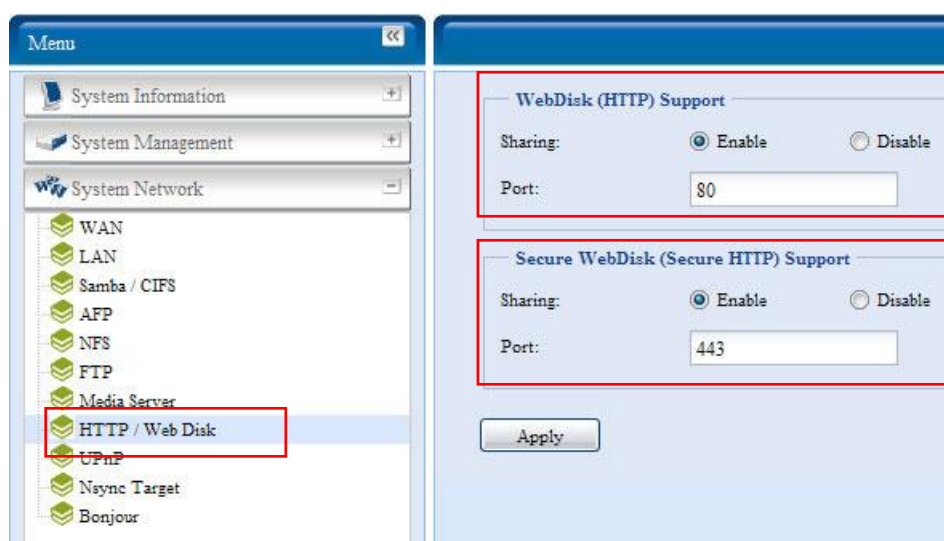

A description of each item follows:


Web Service	
Item	Description
HTTP (WebDisk) Support	Enable or disable WebDisk support. Enter the port number if this option is enabled. The port number is default 80.
HTTPs (Secure WebDisk) Support	Enable or disable secure WebDisk support. Enter the port if this option is enabled.

### NOTE

- Disable HTTP support and Enable Secure HTTP support to guarantee secure access.

## UPnP


This device supports UPnP Media server, which allows users to play media files with UPnP client (ex. DMA devices). Enable or disable Universal Plug and Play protocol. UPnP helps to find the IP address of the N7700.

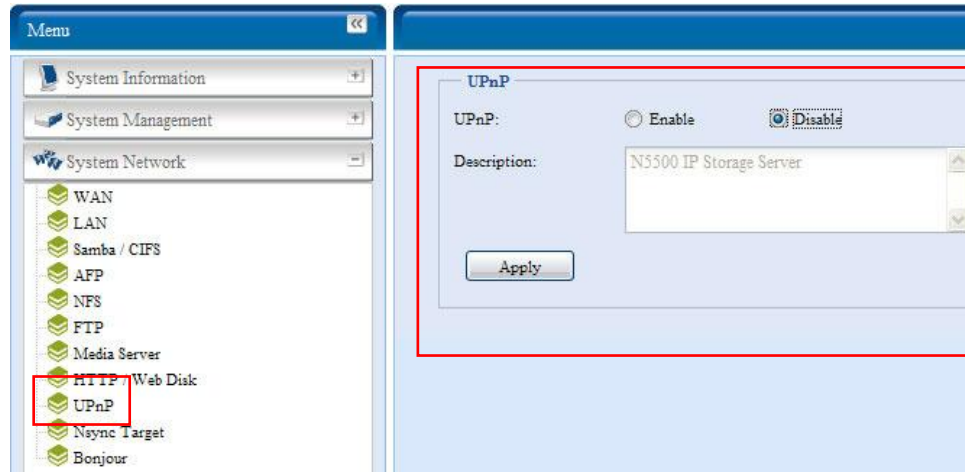

## Nsync Target

From the **System Network** menu, choose the **Nsync Target** item, and the **Nsync Setting** screen appears. Enable or Disable your Nsync Target Server. Press **Apply** to confirm your settings.


Once **Nsync Target** has been enabled, the other Thecus NAS product is able to operate remote replication to this NAS system.

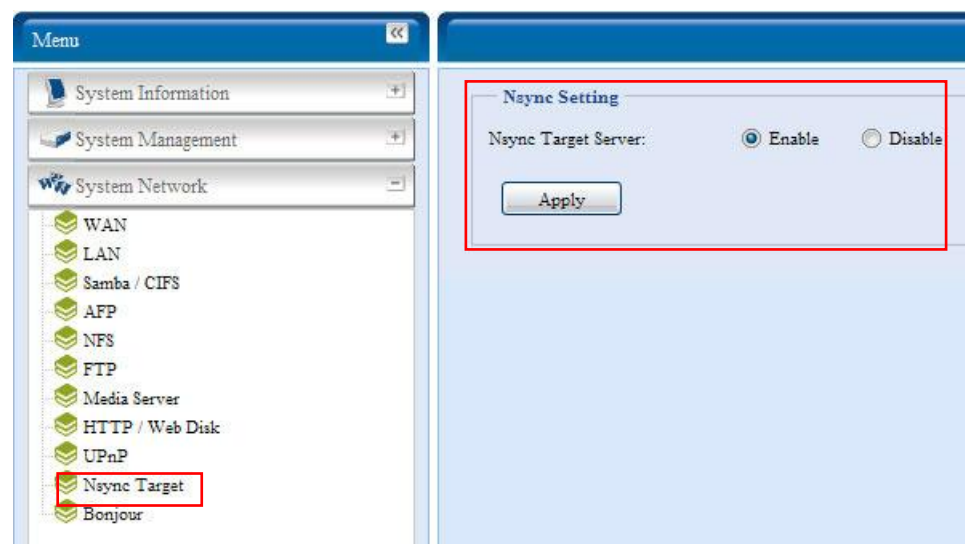

## Bonjour Setting

Bonjour, is Apple Inc.'s trade name for its implementation of Zeroconf, a service discovery protocol. Bonjour locates devices such as printers, as well as other computers, and the services that those devices offer on a local network using multicast Domain Name System service records. This definitive guide walks you

through Bonjour zero-configuration networking with a complete description of the protocols and technologies used to create Bonjour enabled applications and devices.

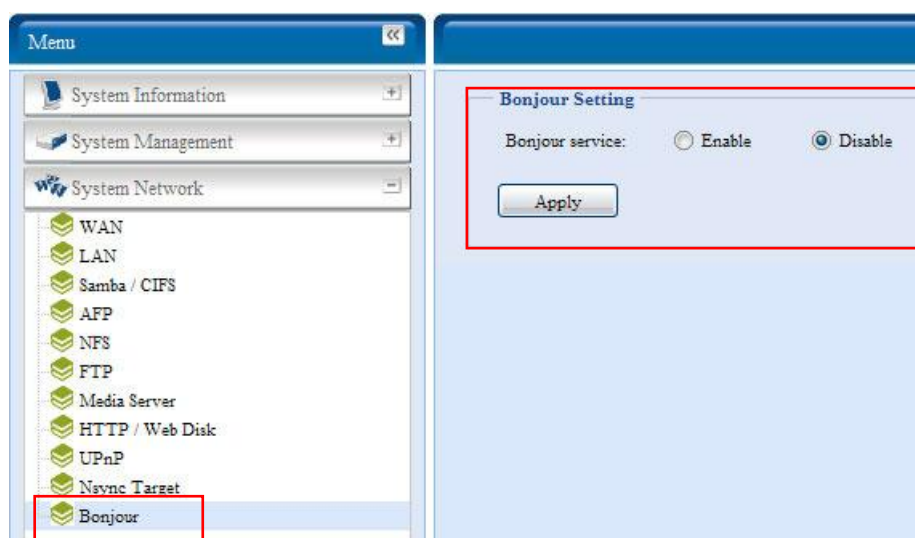


## Storage Management

The **Storage** menu displays the status of storage devices installed in the N7700, and includes storage configuration options such as RAID and disk settings, folder configuration, space allocation and ISO Mount.

### Disks Information

From the **Storage** menu, choose the **Disks** item and the **Disks Information** screen appears. From here, you can see various items about installed SATA hard disks. Blank lines indicate that a SATA hard disk is not currently installed in that particular disk slot.

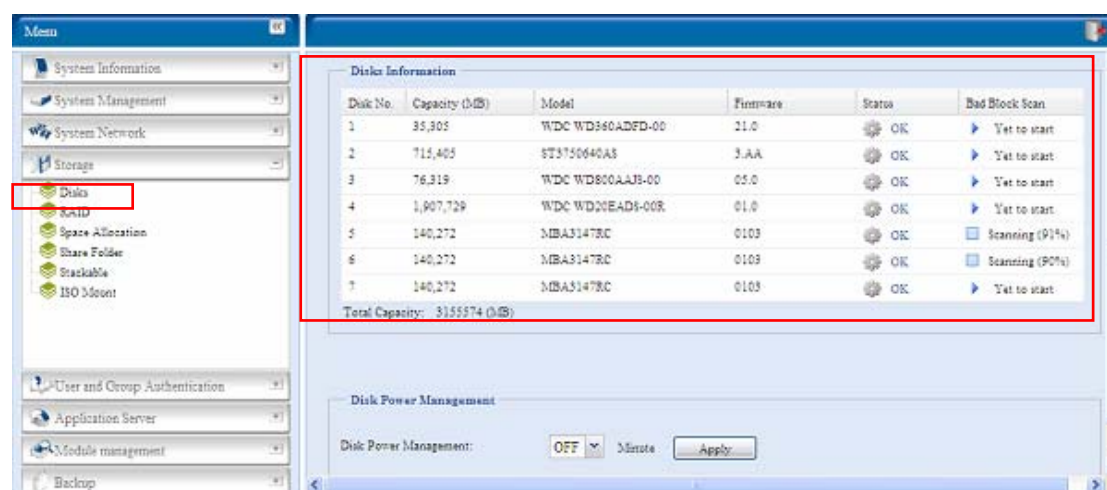

Disks Information	
Item	Description
Disk No.	Indicates disk location.
Capacity	Shows the SATA hard disk capacity.
Model	Displays the SATA hard disk model name.
Firmware	Shows the SATA hard disk firmware version.
Status	Indicates the status of the disk. Can read <b>OK</b> , <b>Warning</b> , or <b>Failed</b> .

Bad Block scan	Yes to start scan Bad Block.
Total Capacity	Shows the total SATA hard disk capacity.
Disk Power Management	The administrator can set the disk to power down after a period of inactivity.

## NOTE

When the Status shows Warning, it usually means there are bad sectors on the hard disk. It is shown only as a precaution and you should consider changing the drives.

### S.M.A.R.T. Information

On the **Disks Information** screen, the status of each disk will be displayed in the **Status** column. Clicking on an **OK** or **Warning** link will display the **S.M.A.R.T Information** window for that particular disk.

You may also perform disk SMART test, simply to click "Test" to start with. The result is only for reference and system will not take any action from its result.

The screenshot shows a window titled "SMART INFO" with a close button in the top right corner. It is divided into two main sections: "Info" and "Test".

**Info Section:**

- Tray Number: 3
- Model: WDC WD800AJS-00 (highlighted with a red box)
- Power On Hours: 9722 Hours
- Temperature Celsius: 37
- Reallocated Sector Count: 0
- Current Pending Sector: 0

**Test Section:**

- Test Type: ☒ short ☐ long
- Test Result: Healthy after short test
- Test Time: Mon Jun 15 11:56:06 CST 2009

At the bottom of the Test section is a button labeled "Test".

S.M.A.R.T. Information	
Item	Description
Tray Number	Tray the hard disk is installed in.
Model	Model name of the installed hard disk.
Power ON Hours	Count of hours in power-on state. The raw value of this attribute shows total count of hours (or minutes, or seconds, depending on manufacturer) in power-on state.
Temperature Celsius	The current temperature of the hard disk in degrees Celsius
Reallocated Sector Count	Count of reallocated sectors. When the hard drive finds a read/write/verification error, it marks this sector as "reallocated" and transfers data to a special reserved area (spare area). This process is also known as remapping and "reallocated" sectors are called remaps. This is why, on a modern hard disks, you can not see "bad blocks" while testing the surface - all bad blocks are hidden in reallocated sectors. However, the more sectors that are reallocated, the more a decrease (up to 10% or more) can be noticed in disk read/write speeds.

Current Pending Sector	Current count of unstable sectors (waiting for remapping). The raw value of this attribute indicates the total number of sectors waiting for remapping. Later, when some of these sectors are read successfully, the value is decreased. If errors still occur when reading sectors, the hard drive will try to restore the data, transfer it to the reserved disk area (spare area), and mark this sector as remapped. If this attribute value remains at zero, it indicates that the quality of the corresponding surface area is low.
Test Type	Set short or long time to test.
Test Result	Result of the test.
Test Time	Total time of the test.

## NOTE

If the Reallocated Sector Count > 32 or Current Pending Sector of a hard disk drive > 0, the status of the disk will show "Warning". This warning is only used to alert the system administrator that there are bad sectors on the disk, and they should replace those disks as soon as possible.

### Bad Block Scan

On the **Disks Information** screen, you may also perform disk bad block scan, simply to click "Yet to start" to start with. The result is only for reference and system will not take any action from its result.


Disks Information					
Disk No.	Capacity (MB)	Model	Firmware	Status	Bad Block Scan
1	35,305	WDC WD360ADFD-00	21.0	OK	▶ Yet to start
2	715,405	ST3750640AS	3.AA	OK	▶ Yet to start
3	76,319	WDC WD800AAJS-00	05.0	OK	▶ Yet to start
4	1,907,729	WDC WD20EADS-00R	01.0	OK	▶ Yet to start
5	140,272	MBA3147RC	0103	OK	▣ Scanning (96%)
6	140,272	MBA3147RC	0103	OK	▣ Scanning (95%)
7	140,272	MBA3147RC	0103	OK	▶ Yet to start
Total Capacity: 3155574 (MB)					

The testing result will be stay till system reboot with "Yet to start" displayed as default.

### RAID Information

From the **Storage** menu, choose the **RAID** item and the **RAID Information** screen appears.

This screen lists the RAID volumes currently residing on the N7700. From this screen, you can get information about the status of your RAID volumes, as well as the capacities allocated for data, and iSCSI. There is also a graph which represents how the RAID volume is currently allocated.

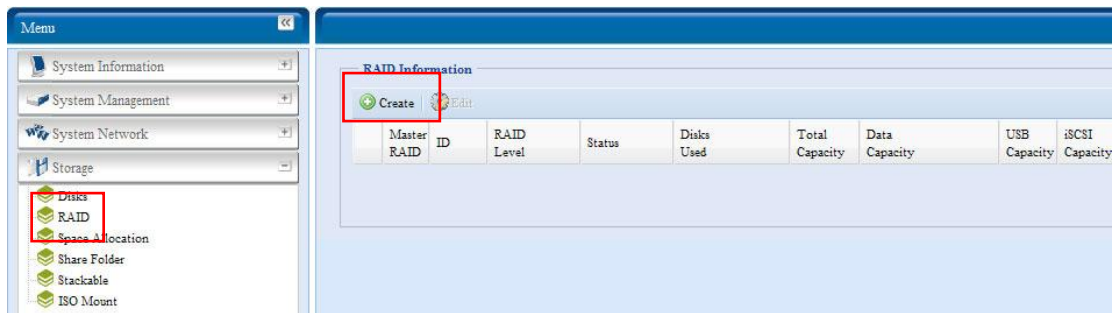

RAID Information	
Item	Description
Master RAID	The RAID volume currently designated as the Master RAID volume.
ID	ID of the current RAID volume. <b>NOTE: All RAID IDs must be unique.</b>
RAID Level	Shows the current RAID configuration.
Status	Indicates status of the RAID. Can read either <b>Healthy</b> , <b>Degraded</b> , or <b>Damaged</b> .
Disks Used	Hard disks used to form the current RAID volume.
Total Capacity	Total capacity of the current RAID.
Data Capacity	Indicates the used capacity and total capacity used by user data.
iSCSI Capacity	Indicates the capacity allocated to iSCSI.

### Create a RAID

On the **RAID Information** screen, press the **create** button to go to the **CREATE RAID** screen. In addition to RAID disk information and status, this screen lets you make RAID configuration settings.

Using **Create RAID**, you can select stripe size, choose which disks are RAID disks or the Spare Disk. .

RAID Configurations	
Item	Description
Disk No.	Number assigned to the installed hard disks.
Capacity (MB)	Capacity of the installed hard disks.
Model	Model number of the installed hard disks.
Status	Status of the installed hard disks.
Used	If this is checked, current hard disk is a part of a RAID volume.
Spare	If this is checked, current hard disk is designated as a spare for a RAID volume.
Master RAID	Check a box to designate this as the Master RAID volume. See the <b>NOTE</b> below for more information.
Stripe Size	This sets the stripe size to maximize performance of sequential files in a storage volume. Keep the 64K setting unless you require a special file storage layout in the storage volume. A larger stripe size is better for large files.
Data Percentage	The percentage of the RAID volume that will be used to store data.
Create	Press this button to configure a file system and create the RAID storage volume.

To create a RAID volume, follow the steps below:

1. On the **RAID Information** screen, click **create**.



2. On the **RAID Configuration** screen, set the RAID storage space as **JBOD**, **RAID 0**, **RAID 1**, **RAID 5**, **RAID 6**, or **RAID 10** — see [Appendix C: RAID Basics](#) for a detailed description of each.
3. Specify a RAID ID.
4. If this RAID volume is meant to be the Master RAID volume, tick the **Master RAID** checkbox.

#### NOTE

In a multiple RAID configuration, one RAID volume must be designated as the Master RAID volume. The Master RAID volume will store all installed modules. If the Master RAID is changed to another location (i.e. assigning volume 2 to be the Master RAID volume after volume 1 had been previously assigned), then all modules must be reinstalled. In addition, all system folders that were contained on the Master RAID volume will be invisible. Reassigning this volume to be the Master RAID will make these folders visible again.

5. Specify a stripe size — 64K is the default setting.
6. Specify the percentage allocated for user data by drag the horizontal bar. The remaining space will be made available for iSCSI.
7. Selected the file system you like to have for this RAID volume. The selection is available from ext3, XFS and ZFS.

#### NOTE

- Select ZFS file system while snapshot is needed. It is only one ZFS file system allowed to be created per system.
- ZFS file system is only accessible by CIFS/SMB, not for AFP and NFS users.
- XFS file system is not support folder quota feature

The screenshot shows the 'RAID Configuration' window with the 'Create RAID' tab active. It features a table of disks and various configuration options for creating a RAID volume.

Disk No.	Capacity (MB)	Model	Status	Used	Spare
1	140,014	ST31463568S	OK	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2	140,014	ST31463568S	OK	<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>
4	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>
5	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>
6	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>

RAID Level: ☐ JBOD ☐ RAID 0 ☒ RAID 1 ☐ RAID 5 ☐ RAID 6 ☐ RAID 10

RAID ID:  (Allow 0-9, a-z, A-Z)



Stripe Size:

Data Percentage:  80%

File System:

8. Press **Create** to build the RAID storage volume.



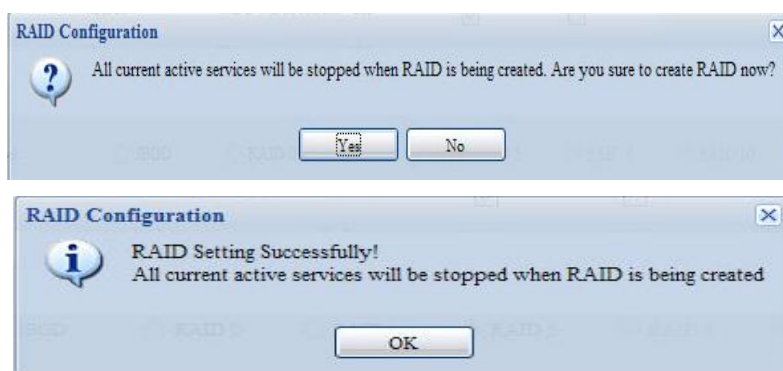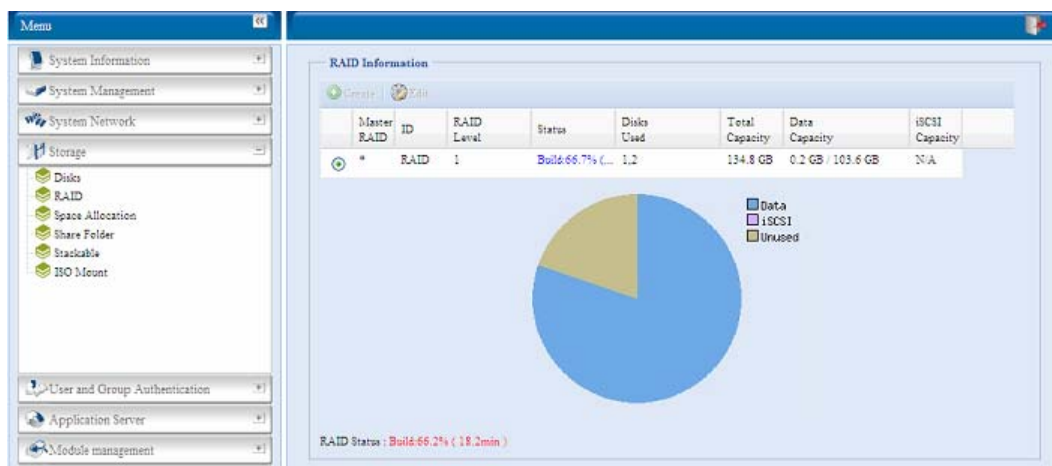

### NOTE

Building a RAID volume may take time, depending on the size of hard drives and RAID mode. In general, while the RAID volume building process is up to "RAID Building" then the data volume is capable to be accessed.

### WARNING

Creating RAID destroys all data in the current RAID volume. The data is unrecoverable.

With a RAID 1, RAID 5, RAID 6, or RAID 10 volume, you can also add a spare disk after the RAID is created.

See **Chapter 6: Tips and Tricks** > [Adding a Spare Disk](#) for details.

For more information on RAID, see [Appendix C: RAID Basics](#).

### RAID Level

You can set the storage volume as **JBOD**, **RAID 0**, **RAID 1**, **RAID 5**, **RAID 6** or **RAID 10**. RAID configuration is usually required only when you first set up the device. A brief description of each RAID setting follows:

RAID Levels	
Level	Description
JBOD	The storage volume is a single HDD with no RAID support. JBOD requires a minimum of 1 disk.
RAID 0	Provides data striping but no redundancy. Improves performance but not data safety. RAID 0 requires a minimum of 2 disks.
RAID 1	Offers disk mirroring. Provides twice the read rate of single disks, but same write rate. RAID 1 requires a minimum of 2 disks.
RAID 5	Data striping and stripe error correction information provided.

	RAID 5 requires a minimum of 3 disks. RAID 5 can sustain one failed disk.
RAID 6	Two independent parity computations must be used in order to provide protection against double disk failure. Two different algorithms are employed to achieve this purpose. RAID 6 requires a minimum of 4 disks. RAID 6 can sustain two failed disks.
RAID 10	RAID 10 has high reliability and high performance. RAID 10 is implemented as a striped array whose segments are RAID 1 arrays. It has the fault tolerance of RAID 1 and the performance of RAID 0. RAID 10 requires 4 disks. RAID 10 can sustain two failed disks.


## WARNING


If the administrator improperly removes a hard disk that should not be removed when RAID status is degraded, all data will be lost.

### Edit RAID

On the **RAID Information** screen, press the **Edit** button to go to the **RAID Information** screen.

Using **Edit RAID**, you can select RAID ID and the Spare Disk. .

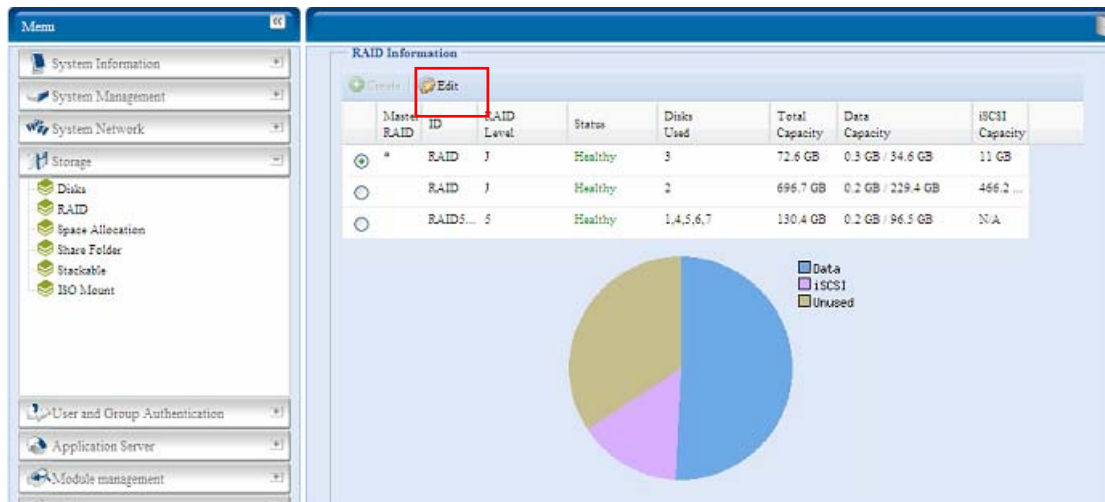

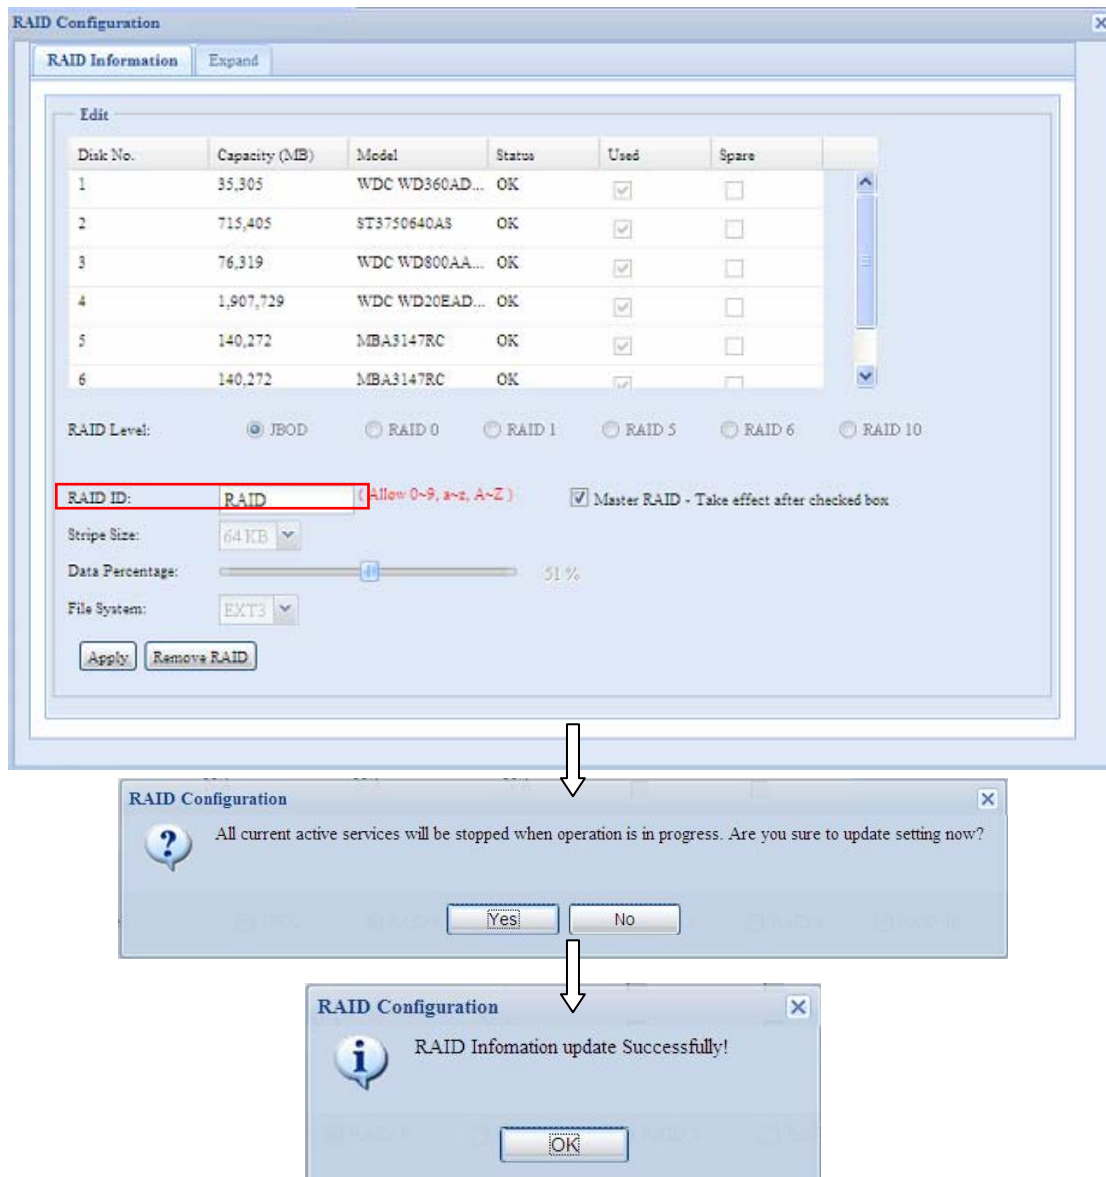


## Remove RAID

Click to remove the RAID volume. All user data and iSCSI has been created in selected RAID volume will be removed.

To remove a RAID volume, follow the steps below:

1. On the RAID List screen, select the RAID volume by clicking on its radio button, and click **RAID Information** to open the **RAID Configuration** screen.
2. On the **RAID Configuration** screen, click **Remove RAID**.
3. The confirmation screen appear, you will have to input "Yes" with exactly wording case to complete "**Remove RAID**" operation

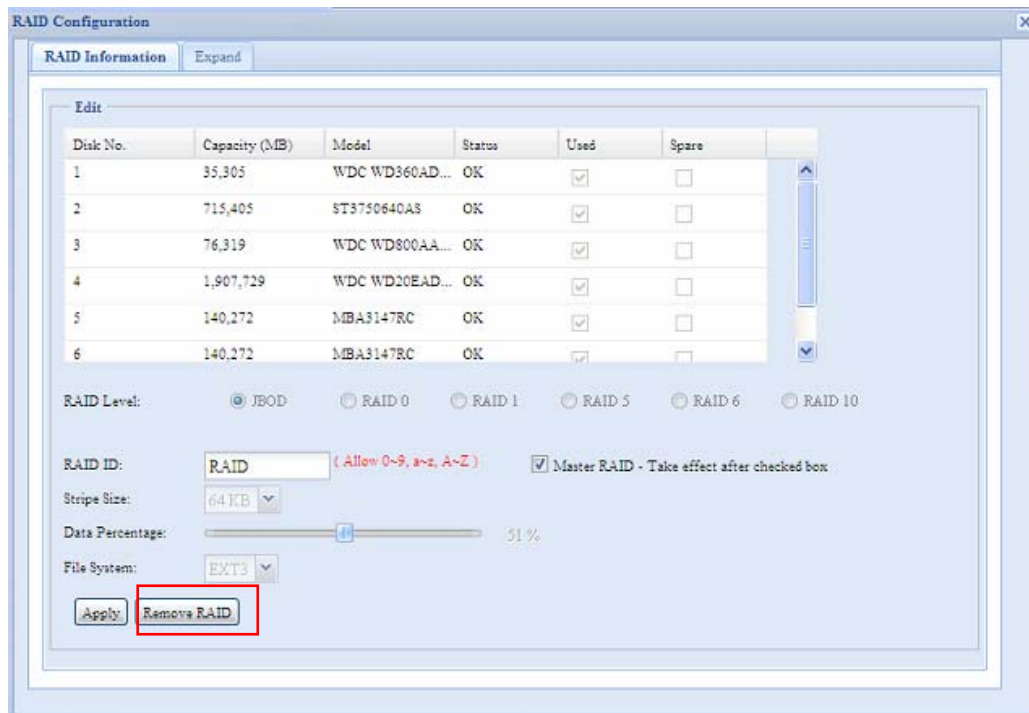

## WARNING

Remove RAID destroys all data in the current RAID volume. The data is unrecoverable.


## Expanding a RAID

To expand a RAID 1, RAID 5, RAID 6, or RAID 10 volume, follow the steps below:

1. Replace one of the hard drives in the RAID volume and allow it to automatically rebuild.
2. Once rebuilt, you can continue to replace any remaining disks in the RAID array.
3. When you are done replacing hard drives, log on to Web Management. Navigate to **Storage > RAID** to open the **RAID Configuration** screen.
4. On the **RAID Information** screen, and click **Edit** to open the **RAID Configuration** screen.
5. On the **RAID Configuration** screen, click **Expand**.

## NOTE


RAID expansion did not support file system created by ZFS.

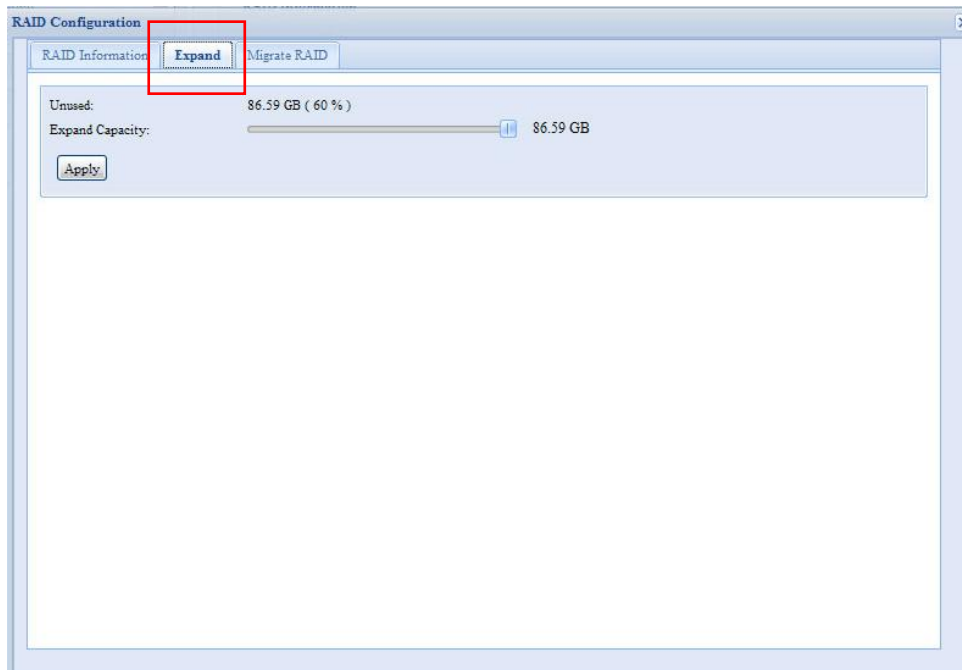


### Migrating a RAID

Once a RAID volume has been created, you may want to move it to other physical drives or change the RAID array all together. To migrate a RAID 0, RAID 1, RAID 5 or RAID 6 volume, follow the steps below:

1. From the RAID Configuration screen, click **Migrate RAID**.
2. A list of possible RAID migration configurations will be listed. Select the desired migration scheme and click **Apply**.
3. The system will begin migrating the RAID volume.

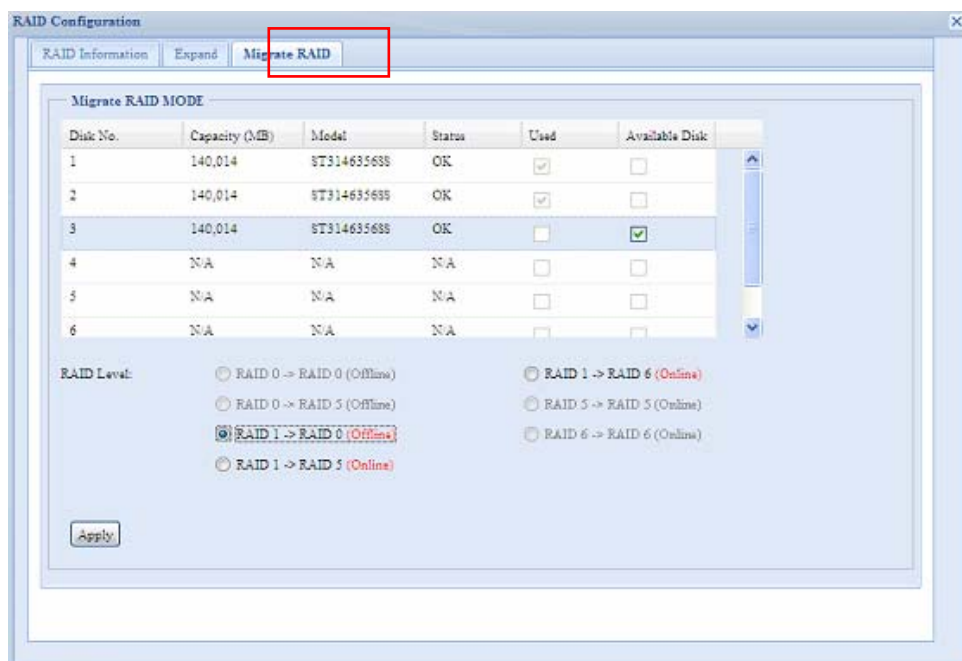

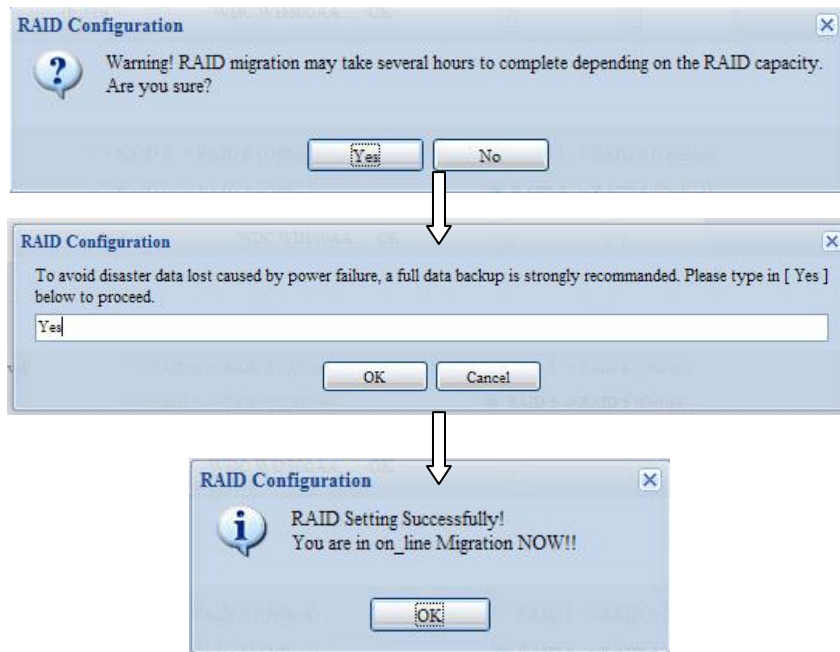

#### NOTE

Migrating a RAID volume could take several hours to complete

With RAID level migration function, it has two different type "On line" and "Off line" alone with limitation as listed below.

1. During RAID level migration, it is not allowed reboot or shutdown system.
2. Off line RAID level migration, all services will stop and data is inaccessible.
3. To have ZFS file system created doing on line RAID level migration from **R1 to R5 or R1 to R6**, the all services will restart and volumes "user data" and "iSCSI" are read only during operation.
4. To have ext3 and XFS file system created doing on line RAID level migration from **R1 to R5 or R1 to R6**, the all services will restart and volumes "iSCSI" is read only but "user data" is capable read / write during operation.
5. The other combination to make as "On line" can have read / write work as normal.

Below is a table listing of possible RAID migration schemes:

To From	RAID 0	RAID 5	RAID 6
<b>RAID 0</b>	<a href="#">[OFFLINE]</a> [RAID 0] HDDx2 to [RAID 0] HDDx3 [RAID 0] HDDx2 to [RAID 0] HDDx4 [RAID 0] HDDx2 to [RAID 0] HDDx5 [RAID 0] HDDx2 to [RAID 0] HDDx6 [RAID 0] HDDx2 to [RAID 0] HDDx7 [RAID 0] HDDx3 to [RAID 0] HDDx4 [RAID 0] HDDx3 to [RAID 0] HDDx5 [RAID 0] HDDx3 to [RAID 0] HDDx6 [RAID 0] HDDx3 to [RAID 0] HDDx7 [RAID 0] HDDx4 to [RAID 0] HDDx5 [RAID 0] HDDx4 to [RAID 0] HDDx6 [RAID 0] HDDx4 to [RAID 0] HDDx7 [RAID 0] HDDx5 to [RAID 0] HDDx6 [RAID 0] HDDx5 to [RAID 0] HDDx7 [RAID 0] HDDx6 to [RAID 0] HDDx7	<a href="#">[OFFLINE]</a> [RAID 0] HDDx2 to [RAID 5] HDDx3 [RAID 0] HDDx2 to [RAID 5] HDDx4 [RAID 0] HDDx2 to [RAID 5] HDDx5 [RAID 0] HDDx2 to [RAID 5] HDDx6 [RAID 0] HDDx2 to [RAID 5] HDDx7 [RAID 0] HDDx3 to [RAID 5] HDDx4 [RAID 0] HDDx3 to [RAID 5] HDDx5 [RAID 0] HDDx3 to [RAID 5] HDDx6 [RAID 0] HDDx3 to [RAID 5] HDDx7 [RAID 0] HDDx4 to [RAID 5] HDDx5 [RAID 0] HDDx4 to [RAID 5] HDDx6 [RAID 0] HDDx4 to [RAID 5] HDDx7 [RAID 0] HDDx5 to [RAID 5] HDDx6 [RAID 0] HDDx5 to [RAID 5] HDDx7 [RAID 0] HDDx6 to [RAID 5] HDDx7	X
<b>RAID 1</b>	<a href="#">[OFFLINE]</a> [RAID 1] HDDx2 to [RAID 0] HDDx2 [RAID 1] HDDx2 to [RAID 0] HDDx3 [RAID 1] HDDx2 to [RAID 0] HDDx4 [RAID 1] HDDx2 to [RAID 0] HDDx5 [RAID 1] HDDx2 to [RAID 0] HDDx6 [RAID 1] HDDx2 to [RAID 0] HDDx7 [RAID 1] HDDx3 to [RAID 0] HDDx4 [RAID 1] HDDx3 to [RAID 0] HDDx5 [RAID 1] HDDx3 to [RAID 0] HDDx6 [RAID 1] HDDx3 to [RAID 0] HDDx7 [RAID 1] HDDx4 to [RAID 0] HDDx5 [RAID 1] HDDx4 to [RAID 0] HDDx6 [RAID 1] HDDx4 to [RAID 0] HDDx7 [RAID 1] HDDx5 to [RAID 0] HDDx6 [RAID 1] HDDx5 to [RAID 0] HDDx7 [RAID 1] HDDx6 to [RAID 0] HDDx7 [RAID 1] HDDx7 to [RAID 0] HDDx7	<a href="#">[ONLINE]</a> [RAID 1] HDDx2 to [RAID 5] HDDx3 [RAID 1] HDDx2 to [RAID 5] HDDx4 [RAID 1] HDDx2 to [RAID 5] HDDx5 [RAID 1] HDDx2 to [RAID 5] HDDx6 [RAID 1] HDDx2 to [RAID 5] HDDx7 [RAID 1] HDDx3 to [RAID 5] HDDx4 [RAID 1] HDDx3 to [RAID 5] HDDx5 [RAID 1] HDDx3 to [RAID 5] HDDx6 [RAID 1] HDDx3 to [RAID 5] HDDx7 [RAID 1] HDDx4 to [RAID 5] HDDx5 [RAID 1] HDDx4 to [RAID 5] HDDx6 [RAID 1] HDDx4 to [RAID 5] HDDx7 [RAID 1] HDDx5 to [RAID 5] HDDx6 [RAID 1] HDDx5 to [RAID 5] HDDx7 [RAID 1] HDDx6 to [RAID 5] HDDx7	<a href="#">[ONLINE]</a> [RAID 1] HDDx2 to [RAID 6] HDDx4 [RAID 1] HDDx2 to [RAID 6] HDDx5 [RAID 1] HDDx2 to [RAID 6] HDDx6 [RAID 1] HDDx2 to [RAID 6] HDDx7 [RAID 1] HDDx3 to [RAID 6] HDDx4 [RAID 1] HDDx3 to [RAID 6] HDDx5 [RAID 1] HDDx3 to [RAID 6] HDDx6 [RAID 1] HDDx3 to [RAID 6] HDDx7 [RAID 1] HDDx4 to [RAID 6] HDDx5 [RAID 1] HDDx4 to [RAID 6] HDDx6 [RAID 1] HDDx4 to [RAID 6] HDDx7 [RAID 1] HDDx5 to [RAID 6] HDDx6 [RAID 1] HDDx5 to [RAID 6] HDDx7 [RAID 1] HDDx6 to [RAID 6] HDDx6 [RAID 1] HDDx6 to [RAID 6] HDDx7
<b>RAID 5</b>	X	<a href="#">[ONLINE]</a> [RAID 5] HDDx3 to [RAID 5] HDDx4 [RAID 5] HDDx3 to [RAID 5] HDDx5 [RAID 5] HDDx3 to [RAID 5] HDDx6 [RAID 5] HDDx3 to [RAID 5] HDDx7 [RAID 5] HDDx4 to [RAID 5] HDDx5 [RAID 5] HDDx4 to [RAID 5] HDDx6 [RAID 5] HDDx4 to [RAID 5] HDDx7 [RAID 5] HDDx5 to [RAID 5] HDDx6 [RAID 5] HDDx5 to [RAID 5] HDDx7 [RAID 5] HDDx6 to [RAID 5] HDDx7	X


RAID 6	X	X	<a href="#">[ONLINE]</a> [RAID 6] HDDx4 to [RAID 6] HDDx5 [RAID 6] HDDx4 to [RAID 6] HDDx6 [RAID 6] HDDx4 to [RAID 6] HDDx7 [RAID 6] HDDx5 to [RAID 6] HDDx6 [RAID 6] HDDx5 to [RAID 6] HDDx7 [RAID 6] HDDx6 to [RAID 6] HDDx7
--------	---	---	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## Space Allocation

You may specify the space allocated for iSCSI volumes. The iSCSI volume can be created up to 5 volumes per RAID volume.

To do this, under the **Storage** menu, click **RAID** and the **RAID List** window appears. Select the RAID volume you wish to reallocate by clicking on its radio button, and click **Space Allocation**. The **RAID Information** and **Volume Allocation List** windows will appear.


The Volume Allocation List displays the space allocated for **iSCSI** volumes on the current RAID volume. The N7700 supports up to five iSCSI volumes.

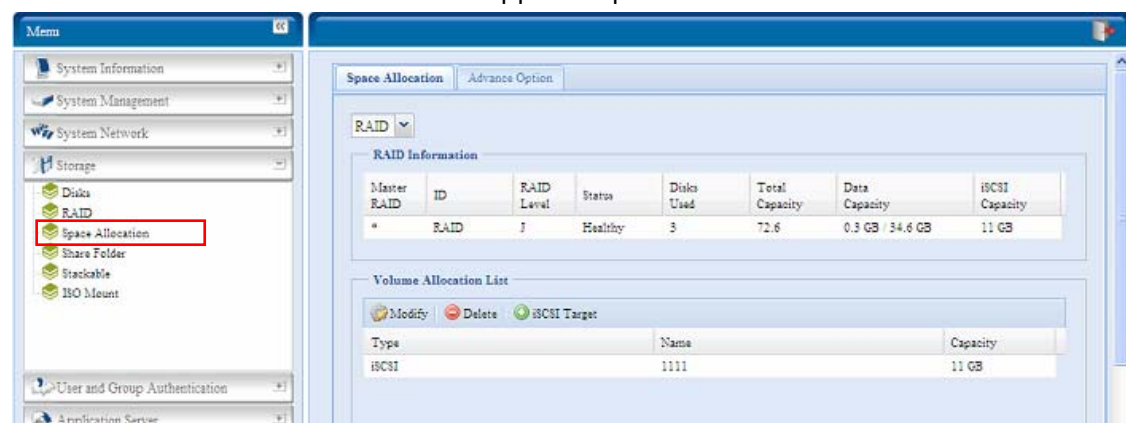

Volume Allocation List	
Item	Description
Modify	Click this to modify the allocated space.
Delete	Click this to delete the allocated space.
iSCSI Target	Click to allocate space to iSCSI volume.
Type	Type of volume. Can be either USB or iSCSI.
Name	Name assigned to the volume.
Capacity	Capacity of the allocated space.



## Allocating Space for iSCSI Volume

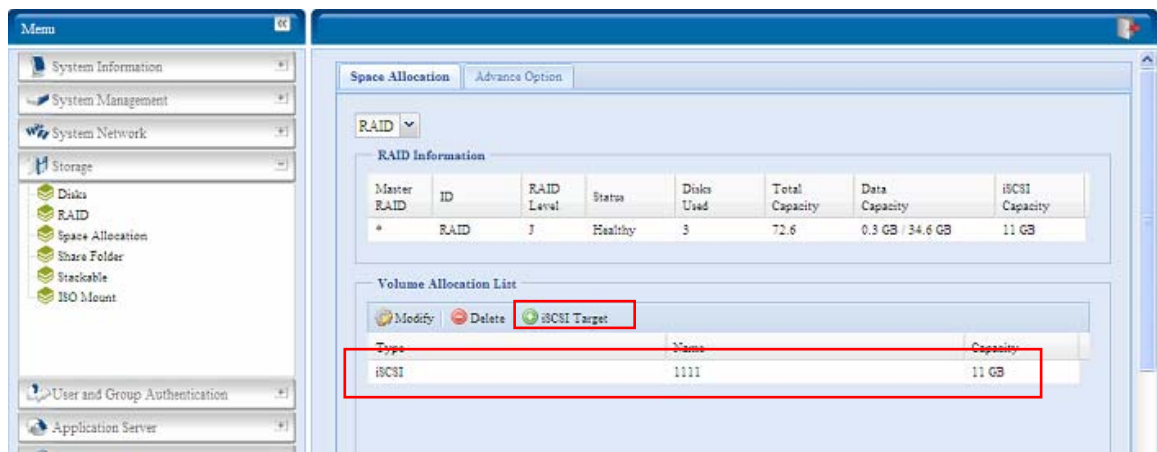

To allocate space for an iSCSI volume on the current RAID volume, follow the steps below:

1. Under the **Volume Allocation List**, click **iSCSI Target**. The **Create iSCSI Volume** screen appears.

The 'Create iSCSI Volume' dialog box shows the following fields and options:

- RAID ID:** RAID
- Allocation:** 60 % (86.6 GB)
- Unused:** 86.6 GB
- iSCSI Target Volume:** ☐ Enable ☒ Disable
- Target Name:** [Text Field] Limit:(0~9, a~z)
- iqn\_Year:** 2009
- iqn\_Year:** 05
- Authentication:** ☒ None ☐ CHAP
- Username:** [Text Field] Limit:(0~9, a~z, A~Z)
- Password:** [Text Field] Limit:(0~9, a~z, A~Z,length between 12~16)
- Password Confirm:** [Text Field]
- OK** button
- Description:** The iSCSI block size can be set under system advance option, default is 512 Bytes. Please using [ 4K ] block size while more than 2TB capacity will be configured in Windows XP. Please using [ 512 Bytes ] block size for application like VMware etc.

Create iSCSI Volume	
Item	Description
RAID ID	ID of current RAID volume.
Allocation	Percentage and amount of space allocated to iSCSI volume.
Unused	Percentage and amount of unused space on current RAID volume.
iSCSI Target Volume	Enable or Disable the iSCSI Target Volume.
Target Name	Name of the iSCSI Target. This name will be used by the <b>Stackable NAS</b> function to identify this export share.
Year	Select the current year from the dropdown.
Authentication	You may choose CHAP authentication or choose None.


Month	Select the current month from the dropdown.
Username	Enter a username.
Password	Enter a password.
Password Confirm	Reenter the chosen password

2. Designate the percentage to be allocated from the **Allocation** drag bar.
3. Enable the **iSCSI Target Service** by selecting **Enable**.
4. Choose to enable **CHAP** authentication or choose **None**.
5. Enter a **Target Name**. This will be used by the **Stackable NAS** function to identify this export share.
6. Choose the current year from the **Year** dropdown.
7. Choose the current month from the **Month** dropdown.
8. If you've enabled CHAP authentication, enter a **username** and a **password**. Confirm your chosen password by reentering it in the **Password Confirm** box.
9. Click **OK** to create the iSCSI volume.

### Modify iSCSI Volume

To Modify iSCSI volume on the current RAID volume, follow the steps below:

1. Under the **Volume Allocation List**, click **Modify**.  
The **Modify iSCSI Volume** screen appears.

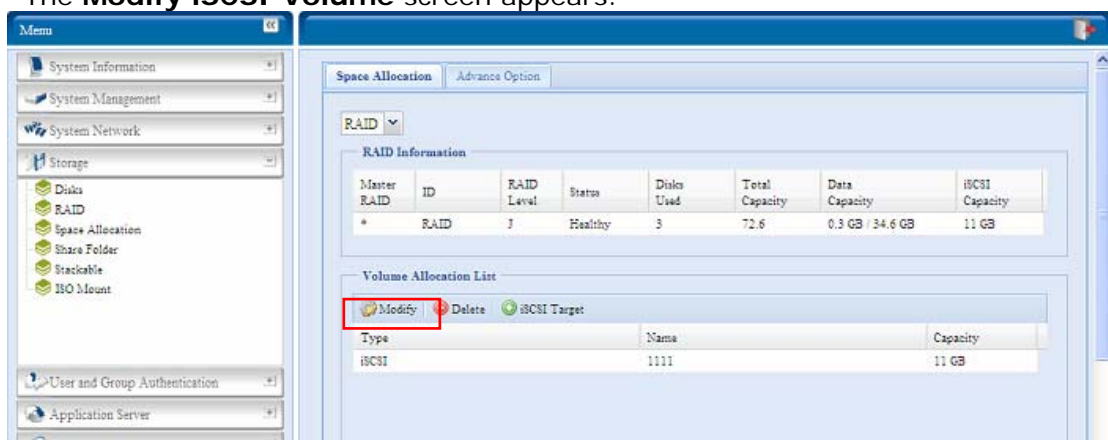

**Space Allocation**

**Modify iSCSI Volume**

RAID ID: RAID

Unused: 39 % (56.3 GB)

Allocation:  30.3 GB

iSCSI Target Volume: ☒ Enable ☐ Disable

Target Name: iscsi Limit:(0~9, a~z)

iqn\_Year: 2009

iqn\_Year: 05

Authentication: ☒ None ☐ CHAP

Username: Limit:(0~9, a~z, A~Z)

Password: Limit:(0~9, a~z, A~Z, length between 12~16)

Password Confirm:

iqn: iqn.2009-5.com.thecus:RAID.iscsi0.vg0.iscsi

Initiator Information:

OK

**Description**


The iSCSI block size can be set under system advance option, default is 512 Bytes.  
Please using [ 4K ] block size while more than 2TB capacity will be configured in Windows XP.  
Please using [ 512 Bytes ] block size for application like VMware etc.

2. Modify your setting. Press **ok** to change.

### Delete Volume

To delete volume on the current RAID volume, follow the steps below:


1. Under the **Volume Allocation List**, click **Delete**.  
The **Space Allocation** screen appears.

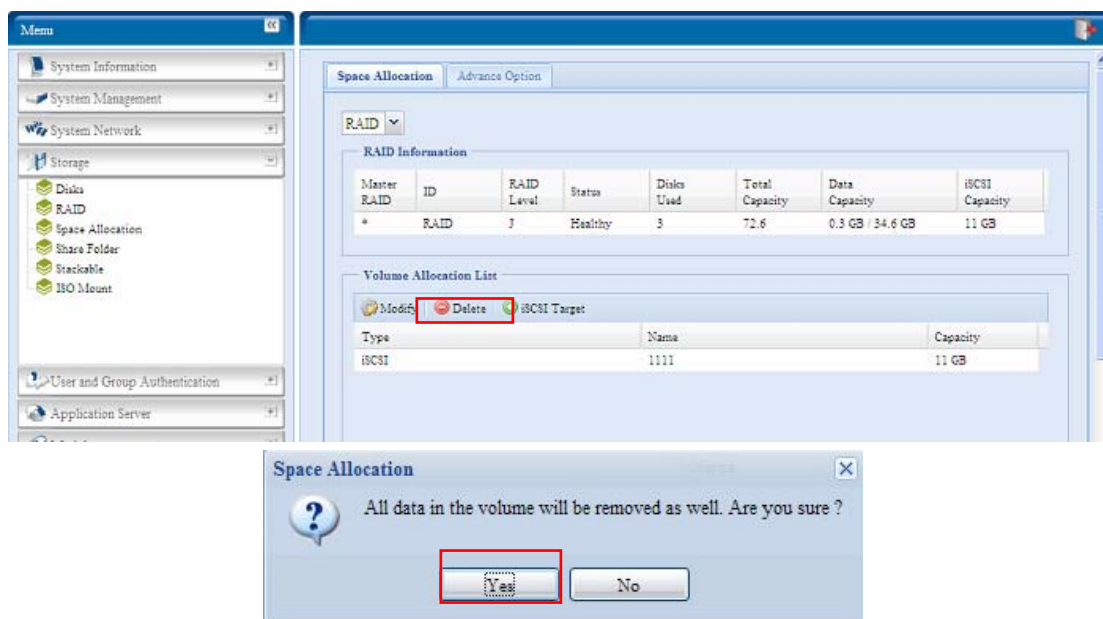

2. Press **YES**. All data in the volume will be removed.

## Advance Option

There are 2 options is currently allow Admin to Enable/Disable to operate N7700 associated with iSCSI setting. The details as listed in following screenshot. With the option changed, it will need to reboot system to activate.

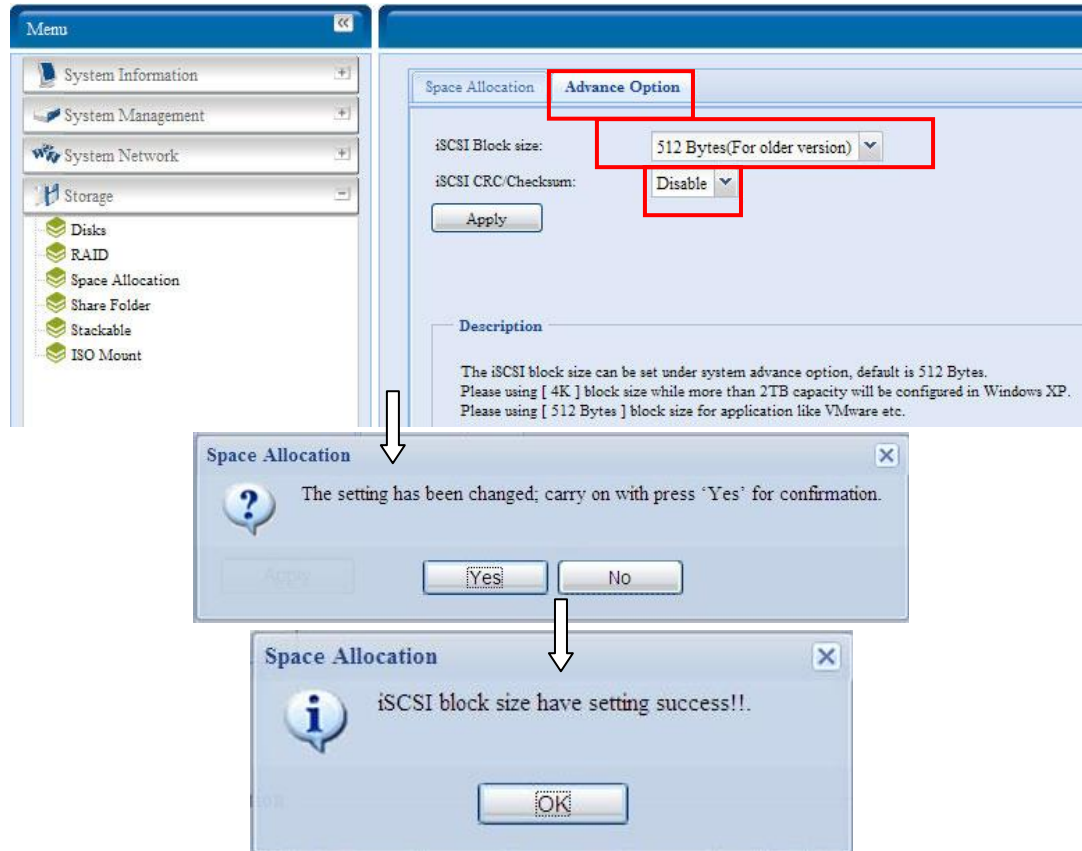


### **iSCSI Block Size**

Select the block size with 4K while the iSCSI volume size is over 2TB.


### **iSCSI CRC/Checksum**

To enable this option, the initiator can connect with "Data digest" and "Header digest" enabled.

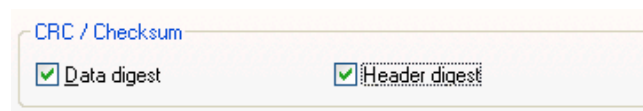


## Share Folder

From the **Storage** menu, choose **Share Folder**, and the **Folder** screen appears. This screen allows you to create and configure folders on the N7700 volume.

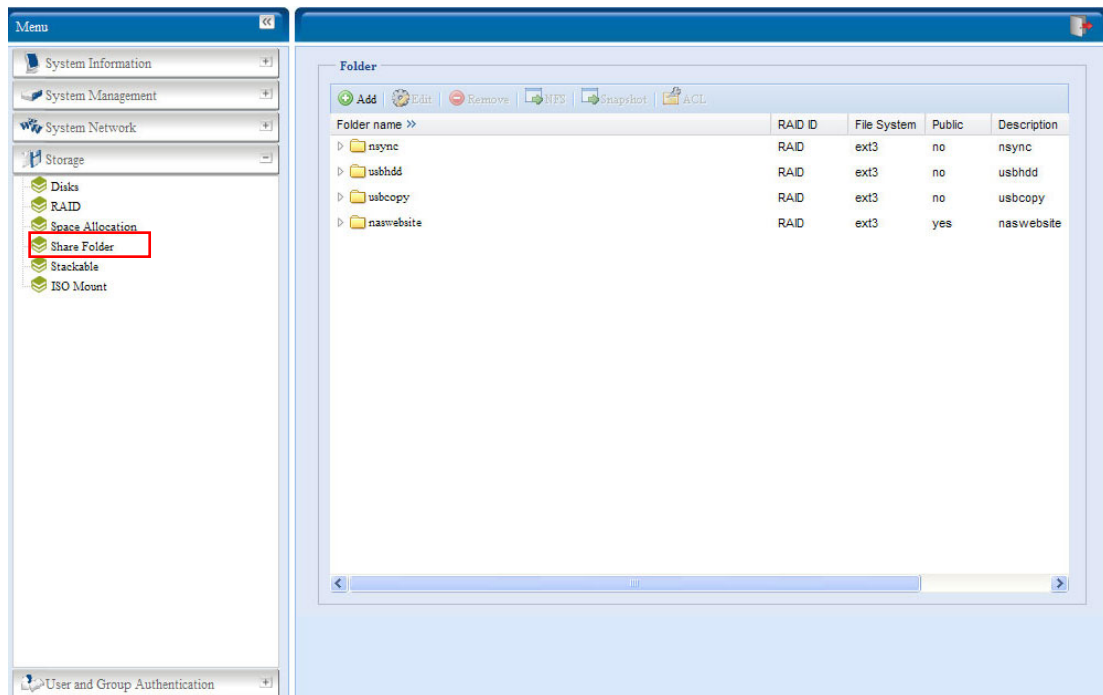

### Adding Folders

On the **Folder** screen, press the **Add** button and the **Add Folder** screen appears. This screen allows you to add a folder. After entering the information, press **Apply** to create new folder.

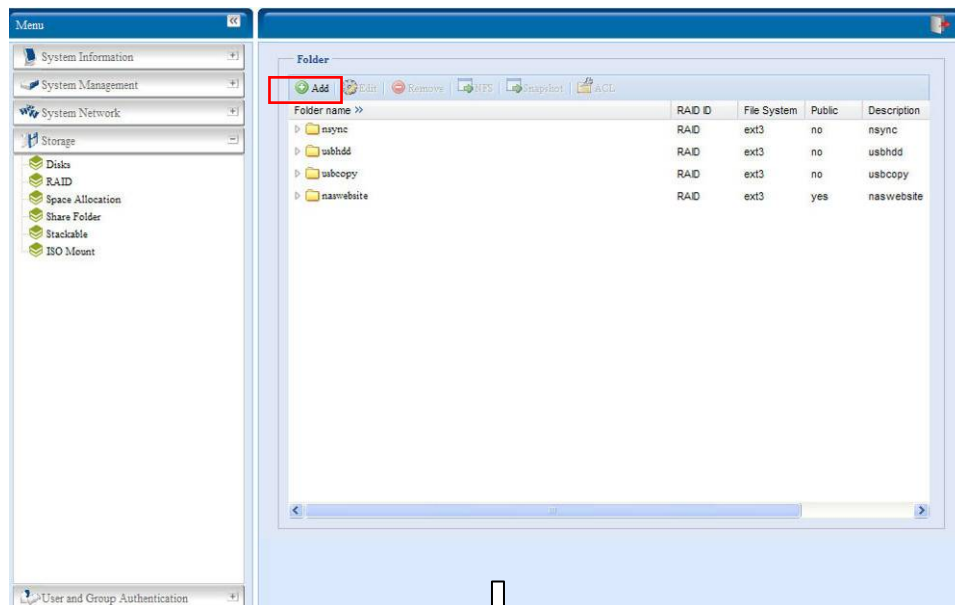

Add Folder	
Item	Description
RAID ID	RAID volume where the new folder will reside.
Folder Name	Enter the name of the folder.
Description	Provide a description the folder.
Browseable	Enable or disable users from browsing the folder contents. If <b>Yes</b> is selected, then the share folder will be browseable.
Public	Admit or deny public access to this folder. If <b>Yes</b> is selected, then users do not need to have access permission to write to this folder. When accessing a public folder via FTP, the behavior is similar to anonymous FTP. Anonymous users can upload/download a file to the folder, but they cannot delete a file from the folder.
Share Folder Limit	Enter the maximum size of the folder in Gigabytes (GB). The folder cannot grow beyond this limit. You can enter a 0 to turn off the share folder limit. This option did not apply while XFS file system selected.
Apply	Press <b>Apply</b> to create the folder.

## NOTE

Folder names are limited to 60 characters. Systems running Windows 98 or earlier may not support file names longer than 15 characters.

## Modify Folders


On the **Folder** screen, press the **Edit** button and the **Modify Folder** screen appears. This screen allows you to change folder information. After entering the information, press **Apply** to save your changes.

Modify Folder	
Item	Description
RAID ID	RAID volume where the folder will reside.
Folder Name	Enter the name of the folder.

Description	Provide a description the folder.
Browseable	Enable or disable users from browsing the folder contents. This setting will only apply while access via SMB/CIFS and web disk.
Public	Admit or deny public access to this folder.
Share Limit	Enter the maximum size of the folder. The folder will not grow beyond this limit. You can enter a 0 to turn off the share folder limit.

### Remove Folders

To remove a folder, press the **Remove** button from the specified folder row. The system will confirm folder deletion. Press **Yes** to delete the folder permanently or **No** to go back to the folder list.


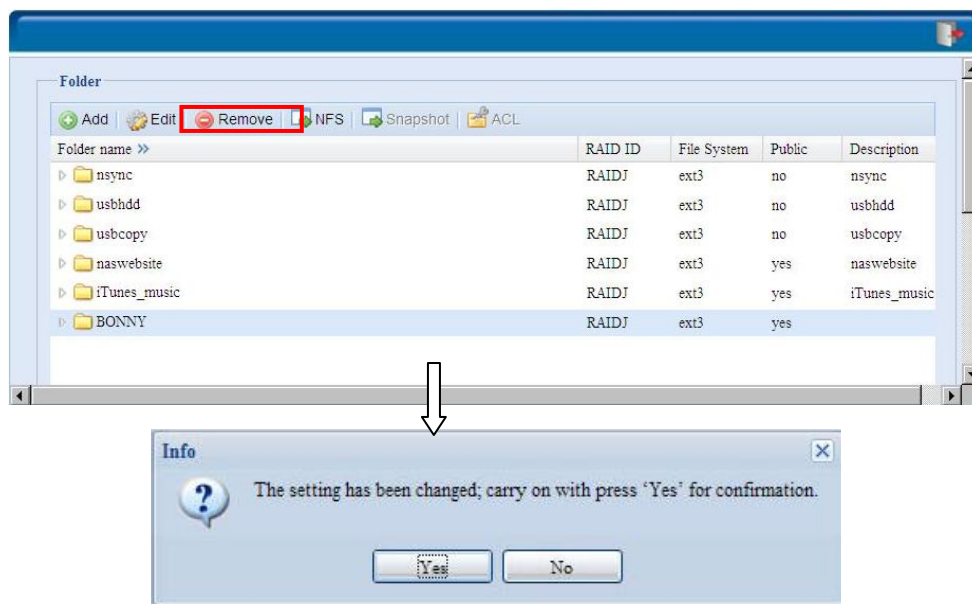


### WARNING

All the data stored in the folder will be deleted once the folder is deleted.  
The data will not be recoverable.

### NFS Share

To allow NFS access to the share folder, enable the **NFS Service**, and then set up hosts with access rights by clicking **Add**.

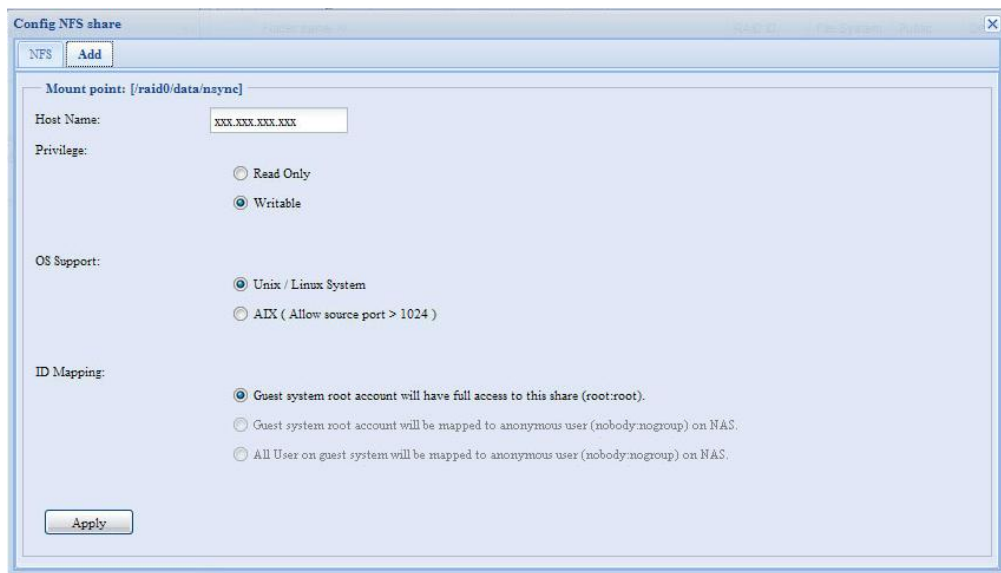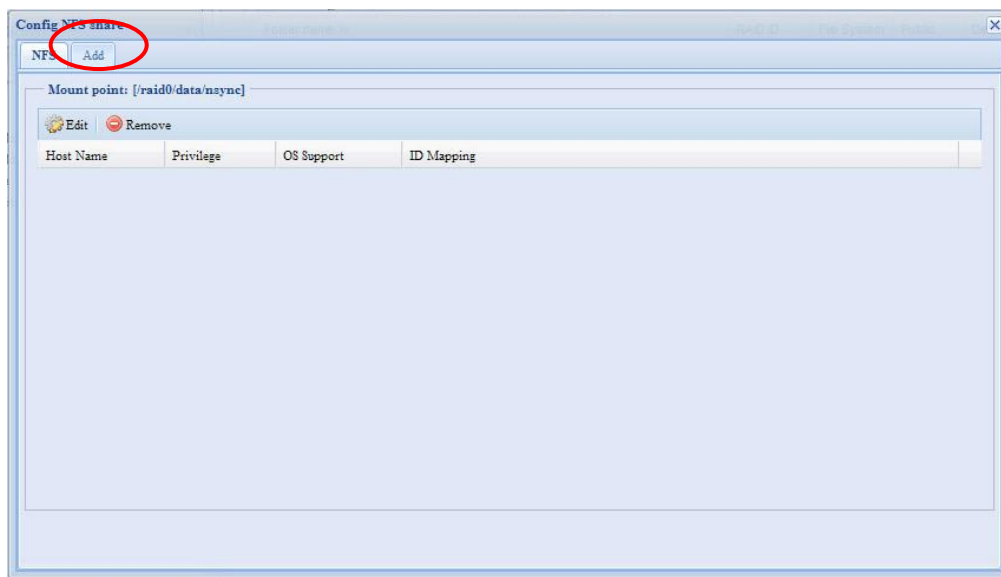


NFS Share	
Item	Description
Hostname	Enter the name or IP address of the host
Privilege	Host has either read only or writeable access to the folder.
Guest System Support	There are two selections available: <ul style="list-style-type: none"> <li>• Unix / Linux System</li> <li>• AIX (Allow source port &gt; 1024)</li> </ul> Choose the one which best fits your needs.
IO Mapping	There are three selections available: <ul style="list-style-type: none"> <li>• Guest system root account will have full access to this share (root:root).</li> <li>• Guest system root account will be mapped to anonymous user (nobody:nogroup) on NAS.</li> <li>• All user on guest system will be mapped to anonymous user (nobody:nogroup) on NAS.</li> </ul> Choose the one which best fits your needs.
Apply	Click to save your changes.




## Snapshot

The N7700 is capable for 16 snapshot version control. To have snapshot to work on, the file system creation for RAID volume has to be “ZFS”.

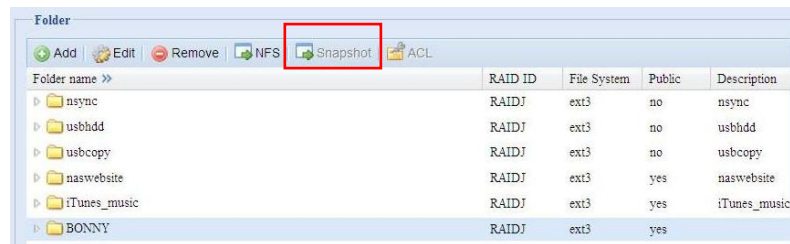


### Snap (Snapshot configuration)

If added folder has located in the RAID volume with “ZFS” file system, then the folder management screen with “Snap” button will be configurable.

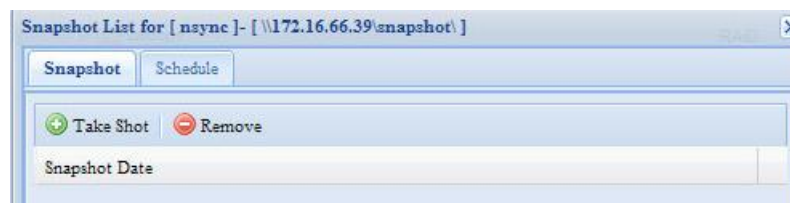

Snapshot	
Item	Description
Take Shot	Click to take snapshot right away.
Remove	Click to remove snapshot schedule.
Schedule	Click to open snapshot schedule setup screen.

Clicking on schedule button then schedule setup screen appear. Checked the enable check box to activate the snapshot scheduled operation.

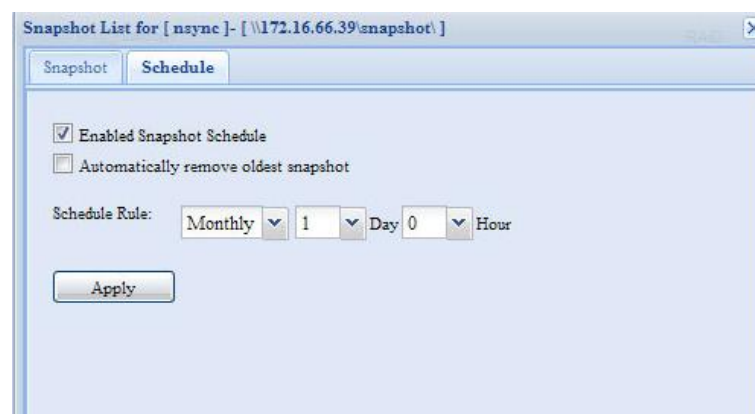


The N7700 snapshot is supported total **16 versions**. Once checked “Automatically remove oldest snapshot”, the oldest will be removed to let newest to added on top. Otherwise, if the check box is unchecked and snapshot versions are up to 16 then system will appear warning message and won’t execute the task till available version count.

The snapshot schedule rules can be setup for monthly, weekly or daily hour. Clicking on **Apply** after firmed with desired schedule

These taken snapshot is only accessible though CIFS/SMB by manually type **\\NAS IP address\snapshot** and invisible from normal access. Also, the taken snapshot version is read only can not be deleted under CIFS/SMB access but only click the "Del" button showing on the screen shot above.

### **Folder and sub-folders Access Control List (ACL)**


On the Folder screen, press the **ACL** button, and the **ACL setting** screen appears. This screen allows you to configure access to the specific folder and sub-folders for users and groups. Select a user or a group from the left hand column and then choose **Deny**, **Read Only**, or **Writable** to configure their access level. Press the **Apply** button to confirm your settings.

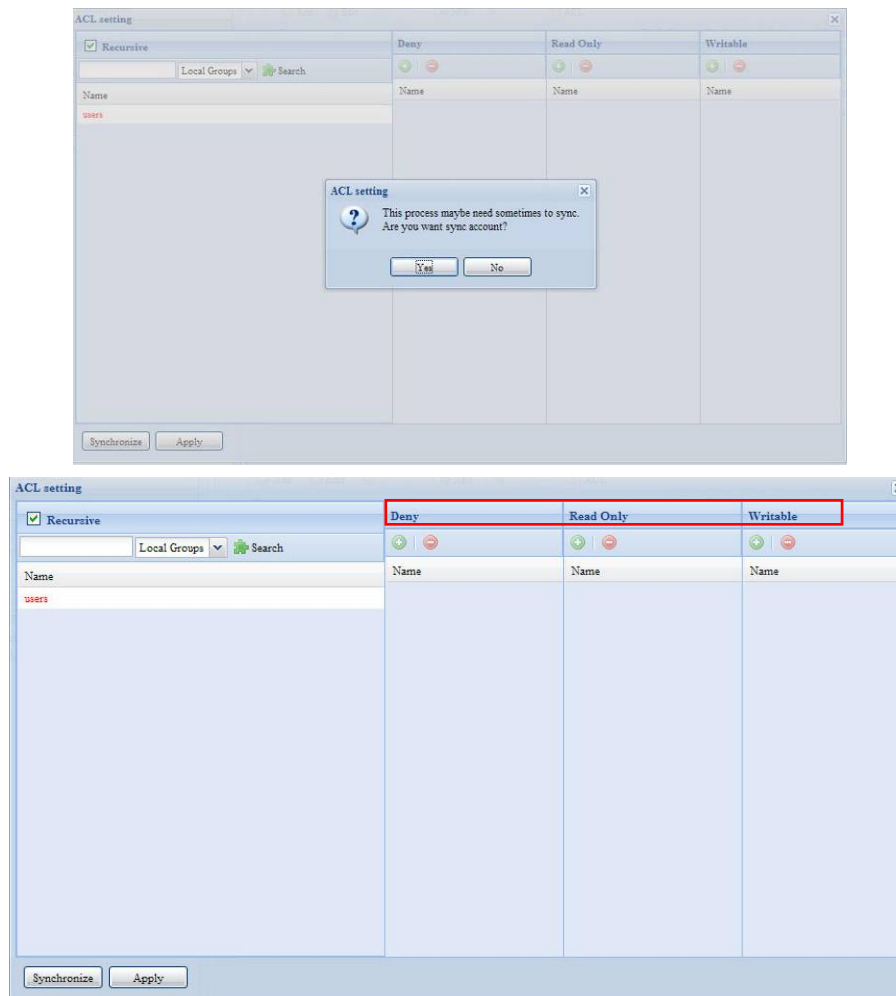

ACL setting	
Item	Description
Deny	Denies access to users or groups who are displayed in this column.
Read Only	Provides Read Only access to users or groups who are displayed in this column.
Writable	Provides Write access to users or groups who are displayed in this column.
Recursive	Enable to inherit the access right for all its sub-folders.

To configure folder access, follow the steps below:


1. On the **ACL** screen, all network groups and users are listed in the left hand column. Select a group or user from this list.

2. With the group or user selected, press one of the buttons from the three access level columns at the top. The group or user then appears in that column and has that level of access to the folder.
3. Continue selecting groups and users and assigning them access levels using the column buttons.
4. To remove a group or user from an access level column, press the **Remove**  button in that column.
5. When you are finished, press **Apply** to confirm your ACL settings.

### NOTE

If one user has belonged to more than one group but different privilege than the priority Deny > Read Only > Writable

To setup sub-folders ACL, click on " ▸ " symbol to extract sub folders list as screen shot shows below. You may carry on with same steps as share level ACL setting.

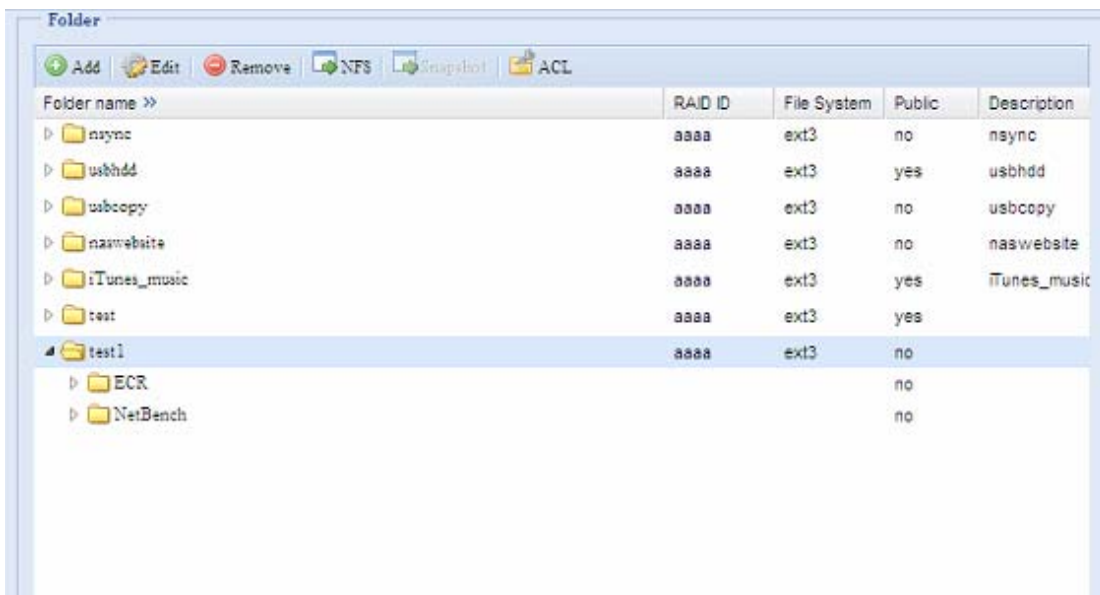


Folder name >>	RAID ID	File System	Public	Description
nsync	aaaa	ext3	no	nsync
usbhdd	aaaa	ext3	yes	usbhdd
usbcopy	aaaa	ext3	no	usbcopy
naswebsite	aaaa	ext3	no	naswebsite
iTunes_music	aaaa	ext3	yes	iTunes_music
test	aaaa	ext3	yes	
test1	aaaa	ext3	no	
▸ ECR			no	
▸ NetBench			no	

### NOTE

The ACL can be set for share and sub-folders level, not for files.

The ACL screen also allows you to search for a particular user. To do this, follow the steps below:

1. In the blank, enter the name of the user you would like to find.
2. From the drop down select the group you would like to search for the user in.
3. Click **Search**.

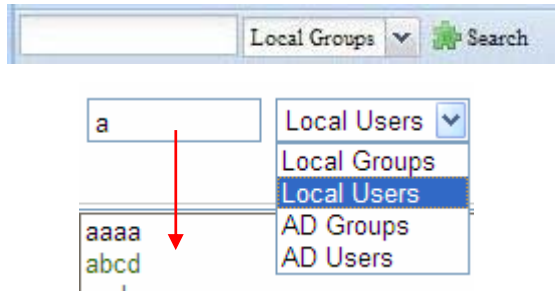


## NOTE


The system will list up to 1,000 users from the chosen category. To narrow your search, enter a search term in the blank provided.

## Stackable NAS

The N7700's capacity can be expanded even further using the stackable function. With it, users can expand the capacity of their network storage systems up to 5 other stack target volumes which are located in different systems. These can be stacked through single network access like SMB or AFP acting as a share folder type.

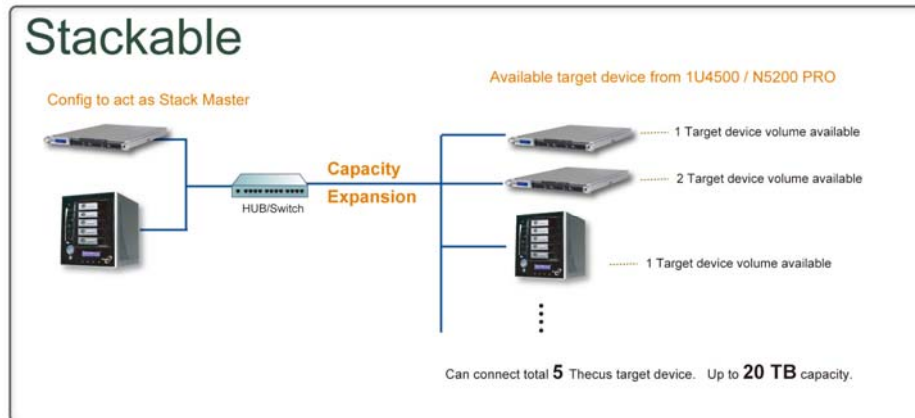

From the main menu, the stackable feature is located under "Storage". Please refer the figure below for reference.

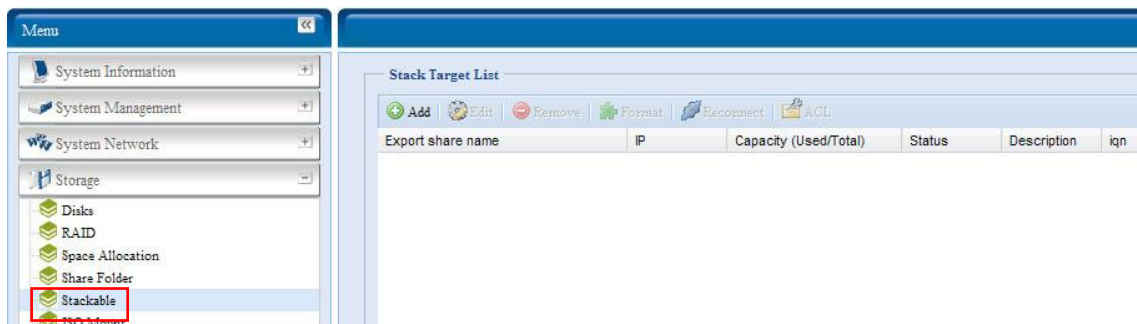

### A. Add a Stack Target Volume

From the figure above, click **Add** to access the stackable target device configuration page. Please refer to the figure below:

With the added stack target you could "Enable" or "Disable" now or later per usage needed.

Add iSCSI Target (Add Stack Target)

Enable iSCSI Target: ☐ Enable ☒ Disable

Stackable Target IP: 172.16.65.157

iqn: iqn.2009-05.com.thecus.XFS.iscsi0.vg0.iscsi

Username:

Password:

Export share name:  ( Limit : ( 0~9, a~z ) )

Description:

Browseable: ☒ yes ☐ no

Public: ☐ yes ☒ no

Next, input the target IP address of the stackable device and click the **Discovery** button. The system will list available target volumes from the inputted IP address.

Once IP with volume have been set, you may need to input a valid user name and password to validate your access rights. If there is no user name and password needed to access target volume, then leave it blank.

Once IP with volume have been set, you may need to input a valid user name and password to validate your access rights. If there is no user name and password needed to access target volume, then leave it blank.

Add iSCSI Target (Add Stack Target)

Enable iSCSI Target: ☐ Enable ☒ Disable

Stackable Target IP: 172.16.65.157

iqn: iqn.2009-05.com.thecus.XFS.iscsi0.vg0.iscsi

Username:

Password:


Export share name:  ( Limit : ( 0~9, a~z ) )

Description:



Browseable: ☒ yes ☐ no

Public: ☐ yes ☒ no

The **Export share name** will become the network share name and displayed through network access such as SMB. You may refer the figures below to see the result. Please note the naming limitation.

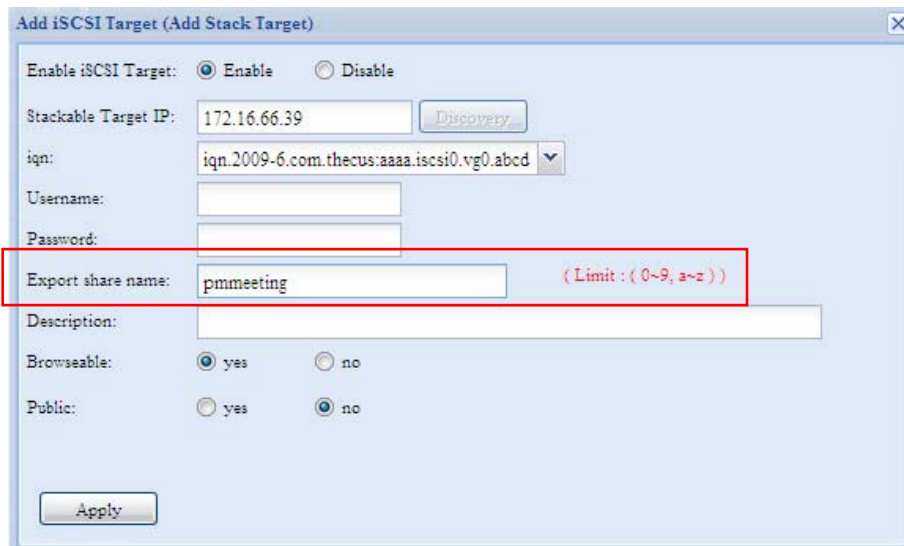

From the figure above, the **Export share name** is “pmmeeting”. The figures below show the result before and after via Microsoft Network Access with settings have been completed.

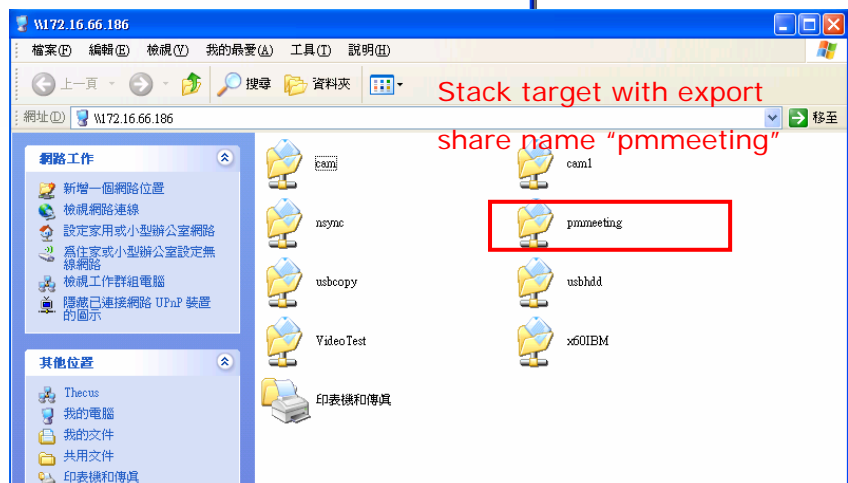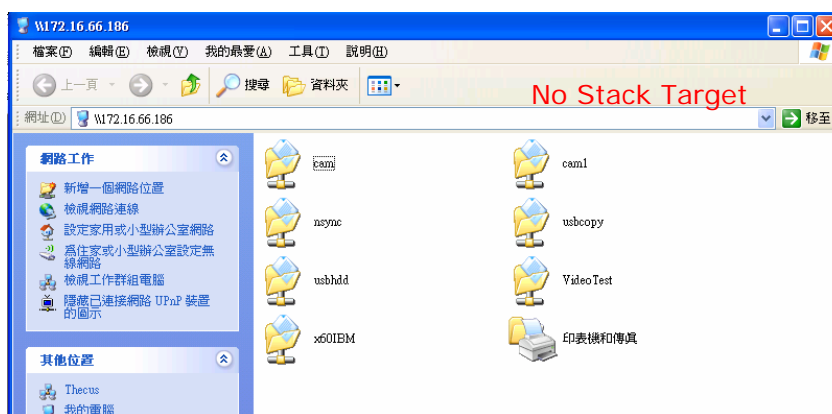

The **Browseable** setting will be same method of setting for system share folder. It designates whether or not this folder will be visible through web disk. You may refer the figures below for reference when **Yes** and **No** are selected.

**Add iSCSI Target (Add Stack Target)**

Enable iSCSI Target: ☐ Enable ☒ Disable

Stackable Target IP: 172.16.65.157 Discovery

iqn: iqn.2009-05.com.thecus:XFS.iscsi0.vg0.iscsi

Username:

Password:

Export share name:  (Limit : ( 0~9, a~z ) )

Description:

**Browseable:** ☒ yes ☐ no

**Public:** ☐ yes ☒ no

Apply

The **Public** setting will be set same as what the setting for the system share folder associated with the ACL permission setup. If **Public** is set to **Yes**, all users will be able to access it, and **ACL** button will be grayed out. If **Public** is set to **No**, the ACL button will be available on the **Stack Target List** window.

**Add iSCSI Target (Add Stack Target)**

Enable iSCSI Target: ☐ Enable ☒ Disable

Stackable Target IP: 172.16.65.157 Discovery

iqn: iqn.2009-05.com.thecus:XFS.iscsi0.vg0.iscsi

Username:

Password:

Export share name:  (Limit : ( 0~9, a~z ) )

Description:

**Browseable:** ☒ yes ☐ no

**Public:** ☐ yes ☒ no

Apply


Click **Apply** to save your changes.

### **B. Activate a Stack Target**

After your settings have been applied, the system will bring you back to **Stack Target List** window as shown below. There is one stack target device has been attached into this stack master.

Export share name	IP	Capacity (Used/Total)	Status	Description	iqn
iscsi	172.16.65.157	0 GB / 0.1 GB	Disable		iqn.2009-05.com



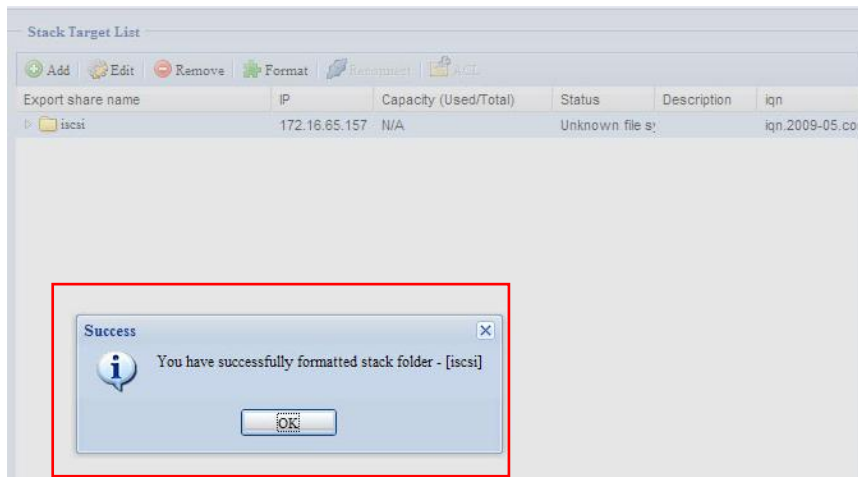

With this newly attached stack target device, you will see the information displayed and also several options you can choose.

In general, if attached stack target device has been used by another N5200PRO/1U4500/N5500/N7700/N7700/N8800 as stack target volume, then the **Format** item will be display and system will recognize it straight away and display its capacity. Otherwise, the **Format** item will be available and the **Capacity** and **Status** items will show as “N/A” and “Unknown file system” respectively. Next, click **Format** to proceed with formatting. After the format is complete, the stack target volume will be created successfully. You will see the volume’s capacity and status in the **Stack Target List** screen.

### C. Edit a Stack Target

To make any changes to stack targets, click **Edit** for the corresponding stack target, and system will bring up the following dialogue:




After your changes have been made, click **Apply** to confirm any modifications. Once changes are applied, the associated information will be updated on the **Stack Target List** window.

### D. Stack Target ACL

If the stack target **Public** setting set to **Yes**, then the **ACL** button will be grayed out. However, if **Public** setting is set to **No**, then the **ACL** button will be available for you to setup user access permissions for the stack target.





**ACL** settings will be exactly the same as system folder that you may have setup previously.

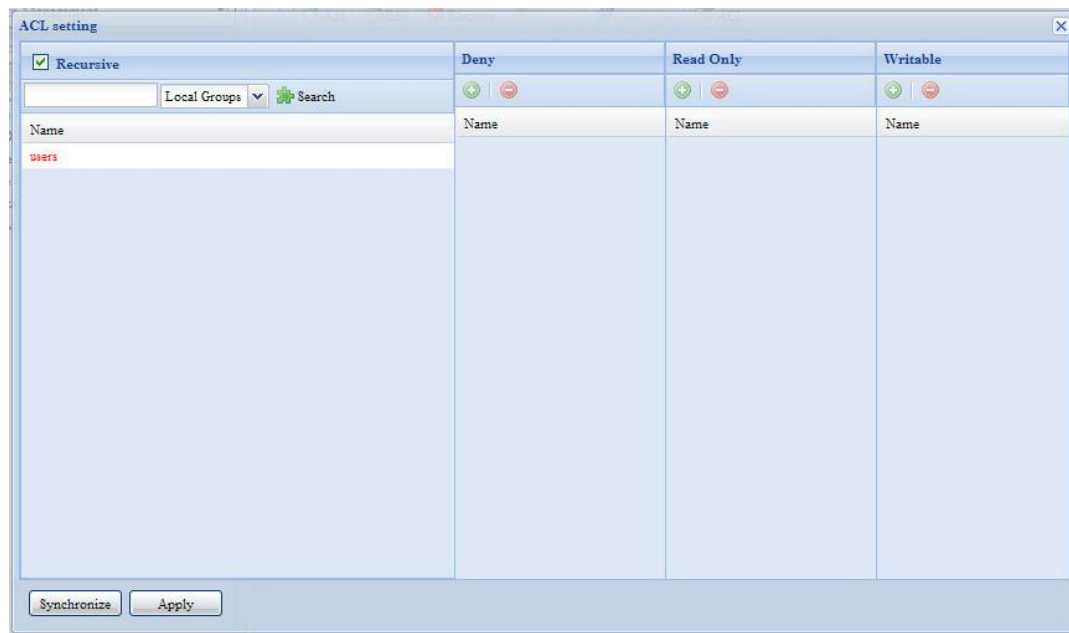

### E. Reconnect a Stack Target

The enabled stack target devices may be disconnected by situations such as power outages or network disconnects. When this happens, the **Reconnect** button will be available. To attempt to reconnect the stack target, click **Reconnect**.

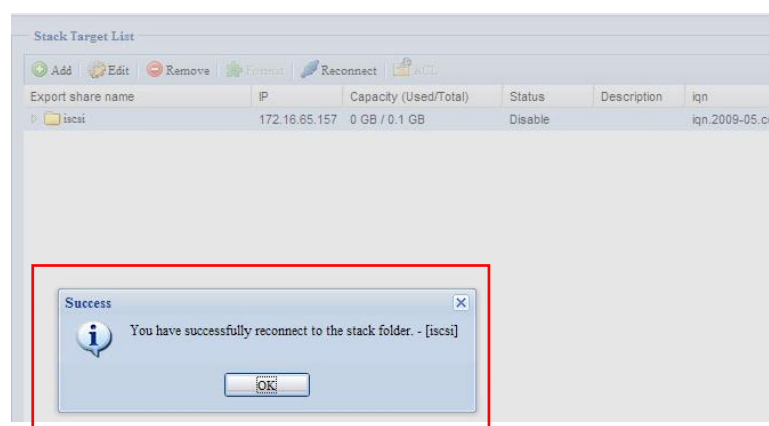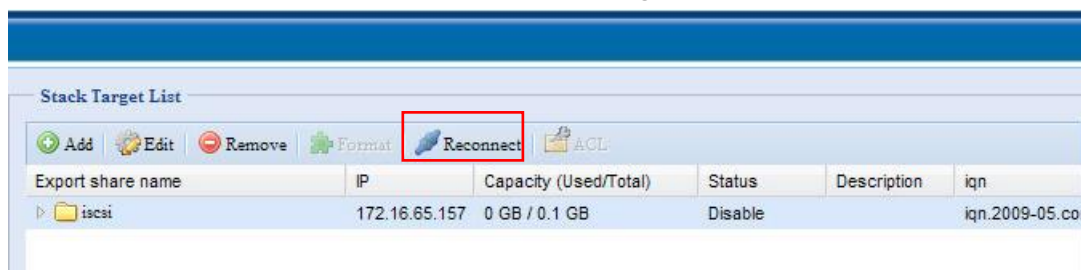


### ISO Mount

The ISO Mount feature is very useful tool from Thecus products. With it, users can mount an ISO file and having export name to display all details from mounted ISO file.


From the main menu, the ISO Mount feature is located under "Storage". Please refer the figure below for reference.

Select on the ISO mount function and you will have the screen shot appear as following.

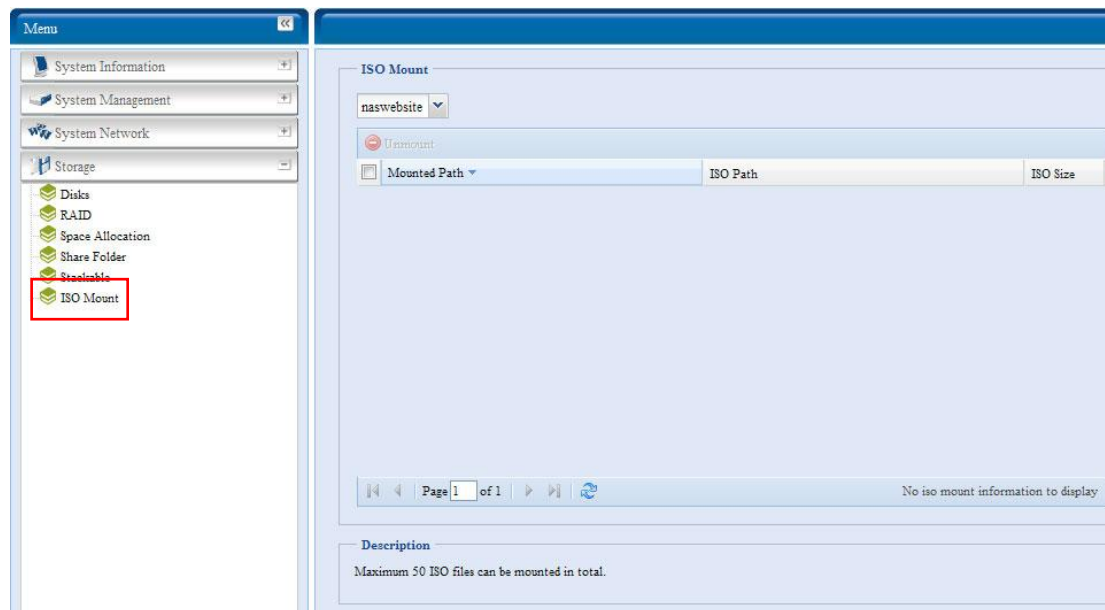



#### A. Add a ISO file

From the figure above, select ISO file from drop down share list.


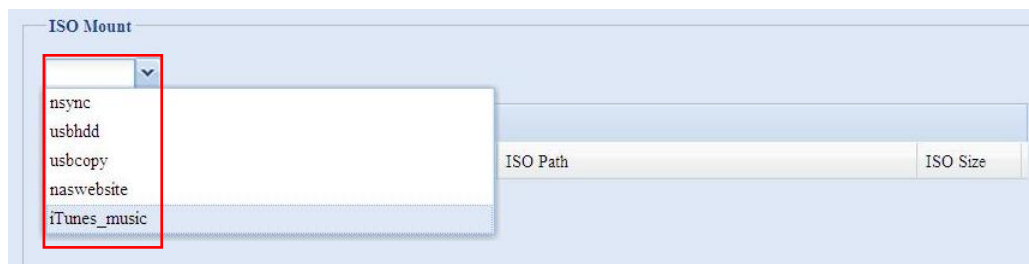


After selection, system will bring up Mount table for further setting screen.

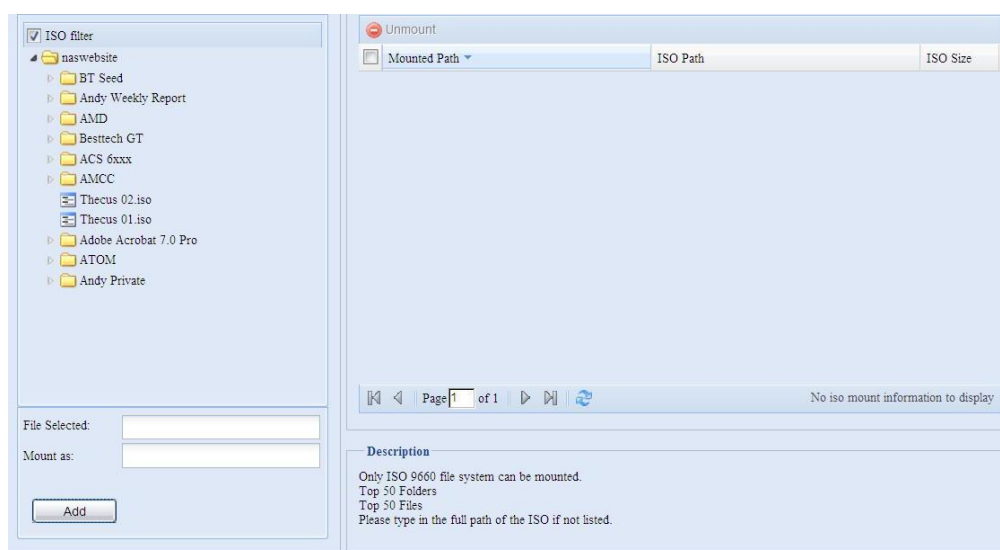


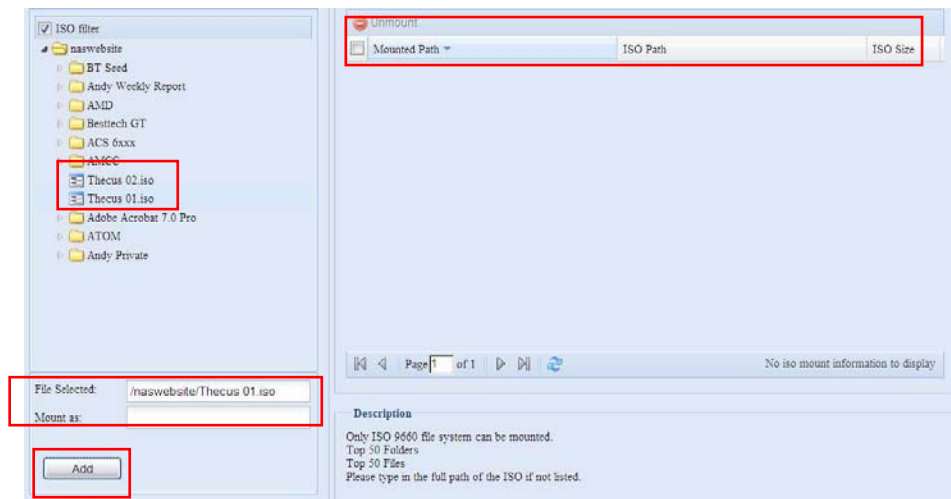

To mount new ISO file, select from listed ISO file and input desired mounting name into "Mount as:" field. Click "ADD" with confirmation to complete mounting ISO file. Or without "Mount as" ISO file export name input, system will automatic to give the export name by ISO file name.  
If left "Mount as:" blink then system will create mount point by ISO file name.

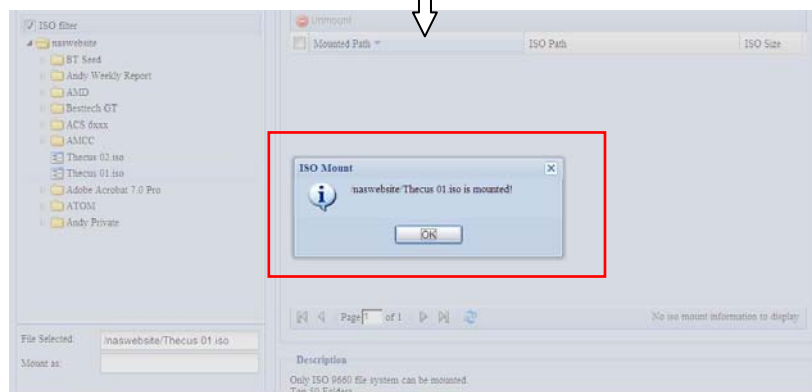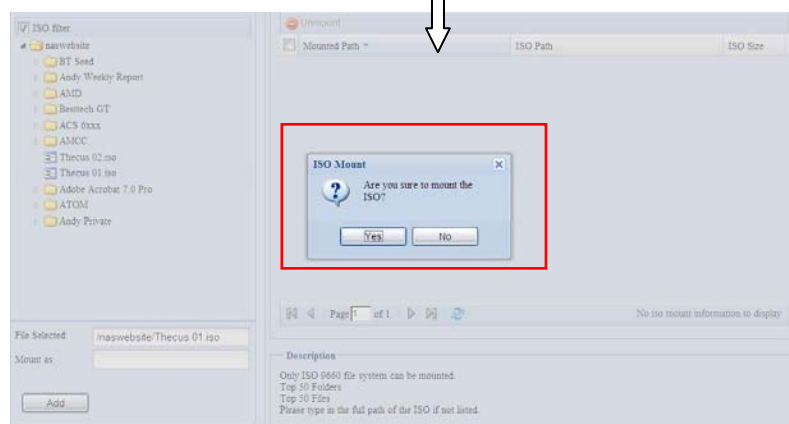

After you have completed to add ISO then the page will displayed all mounted ISO files,

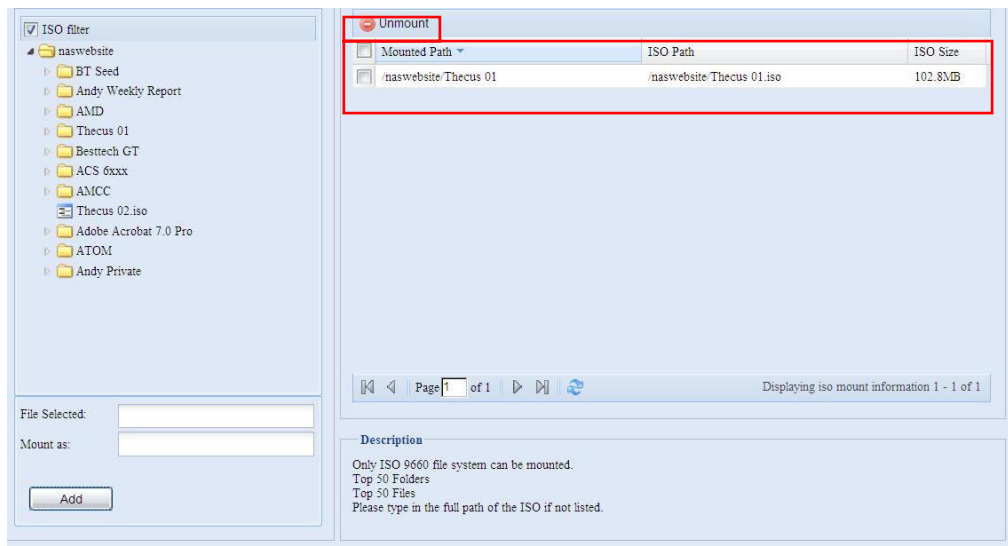


You could click “Unmount” to eliminate mounted ISO file.

## B. Using ISO

The mounted ISO file will be located same share folder with name giving. Please refer the screen shot below.

ISO file “image” has mounted as folder “Image” you could see. The ISO file “Thecus 01” without assign mounting name, system automatically has folder “Thecus 01” created.

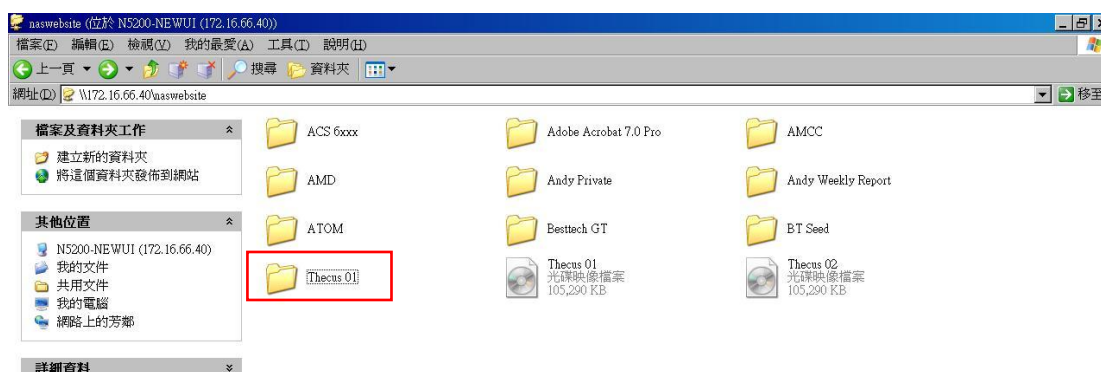


## User and Group Authentication

The N7700 has built-in user database that allows administrators to manage user access using different group policies. From the **User and Group Authentication** menu, you can create, modify, and delete users, and assign them to groups that you designate.

## ADS/NT Support

If you have a Windows Active Directory Server (ADS) or Windows NT server to handle the domain security in your network, you can simply enable the ADS/NT


support feature; the N7700 will connect with the ADS/NT server and get all the information of the domain users and groups automatically. From the **Accounts** menu, choose **Authentication** item and the **ADS/NT Support** screen appears. You can to change any of these items and press **Apply** to confirm your settings.

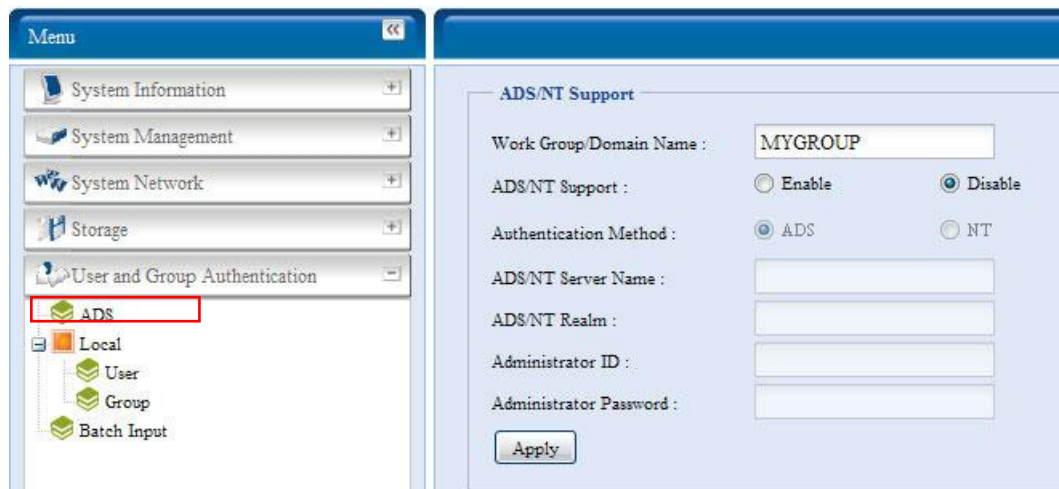

A description of each item follows:

ADS/NT Support	
Item	Description
Work Group / Domain Name	Specifies the SMB/CIFS Work Group / ADS Domain Name (e.g. N7700).
ADS/NT Support	Select Disable to disable authentication through Windows Active Directory Server or Windows NT.
Authentication Method	Select ADS for Windows Active Directory Server, or select NT for Windows NT
ADS/NT Server Name	Specifies the ADS/NT server name (e.g. adservername).
ADS/NT Realm	Specifies the ADS/NT realm (e.g. example.com).
Administrator ID	Enter the administrators ID of Windows Active Directory or Windows NT, which is required for N7700 to join domain.
Administrator Password	Enter the ADS/NT Administrator password.
Apply	To save your settings.

To join an AD domain, you can refer the figure and use the example below to configure the N7700 for associated filed input:

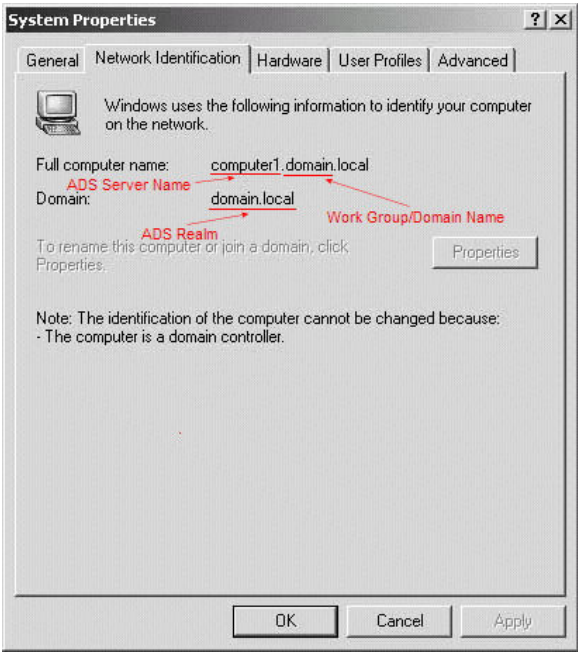


AD Domain Example	
Item	Information
Work Group / Domain Name	domain
ADS Support	Enable
ADS Server Name	Computer1
ADS/NT Realm	Domain.local
Administrator ID	Administrator
Administrator Password	*****

**NOTE**

- The DNS server specified in the WAN configuration page should be able to correctly resolve the ADS server name.
- The time zone setting between N7700 and ADS should be identical.
- The system time difference between N7700 and ADS should be less than five minutes.
- The Administrator Password field is for the password of ADS (Active Directory Server) not N7700.

**Local User Configuration**


From the **Accounts** menu, choose the **User** item, and the **Local User Configuration** screen appears. This screen allows you to **Add**, **Edit**, and **Remove** local users.

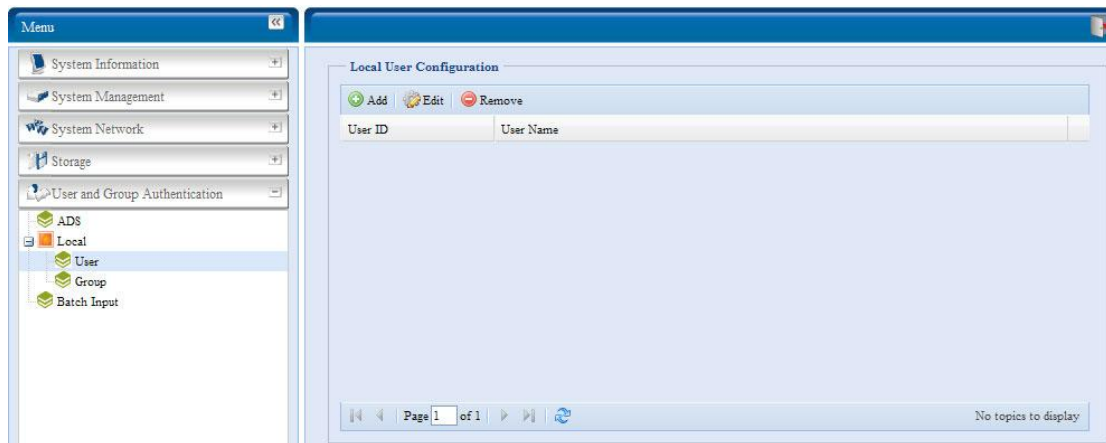

Local User Configuration	
Item	Description
Add	Press the <b>Add</b> button to add a user to the list of local users.
Edit	Press the <b>Edit</b> button to modify a local user.
Remove	Press the <b>Remove</b> button to delete a selected user from the system.

### Add Users

1. Click on the **Add** button on **Local User Configuration** screen, and **Local User Setting** screen appears.
2. On the **Local User Setting** screen, enter a name in the **User Name** box.
3. Enter a **User ID** number. If left blank, the system will automatically assign one.
4. Enter a password in the **Password** box and re-enter the password in the **Confirm** box.
5. Select which group the user will belong to. **Group Members** is a list of groups this user belongs to. **Group List** is a list of groups this user does not belong to. Use the << or >> buttons to have this user join or leave a group.
6. Press the **Apply** button and the user is created.

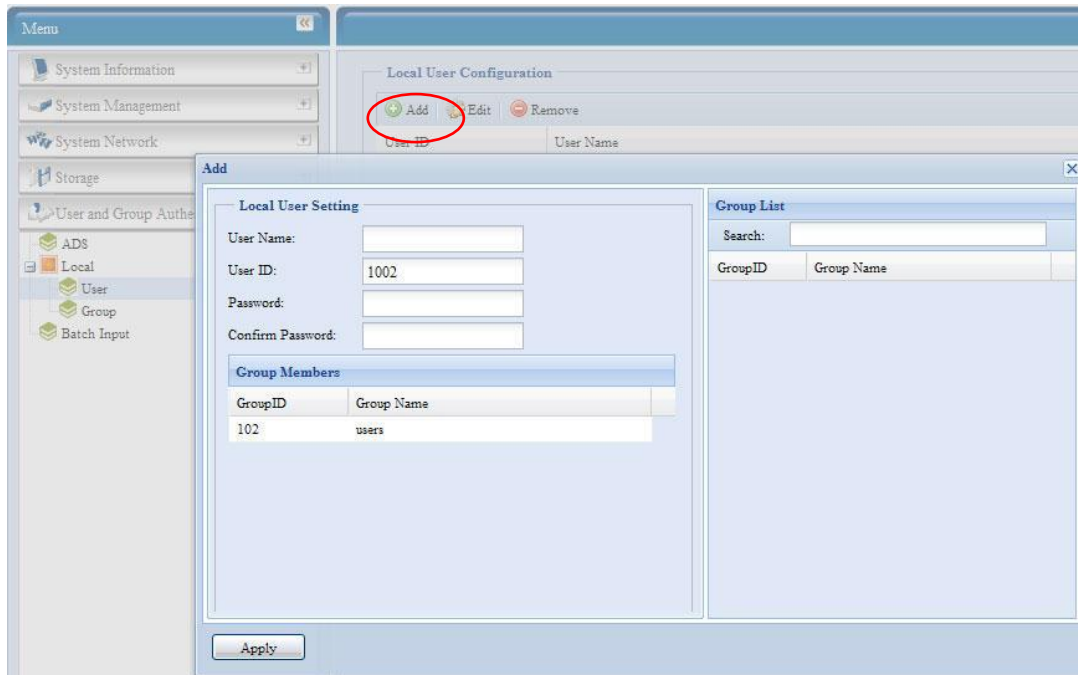


## NOTE

All users are automatically assigned to the 'users' group.

## Edit Users


1. Select an existing user from the **Local User Configuration** screen.
2. Click on the **Edit** button, and **Local User Setting** screen appears.
3. From here, you can enter a new password and re-enter to confirm, or use the << or >> buttons to have this user join or leave a group. Click the **Apply** button to save your changes.

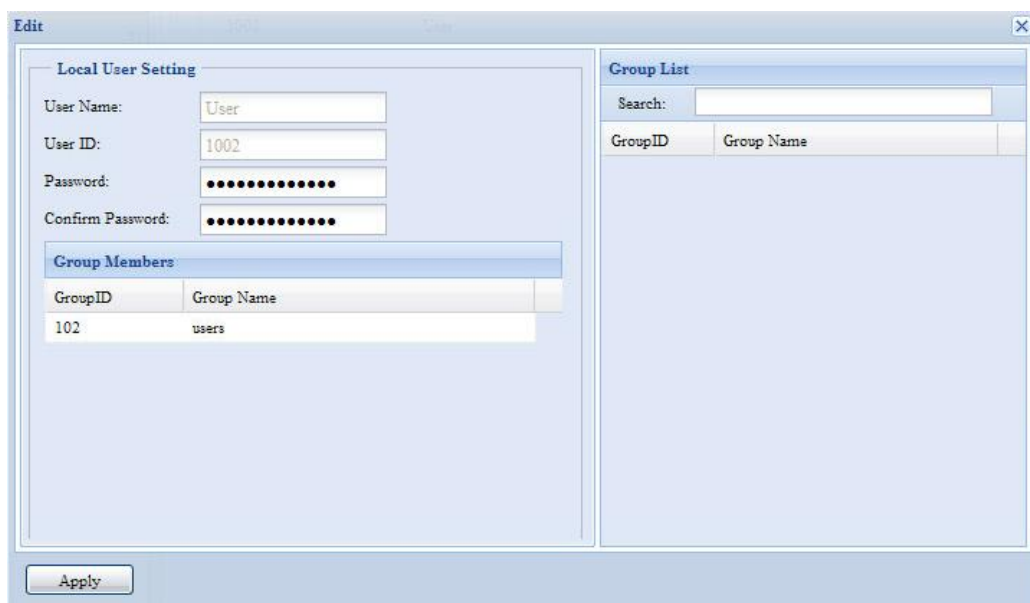




## Remove Users

1. Select an existing user from the **Local User Configuration** screen.
2. Click on **Remove** button and the user is deleted from the system.

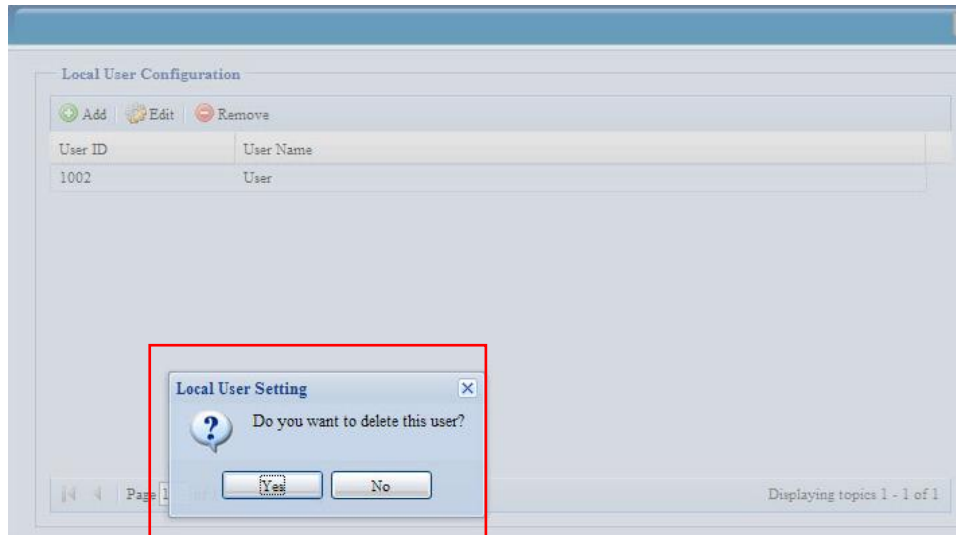

## Local Group Configuration

From the **Accounts** menu, choose the **Group** item, and the **Local Group Configuration** screen appears. This screen allows you to **Add**, **Edit**, and **Remove** local groups.

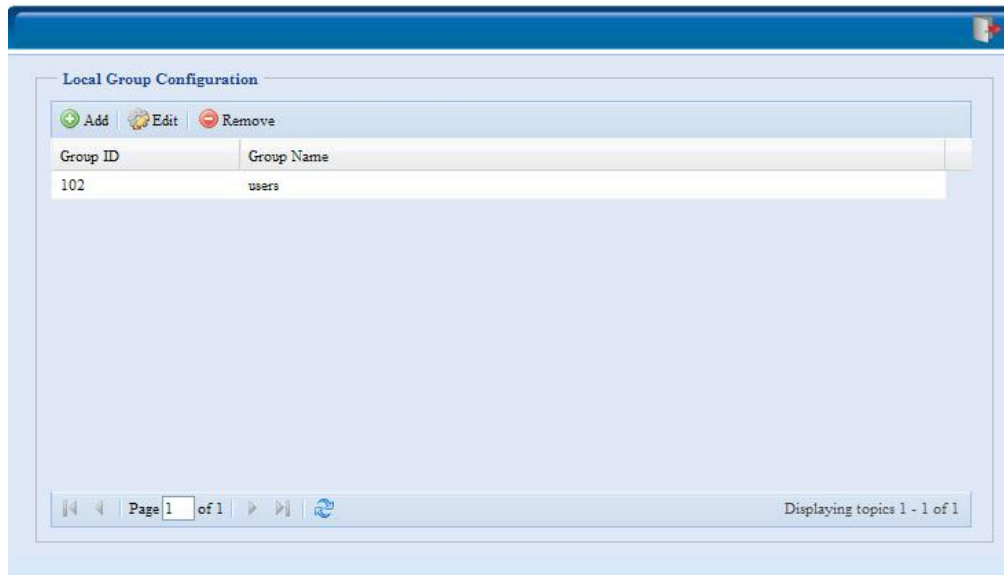

Local Group Configuration	
Item	Description
Add	Press the <b>Add</b> button to add a user to the list of local groups.
Edit	Press the <b>Edit</b> button to modify a selected group from the system.
Remove	Press the <b>Remove</b> button to delete a selected group from the system.

### Add Groups

1. On the **Local Group Configuration** screen, click on the **Add** button.
2. The **Local Group Setting** screen appears.
3. Enter a **Group Name**.
4. Enter a **Group ID** number. If left blank, the system will automatically assign one.
5. Select users to be in this group from the **Users List** by adding them to the **Members List** using the << button.
6. Click the **Apply** button to save your changes.

The 'Add' dialog box is shown with the 'Local Group Setting' tab selected. It contains two input fields: 'Group Name' (empty) and 'Group ID' (containing '103'). Below these is a 'Members List' table with columns 'UserID' and 'User Name', which is currently empty. To the right is a 'Users List' table with columns 'UserID' and 'User Name', containing one entry: '1002' and 'User'. At the bottom is an 'Apply' button.

Local Group Setting	
Group Name:	<input type="text"/>
Group ID:	<input type="text" value="103"/>
Members List	
UserID	User Name

Users List	
Search: <input type="text"/>	
UserID	User Name
1002	User

Apply

### Edit Groups

1. On the **Local Group Configuration** screen, select a group name from the list.
2. Press the **Edit** button to modify the members in a group.
3. To add a user into a group, select the user from the **Users List**, and press the << button to move the user into the **Members List**.
4. To remove a user from a group, select the user from **Members List**, and press the >> button.
5. Click the **Apply** button to save your changes.

The 'Edit' dialog box is shown with the 'Local Group Setting' tab selected. It contains two input fields: 'Group Name' (containing 'Group') and 'Group ID' (containing '103'). Below these is a 'Members List' table with columns 'UserID' and 'User Name', which is currently empty. To the right is a 'Users List' table with columns 'UserID' and 'User Name', containing one entry: '1002' and 'User'. At the bottom is an 'Apply' button.


Local Group Setting	
Group Name:	<input type="text" value="Group"/>
Group ID:	<input type="text" value="103"/>
Members List	
UserID	User Name

Users List	
Search: <input type="text"/>	
UserID	User Name
1002	User

Apply

## Remove Groups

1. On the **Local Group Configuration** screen, select a group name from the list.
2. Press **Remove** to delete the group from the system.

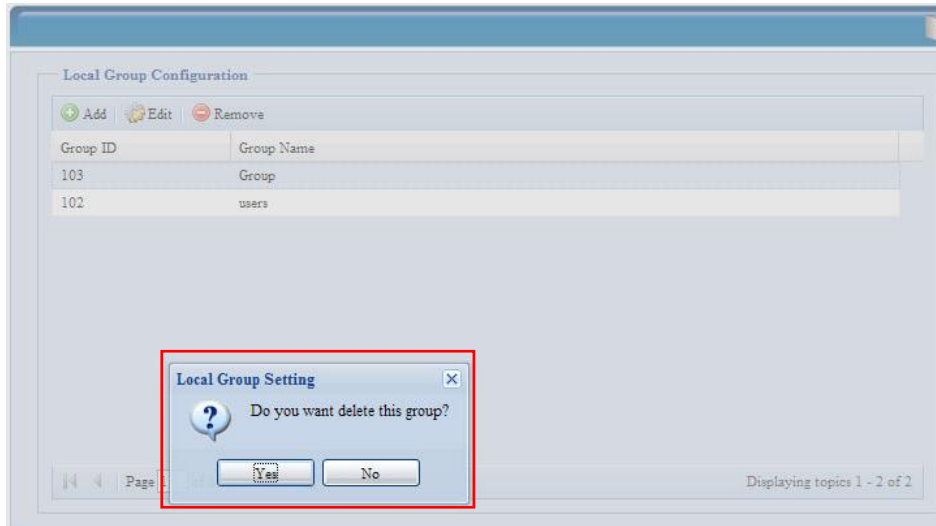


## Batch Create Users and Groups

The N7700 can also add users and groups in batch mode. This enables you to conveniently add numerous users and groups automatically by importing a simple comma-separated plain text (\*.txt) file.

From the **Accounts** menu, click **Batch Mgmt** and the **Batch Create Users and Groups dialogue** will appear. To import your list of users and groups, follow these steps:

6. Click **Browse...** to locate your comma-separated text file.  
The information in the text file should follow this format:  
  
[USERNAME], [PASSWORD], [GROUP]
7. Click **Open**.
8. Click **Import** to begin the user list import.

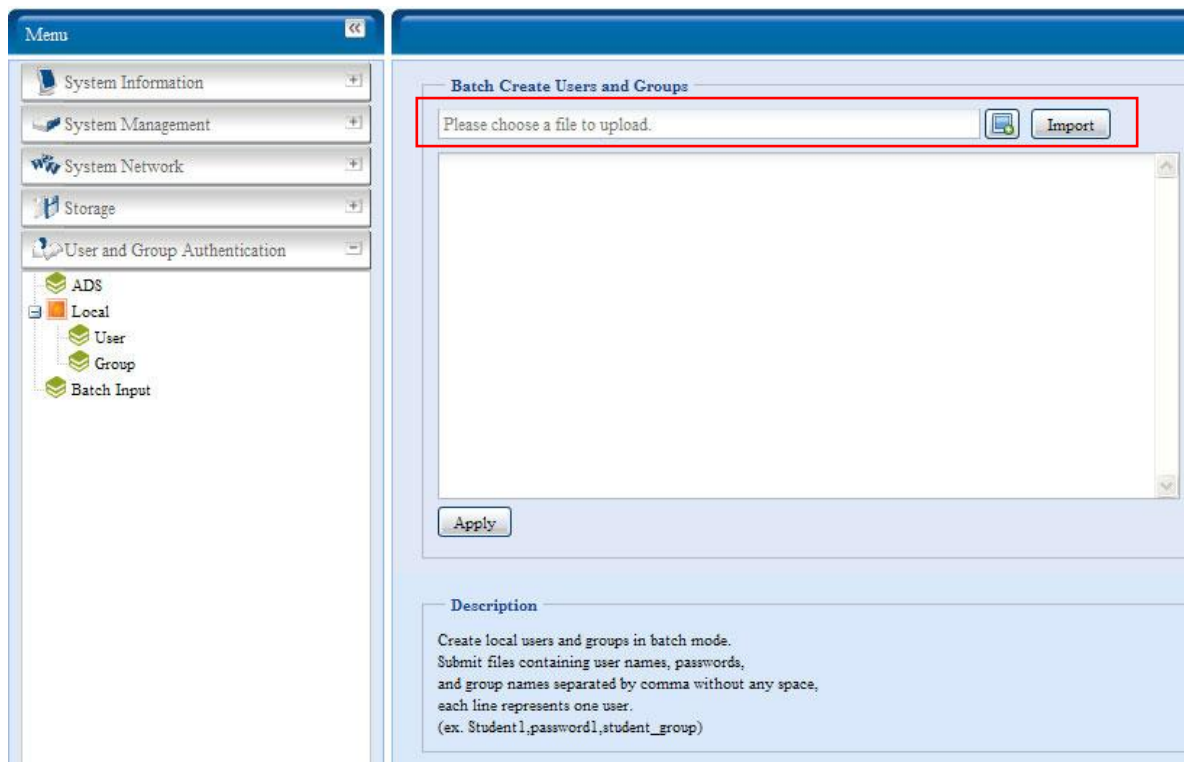


## Application Server

The N7700 supports printer server, and Tunes server. The integrated Print Server allows you to share a single USB printer with all users on the network. The N7700 provides activating the iTunes Server on the device. You will be able to play music files on this device with your iTunes client software directly. The following section shows you how.

## Printer Information

From the **Application Server** menu, choose the **Printer** item, and the **Printer Information** screen appears. This screen provides the following information about the USB printer connected to the USB port.

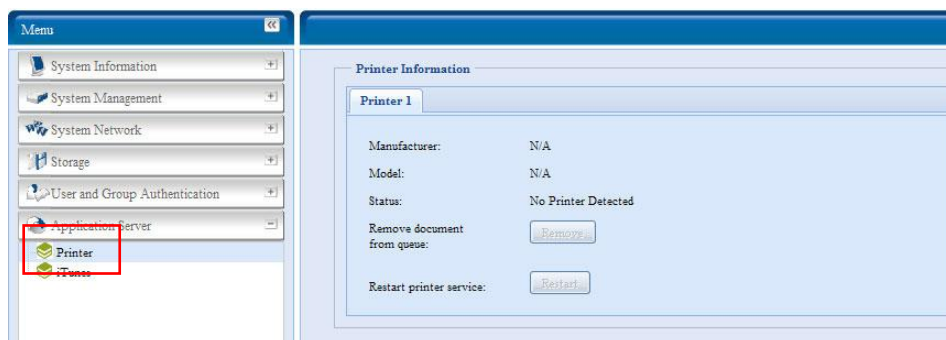

Printer Information	
Item	Description
Manufacturer	Displays the name of the USB printer manufacturer.
Model	Displays the model of the USB printer.
Status	Displays the status of the USB printer.
Remove document from Queue	Click to remove all documents from printer queue
Restart Printer service	Click to restart printer service

If a corrupt print job is sent to a printer, printing may suddenly fail. If your print jobs seem to be locked up, pressing the **Remove All Documents** button to clear the print queue may resolve the issue.

You can configure the N7700 to act as a printer server. That way, all PCs connected to the network can utilize the same printer.

### Windows XP SP2

To set up the Printer Server in Windows XP SP2, follow the steps below:

1. Connect the USB printer to one of the USB ports (preferably the rear USB ports; front USB ports can be used for external HDD enclosures).
2. Go to **Start > Printers and Faxes**.
3. Click on **File > Add Printer**.
4. The **Add Printer Wizard** appears on your screen. Click **Next**.
5. Select the **"A network printer, or a printer attached to another computer"** option.
6. Select **"Connect to a printer on the Internet or on a home or office network"**, and enter **"http://N7700\_IP\_ADDRESS:631/printers/usb-printer"** into the URL field.
7. Your Windows system will ask you to install drivers for your printer. Select correct driver for your printer.
8. Your Windows system will ask you if you want to set this printer as "Default Printer". Select **Yes** and all your print jobs will be submitted to this printer by default. Click **Next**.
9. Click **Finish**.


#### NOTE

- Not all USB printers are supported. Please check Thecus website for a list of supported printers.
- Note that if a multi-function (all-in-one) printer is attached to the N7700, usually only the printing and fax functions will work. Other features, such as scanning, will probably not function.


## Windows Vista

To set up the Printer Server in Windows Vista, follow the steps below:


1. Open **Printer Folder** from the **Control Panel**.

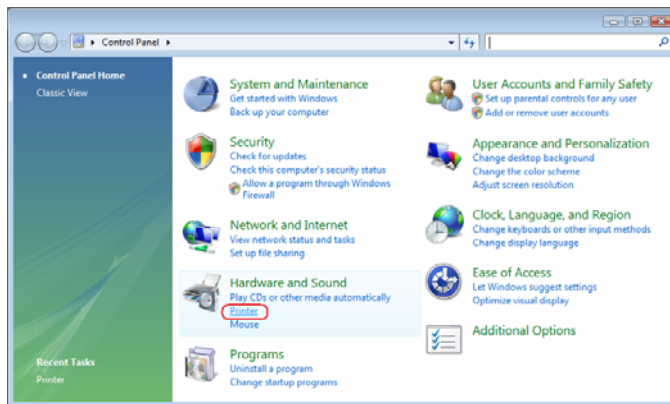


2. Click the right mouse button in anywhere on the **Printers** folder and then select **Add Printer**.

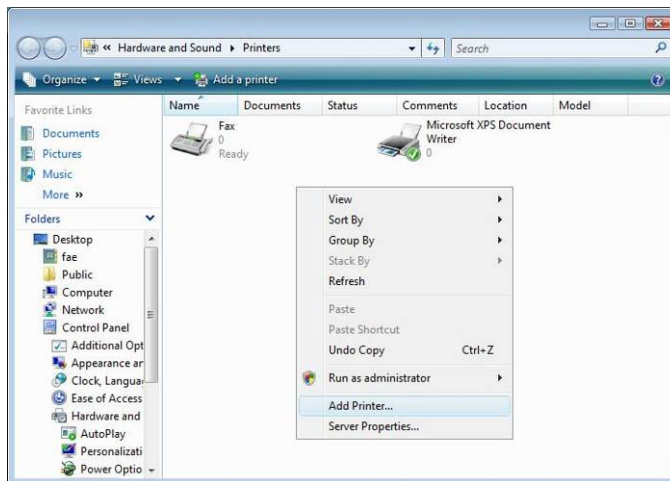

3. Select **Add a network, wireless or Bluetooth printer**.

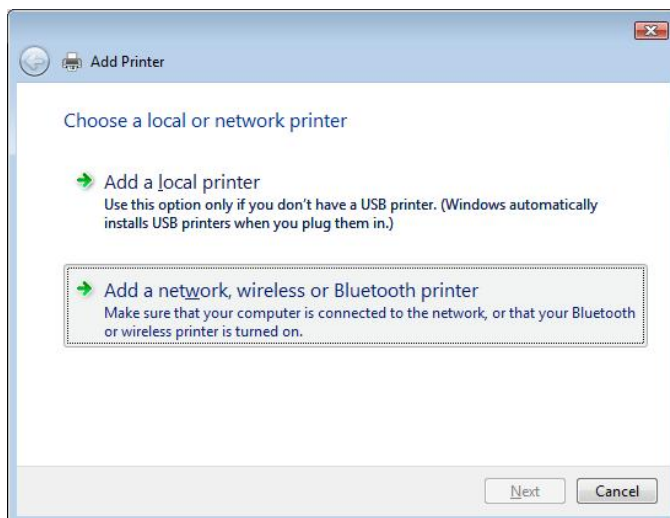


4. Select ***The printer that I want isn't listed***.

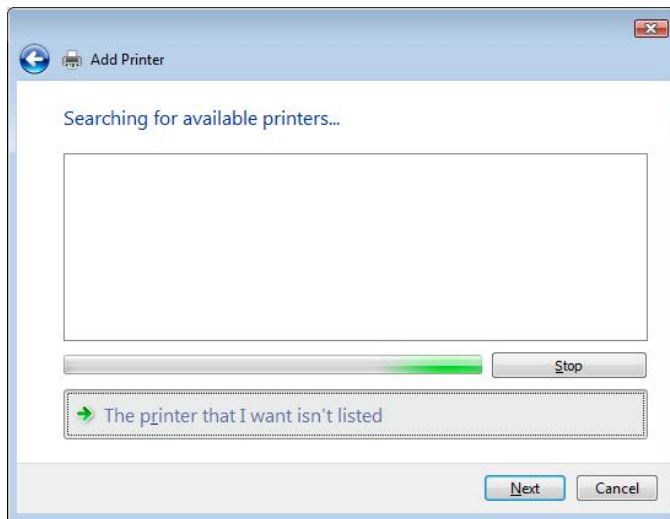


You can press ***The printer that I want isn't listed*** to go into next page without waiting for **Searching for available printers** to finish.

5. Click ***Select a shared printer by name***.

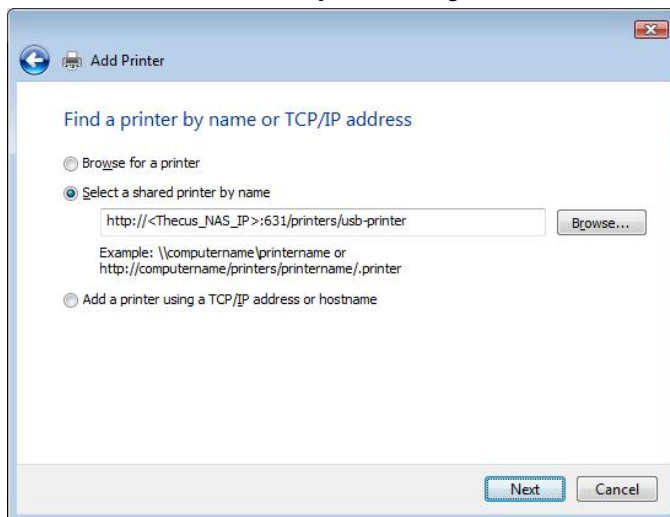


Type `http://<Thecus_NAS>:631/printers/usb-printer` in the box, where `<Thecus_NAS_IP>` is the IP address of the N7700. Click ***Next***.

6. Select or install a printer and then press ***OK***.

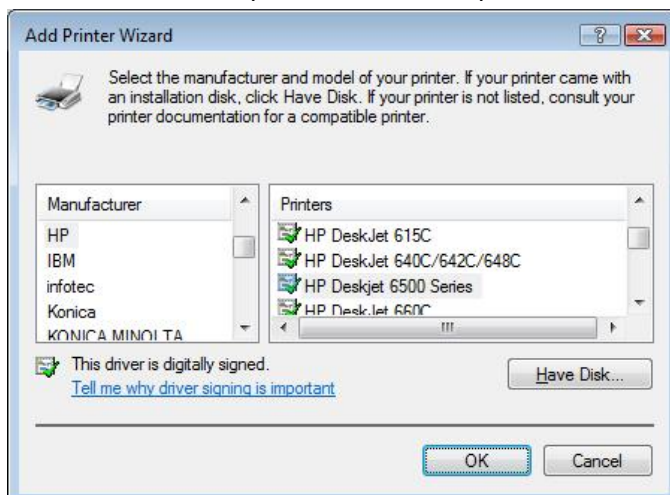


If your printer model is not listed, please contact your printer manufacturer for help.


7. Windows will attempt to connect to the printer.

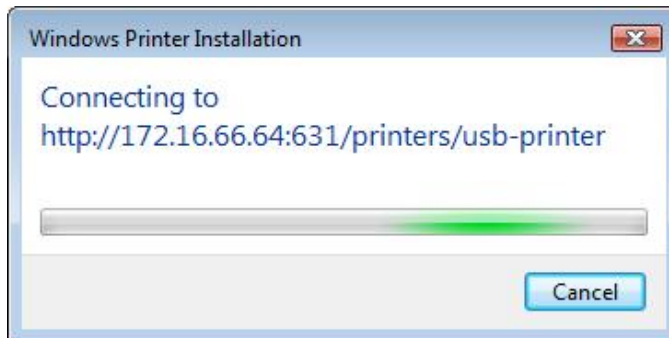

8. You can choose to set this printer as the default printer by checking the **Set as the default printer** box. Click **Next** to continue.

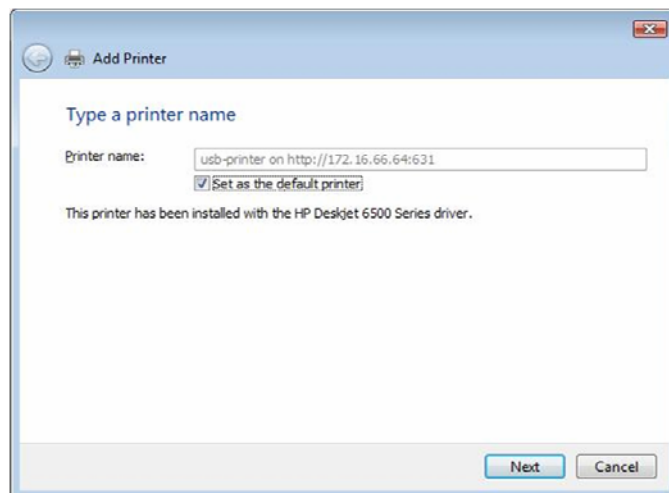

9. Done! Click **Finish**.

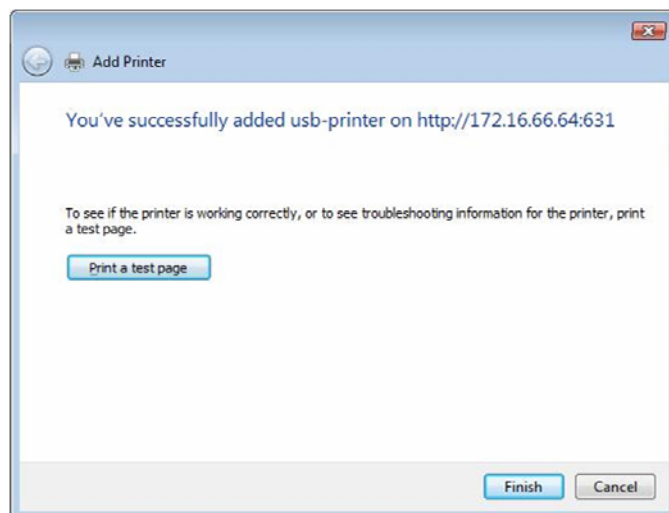




## iTunes® Server

With the built-in iTunes server capability, the N7700 enables digital music to be shared and played anywhere on the network!

From the **Network** menu, choose the **iTunes** item, and the **iTunes Configuration** screen appears. You may enable or disable the iTunes Service from here. Once enabled, enter correct information for each field and press **Apply** to save your changes.

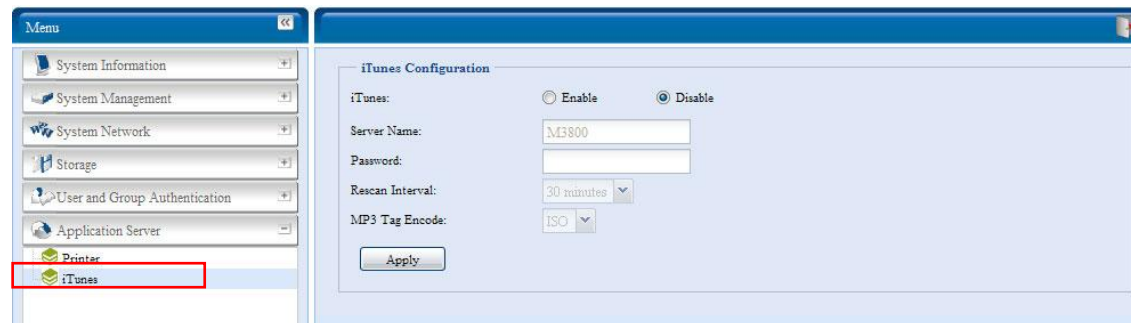

See the following table for detailed descriptions of each field:


iTunes Configuration	
Item	Description
iTunes	Enable or disable the iTunes Service.
Server Name	Name used to identify the N7700 to iTunes clients.
Password	Enter password to control access to your iTunes music.
Rescan Interval	Rescan interval in seconds.
MP3 Tag Encode	Specify tag encoding for MP3 files stored in N7700. All ID3 tags will be sent out in UTF-8 format.

Once the iTunes service is enabled, the N7700 will make all music located in the **Music** folder available for iTunes-equipped computers on the network.

## Module Management

### Module Installation

From the **Module Management** menu, choose the **Module Installation** item and the **Module Management** screen appears. From here, you can install separate software modules to extend the functionality of your N7700.

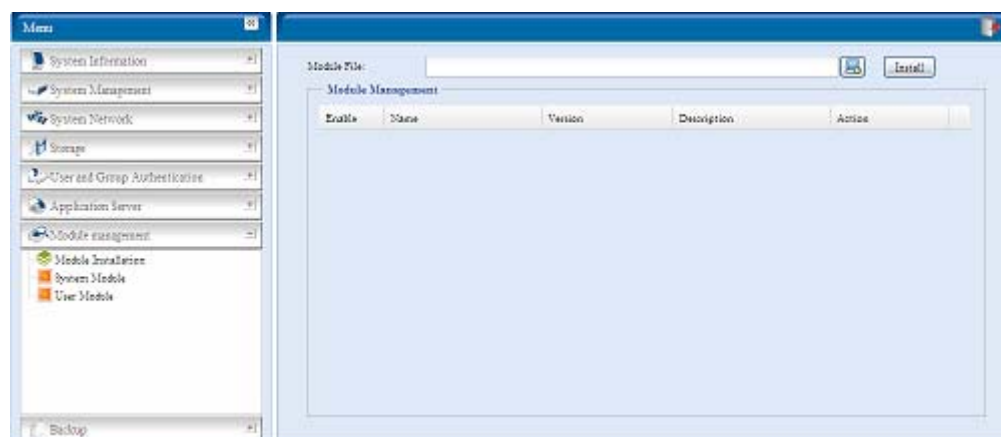

### System Module

The system module is officially provided by Thecus for new features added.

## User Module

The user module is reserved for Thecus fans to build up 3<sup>rd</sup> party functions in the future.

## Backup


There are a number of ways to back up data with the N7700.

### Nsync

You can backup a share folder to another N7700 (Nsync Target) or any FTP server for safe keeping as long as you have appropriate access right on that target. When using Nsync between two N7700s, you have the option to transmit files securely between two N7700s.

If the files on your N7700 are lost for any reason, you can restore those files from the target N7700. To backup files regularly, you can set up a scheduled task to run only once, daily, weekly, or monthly. You can also limit the bandwidth of your Nsync tasks, so other users on the network can share the bandwidth equally.

Under the **Backup** menu, click **Nsync** and the **Nsync** window appears.

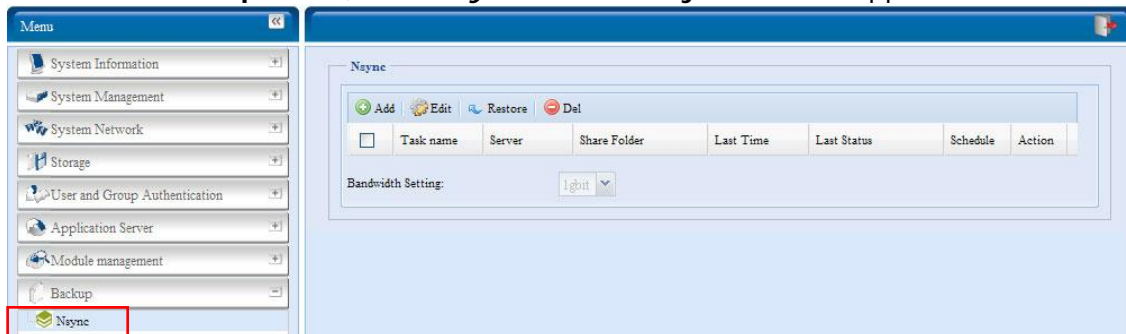

Below is a description of each field:

Nsync	
Item	Description
Add	Click to add a Nsync task
Edit	Click to Edit an Nsync task.
Restore	Restore share folder from an Nsync target.
Del	Click to delete an Nsync task. Backup files on Nsync target is also deleted.
Task name	The name of your Nsync task.
Server	The IP address of your target server
Share folder	The share folder you would want to backup.
Last Time	The time when the last Nsync task was executed.
Last Status	The status of your last Nsync task.
Schedule	Schedule backup of your share folders.
Action	Administrator can run or stop an Nsync task by pressing the action button.
Bandwidth Setting	Bandwidth control on Nsync tasks.

### Add Nsync Task

From the **Nsync** screen, click **Add** to display the **Add Nsync Task** screen.

**Nsync**

**Add Nsync Task**

Task name:

Target Server Manufacturer: ☒ NAS ☐ Legacy FTP Server

Nsync Mode: ☒ Synchronize ( Compare source and target then delete unexist files )  
☐ Incremental ( Copy file from source to target )

Target Server IP address:

Share Folder:

Authorized Username on Target Server:

Password on Target Server:

Test Connection:  Connection test on 10.7.184.1 success.

**Schedule**

Enable/Disable: ☒ Enable ☐ Disable

Time:

Type: ☒ Daily ☐ Weekly ☐ Monthly

**Nsync**

Target Server Manufacturer: ☒ NAS ☐ Legacy FTP Server

Nsync Mode: ☒ Synchronize ( Compare source and target then delete unexist files )  
☐ Incremental ( Copy file from source to target )

Target Server IP address:

Share Folder:

Authorized Username on Target Server:

Password on Target Server:


Test Connection:  Connection test on 10.7.184.1 success.

**Schedule**

Enable/Disable: ☒ Enable ☐ Disable

Time:

Type: ☒ Daily ☐ Weekly ☐ Monthly

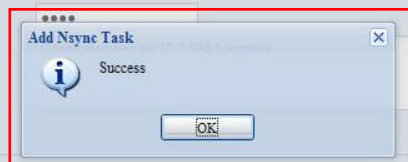

Add Nsync Task	
Item	Description
Task Name	The name of your Nsync task.
Target Server Manufacturer	Select whether the target is a Thcus Product (e.g. N7700) or FTP server.
Nsync Mode	Synchronize mode or Incremental mode .
Target Server IP Address	The IP address of your target server.
Source Folder	The share folder you want to backup.
Authorized Username on Target Server	The account name on the target server.

Password on Target Server	The password for the username on the target server.
Test Connection	Click to check the connection to the Target Server.
Schedule	Enable or Disable schedule backup of your share folders.
Time	The time when the Nsync task will run.
Type	Select whether to run the Nsync task daily, weekly, or monthly. <b>Daily:</b> input the time of day to execute Nsync task. <b>Weekly:</b> input which day of the week to execute the task. <b>Monthly:</b> decide which day of the month to execute the task.
Add	Press <b>Add</b> to submit your settings.

## NOTE

Before starting an Nsync Task, make sure the target server's Nsync Server (or FTP Server) is enabled.

### Setting Up an Nsync Target on an Nsync Device

On the Nsync target server, the administrator of that server has to set up a user account with a folder named "nsync" and grant write access.

1. On the Nsync server, add a user for Nsync source (ex. nsyncsource1). For instructions on how to add a user on the N7700, see **Chapter 4: User and Groups Authentication > Local User Configuration > Add Users**.
2. On the Nsync server, grant that user (ex. nsyncsource1) write access to the **nsync** folder. For instructions on how to set up a folder's ACL, see **Chapter 4: Storage management > Share Folder > Folder Access Control List (ACL)**.
3. Once this is done, the target server will start accepting Nsync tasks from server using that ID and password.

### Setting Up an Nsync Target on Another Device

If you selected "Other Device" when setting up your Nsync task, the N7700 will use the FTP protocol to back up the share folder. On the external storage device, make sure there is a folder named "nsync", and the Auth ID has writable permission in that folder.

### Designating N7700 as an Nsync Target

The N7700 can act as an Nsync server, enabling another Nsync-equipped Thecus NAS at a remote location backup their files to this N7700. From the **System Network** menu, choose the **Nsync Target** item, and the **Nsync Target Server** screen appears.

Nsync Target Server Setting	
Item	Description
Nsync Target Server	Enable or Disable Nsync Target support.

## NOTE

To enable Nsync task to go thru firewall, you have to open port TCP/1194 on your firewall in both directions.

## Thecus Backup Utility

The Thecus Backup Utility is on your Installation CD. When you click on the CD, the Backup Utility will be installed under **Program Groups > Thecus > Thecus Backup Utility**. If it is not installed, you can copy the file (**Thecus Backup Utility.exe**) to a convenient location on your hard disk and double click to execute it.



### NOTE

If you can not find Thecus Backup Utility on your CD, please download it from the Thecus website (<http://www.thecus.com>).

When you execute this utility for the first time, it will ask you whether to create a DB file. Click **Yes**.

1. Click **Add** to create a Backup task. The **Add New Task** dialog box appears.

Add New Task	
Item	Description
Task	Specifies a name for the current task.
Source	Click to specify the source folder/file location.
Incremental	Click to specify whether the backup will be incremental. If unchecked, the backup will be a full backup.
Destination	Click to specify the destination folder/file location.
Excluded extensions	Files with these file name extensions will be skipped and not back up to the destination.
Comments	If you wish, enter comments here for your records.

2. To schedule the task to run at regular intervals, click on the **Schedule** icon for that task. You can schedule the task to run **Monthly** or **Weekly**.
3. To check the log for that task, click on the **Log** icon for that task.

### NOTE

Thecus Backup Utility also supports MAC OS X. Just copy the Thecus Backup Utility.dmg to your MAC OS X machine and double click to execute it.

## Windows XP Data Backup

If you use Windows XP Professional, you can also use the Windows Backup Utility (Ntbackup.exe) to backup your files.

If you use Windows XP Home Edition, follow these steps to install the utility:

1. Insert the Windows XP CD into a drive and double-click the **CD** icon in **My Computer**.

2. When the Welcome to Microsoft Windows XP screen appears, click **Perform Additional Tasks**.
3. Click **Browse this CD**.
4. In Windows Explorer, navigate to **ValueAdd > Msft > Ntbackup**.
5. Double-click **Ntbackup.msi** to install the backup utility.

Once installed, you can use the Windows Backup Utility by following the steps below:

1. Click **Start**, and point to **All Programs > Accessories > System Tools > Backup** to start the wizard.
2. Click **Next** to skip past the opening page. Choose **Backup files and settings** from the second page, and then click **Next**.
3. Select which option you want to back up.
4. Click **Next** and in the Backup Type, Destination, and Name page, specify a back up location using the **Browse** button.
5. Find and select the drive that specifies your N7700 as your backup destination and click **Next**.
6. Click **Next** to display the wizard's final page and click **Finish** to start backing up.

### Apple OS X Backup Utilities

Mac OS X does not include any backup software. However, there are a number of backup solutions available for the Mac OS X, including: [iBackup](#), [Psyncx](#), [iMSafe](#), [Rsyncx](#), [Folder Synchronizer X](#), [Tri-BACKUP](#), [Impression](#), [Intego Personal Backup](#), [SilverKeeper](#), and Apple's dotMac Backup utility to name just a few. To find even more freeware and shareware backup utilities to choose from, go to [VersionTracker](#) or [MacUpdate](#) and search on "backup".

## Chapter 5: Using the N7700

### Overview


Once the N7700 is setup and operating, users on the network may manage all varieties of digital music, photos, or files by simply using their web browsers. To manage your personal files or access public files on the N7700, just enter its IP address into your browser (default IP address is `http://192.168.1.100`), and you will be taken to the **N7700 Login** page.

#### NOTE

Before proceeding, make sure that WebDisk Support or Secure WebDisk Support is enabled in the Service Support screen in the system's **Network** menu. See Service Support in Chapter 4: System Network > HTTP/Web Disk.

### Login Page

To login to the system, enter your user name and password, and select Web Disk or Photo server then click **Login** to log into the system. You will be taken to the **selected** interface.

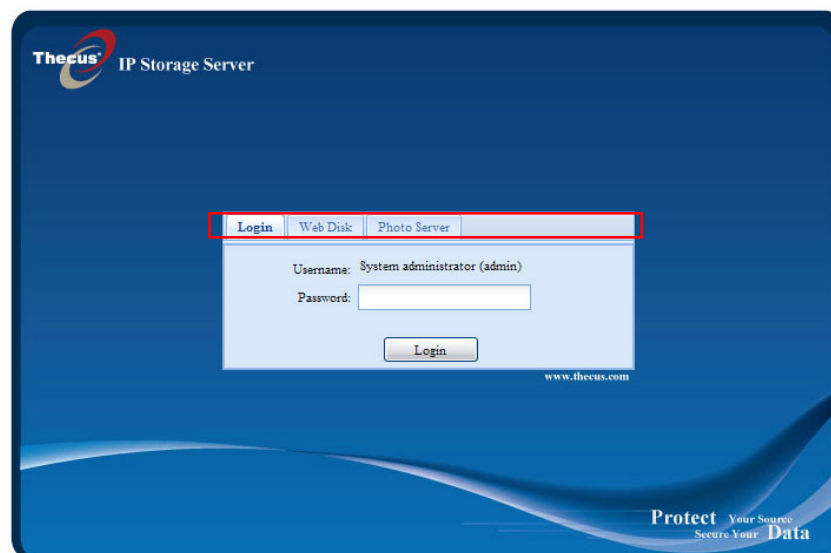

### Using WebDisk


The N7700 provides a WebDisk function that allows you to access the system over the Internet from any browser.

1. In the Login page, type in the User ID and password that were previously set for you in the Accounts menu. See **Chapter 4: User and Group Authentication > Local User Configuration**.
2. The WebDisk page appears showing folders made currently available to you via the **Access Control List (ACL)**.
3. Click on a folder name to enter the folder.
4. The folder's page appears displaying files and folders. Click on a file to download the file.
5. Buttons on the folder page allow you to create a new folder, upload files and delete files in the folder.

6. To create a new folder within the current folder, press the New folder button. When the screen appears enter a name for the folder. Press OK to create the folder.
7. To upload a file from your computer to the current folder, press the New file (upload) button. When the screen appears, press Browse and locate the file to upload. Press **OK** and the file is uploaded to the current folder.
8. To delete a file or folder, select the file or folder's check box. Press the Delete selected items button. You can also check the check box as the red circle indicates to select all files and folders in this folder.



To access folders with access control, you must first login with a local user account.

For more information on how to setup user rights to the folders, please check **Chapter 4: Storage Management > Share Folder > Folder Access Control List (ACL)**.

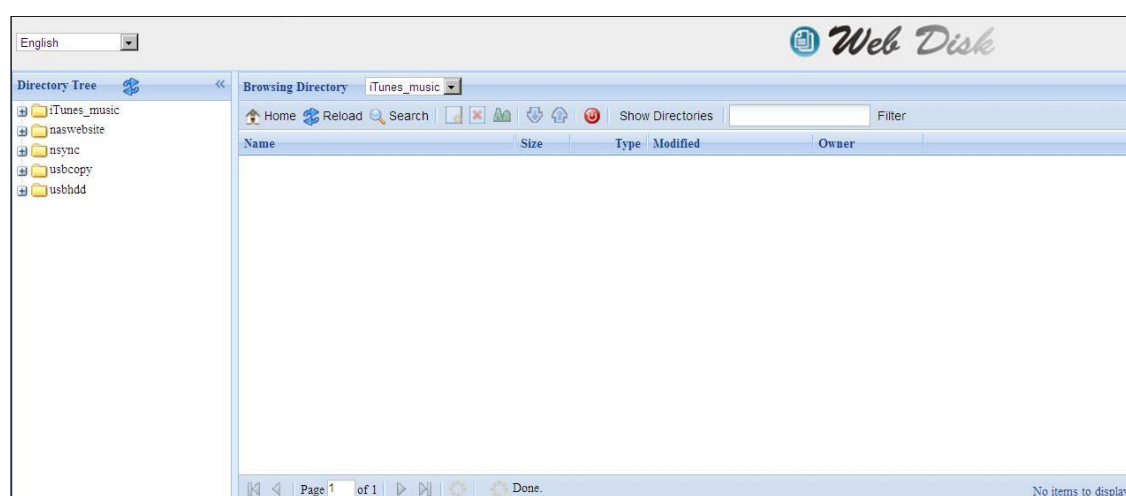


Folder Page Button	
Button	Description
Directory Tree	List all directory trees per login user's privilege.
Browsing Directory	Browsing selected directory of its folders and files.
Home	Go back to the web disk directory layer.
Reload	Re-load the current list.
Search	Search files in the current web disk directory. (Must input the complete file name.)
(new file/Directory)	Creates a new folder or directory.
(delete)	Deletes selected files or folders.
(Rename)	Rename a directory or file.
(download)	Download a file to current folder of your computer.
(upload)	Upload file from your computer to current web disk folder.



 (Admin)	Change password and confirm new password.
 (logout)	To logout of the web disk interface.
Show Directories	Show the files and folders in the directory.
Filter	Search files in the directory. (You can only input some word string.)
Name	Displays the names of folders and files.
Size	Shows the size of folders and files.
Type	Displays the type of folders and files.
Modified	Shows the time of most recent modification of folders and files.
owner	Owner of the file.

There is also the way by using right click button to bring up context windows as short cut to operate what you needed.

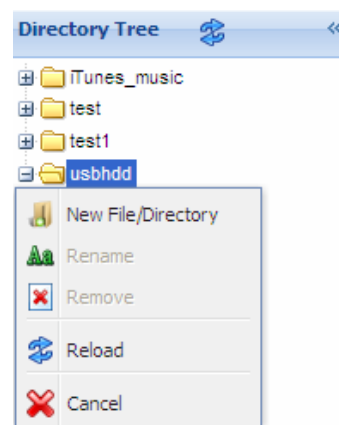

## Photo Server

Using the Photo Server, users can view and share photos, and even create their own albums right on the N7700.

You will see your own Photo Gallery and all public Photo Albums on the network.


To manage any picture files, you must first select the item by clicking the box.






## Windows XP Publishing Wizard

There are many ways for a local user to upload pictures into their photo album. Users of Windows XP can upload their pictures using the Windows XP Publishing Wizard.


1. Click on the **XP Publishing Wizard** icon on top right corner. 
2. The **XP Web Publishing Wizard Client** screen appears. Click on the link to install the Publishing Wizard.




3. Windows XP will ask whether you want to run or save this file. Click **Save** to save the register file.

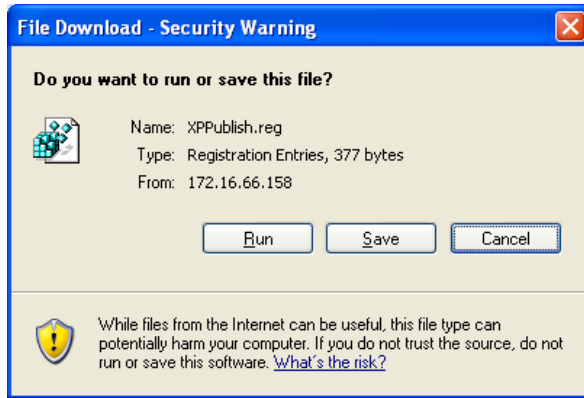

4. Once the register file is installed, use the Windows file manager to browse the folder that contains the picture you want to publish. On the left pane, there will be an icon labeled **"Publish this folder to the Web"**.

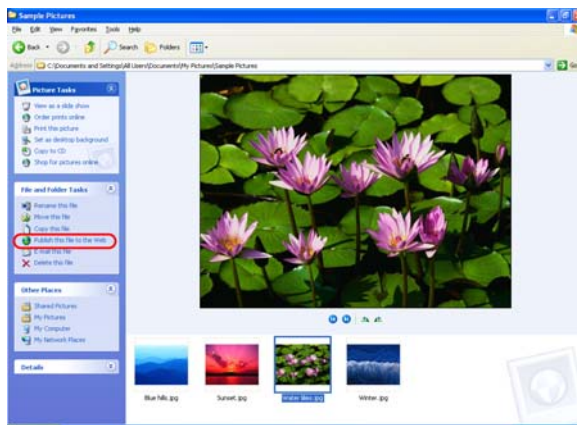


5. Click on this icon and **Web Publishing Wizard** will start.

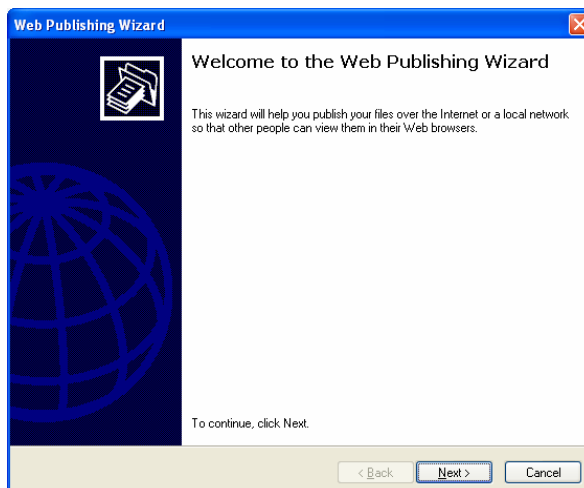


6. Select the pictures you want to publish to the Photo Web Server by placing a check mark on the top left hand corner of the picture. Click **Next**.




7. Your PC will start to connect to the Photo Web Server.
8. Select **N7700 Photo Gallery Wizard** to publish your pictures to the N7700.

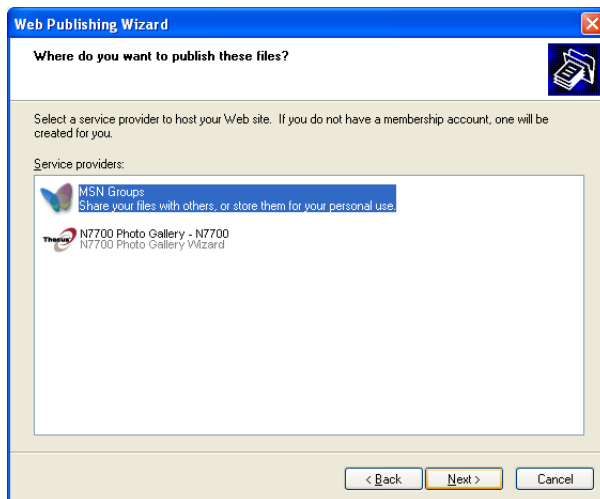


9. Login into the N7700 with your local user name and password.

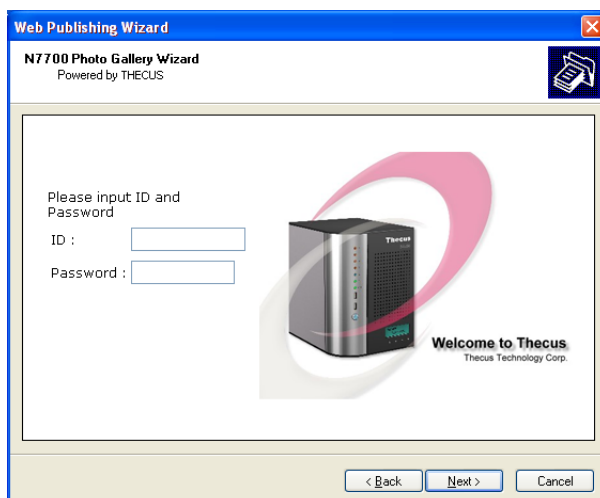


10. Create your album by entering an album name and clicking on the **Create Album** button.

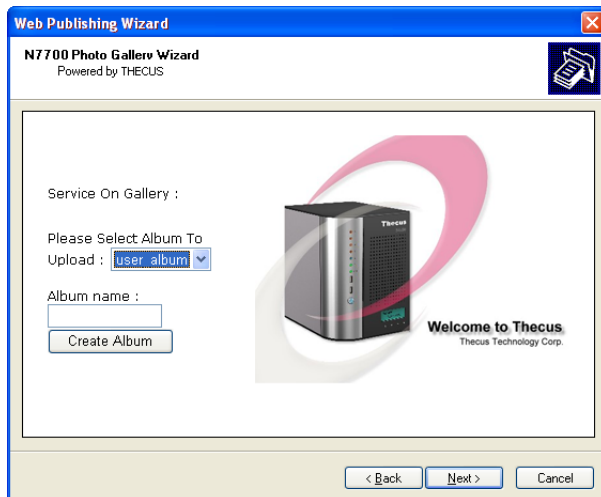


11. Select the album you want to upload your pictures to.
12. Confirm the target album.

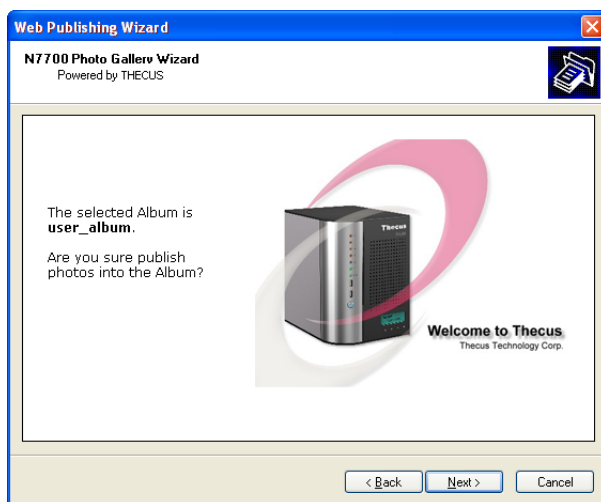

13. Windows will show you that the picture upload is in progress.

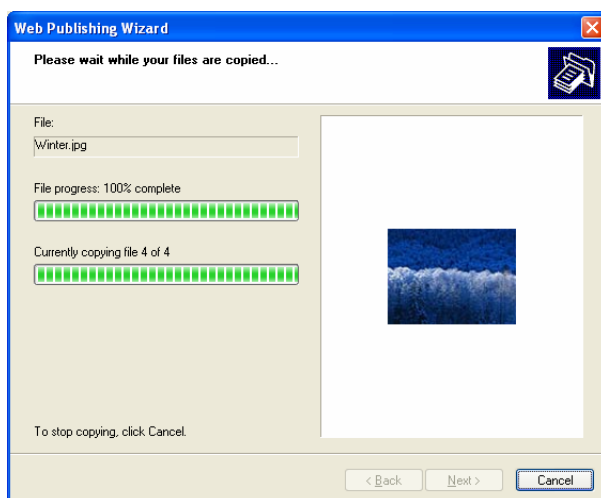

14. When the upload is finished, the Wizard will ask you whether if you want to go to the website. Click **Finish** to go to your Photo Web Server.

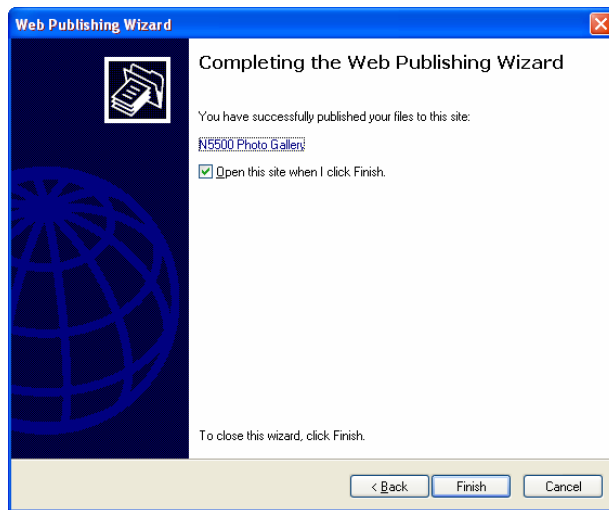

15. Click on the user's icon to go to that user's album.



16. You will see the user's album list. Click on **Album**.



17. Finished! You will see the pictures just selected in the album.



## Managing Albums and Photos

Icon	Function	Description
	Make Cover	Make selected photo your cover picture.
	Back	Return to the previous screen.
	Add	Add a new album or photos.
	Modify	Edit the name and description of the selected album or photo. Each name is limited to 20 characters and each description is limited to 255 characters.
	Delete	Delete the selected albums or photos.

### NOTE

- Only logged in users will see these icons.
- To prevent system errors, the N7700 sets the following limitations on photo files:
  - Each file upload is limited to a size of 8MB. Files exceeding 8MB will NOT be uploaded and no error message will appear.
  - Only these photo file types will be uploaded: \*.jpg, \*.gif, \*.bmp, \*.png, \*.pcx, \*.psd, \*.tiff.
  - If duplicate file names exist during upload process, system will add a number in front of the original file name (abc → 1abc).

## Creating Albums

To create a photo album, follow the steps below:

1. Click the **Add** button to create a new album.
2. Enter a name for the album, and enter a description if you wish. Then, click on the **Create Album** button.

## Password Protecting Albums

If you would like to put a password on a particular album, follow these steps:

1. Select the album to be protected, click on the **Edit** button, and the **Album Edit** screen will appear.
2. The owner of the album can enter an album password to protect the album, so that only people with the correct password can view the album.

## Uploading Pictures to Albums

Uploading pictures to albums using the Web User Interface is easy:

1. When the album is created, click the album icon to enter the album. Initially the album is empty.
2. Click the **Add** button to upload pictures into the album. The **Upload Photos** screen will appear. Users can select and upload up to 8 pictures at a time.
3. Once the picture is uploaded, you can view it in the album. The owner of the album can delete or modify the pictures with the **Delete** or **Modify** buttons on the top right hand corner

## EXIF Information

While viewing pictures, you can also have the N7700 display the EXIF information for each photo.



Simply click the **EXIF** button to display EXIF information. To hide this information, click the **EXIF** button again.



## Slide Shows

Slide shows are a great way to enjoy pictures stored on your N7700.

You can click on the **Start Slide Show** icon on the top right hand corner to start the slide show.



To stop the slide show, click on the **Stop Slide Show** icon on the top right hand corner.

## Mapping a Client PC to the N7700

You can map share folders on the N7700 so that you can access them as if they were drives on your computer. You can connect to the shared network folders on the N7700 as follows:

### Windows

1. Go to the **My Computer** folder in Windows.
2. In the menu bar, select **Tools** and then **Map Network Drive...**
3. The **Map Network Drive** window appears.
4. Assign a drive letter for the share folder.
5. Click the **Browse** button to find the folder over your network. Alternatively, you may enter the folder name you wish to connect to or enter its IP address. (i.e. \\192.168.1.100\share)
6. Click **Finish**. When the **Connect As...** window appears, enter your user name and password.
7. Click **OK**. The share folder appears as the drive you assigned. You can now access this folder as though it were a drive on your computer.

### Apple OS X

On an Apple computer, you can connect to shared computers and servers using a network address.

1. Choose **Go > Connect to Server...**
2. Enter the network address for the server in the Server Address text box.  
When connecting using SMB/CIFS protocol, type:  
smb://192.168.1.100/Folder1  
When connecting using AFP protocol, type:  
afp://192.168.1.100/Folder1  
Click **Connect**.
3. When MAC OS X is trying to connect N7700, it will ask for a User Name and Password which has access to the folder.
4. When MAC OS X has connected to the N7700 successfully, an icon representing the folder will appear on the MAC OS X desktop. You can access the folder by double clicking on the icon.


## ***Mapping the N7700 as an iSCSI Drive***

With the N7700, you are able to map it as an iSCSI drive. With iSCSI, you can remotely access the N7700 at great speeds, as if it were installed as a local drive in your computer.


To do this, simply follow the steps below:

### **Windows 2000/XP**


1. First, download the iSCSI Initiator from the Microsoft website (<http://www.microsoft.com>). You can find this software by entering iSCSI Initiator into the search box on their homepage.
2. Once the download is complete, install the iSCSI Initiator by double-clicking the EXE file. You may be presented with the following security warning. Click **Run** to continue.

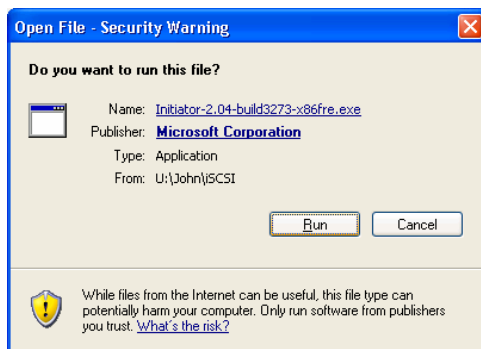


3. You will now install the iSCSI Initiator using the Setup Wizard. Click **Next** to continue.

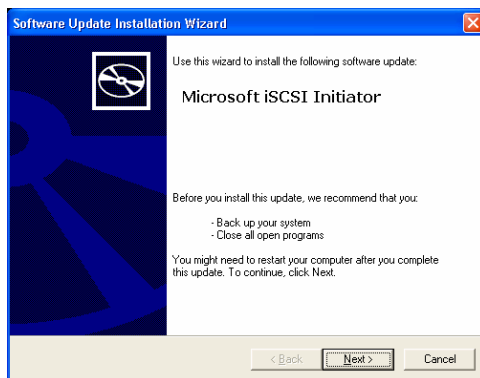


4. Leave the default selections and click **Next**.

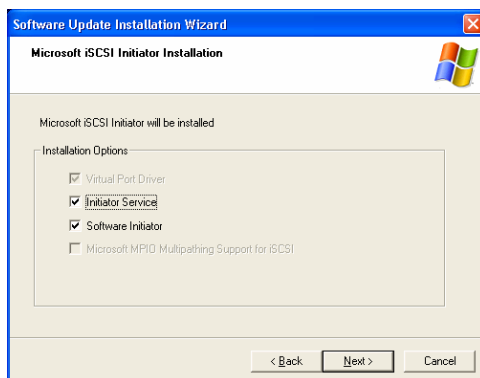

5. Read the license agreement. To continue with the installation, click **I Agree** and then click **Next**.

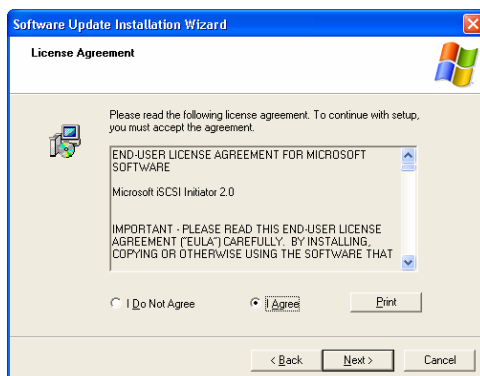


6. The iSCSI Initiator will now install automatically. Click **Finish** once completed.

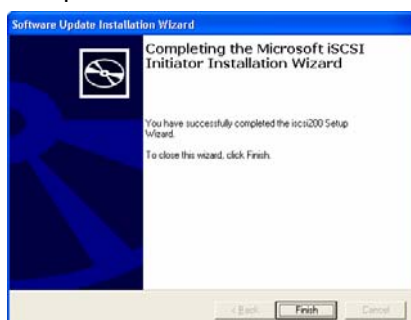


7. Start the iSCSI Initiator by double-clicking its icon on the desktop. The iSCSI Initiator properties window will appear.




8. Select the **Discovery** tab. Under **Target Portals**, click **Add**.

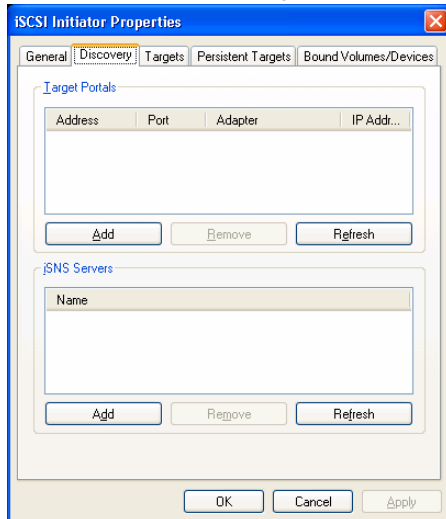


9. Enter the IP address of the N7700. Click **OK**.

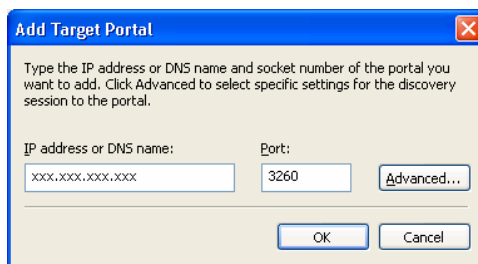


10. On the **iSCSI Initiator Properties** window, select the **Targets** tab. With the iSCSI target highlighted, click **Log On**. The **Log On to Target** dialogue will appear.

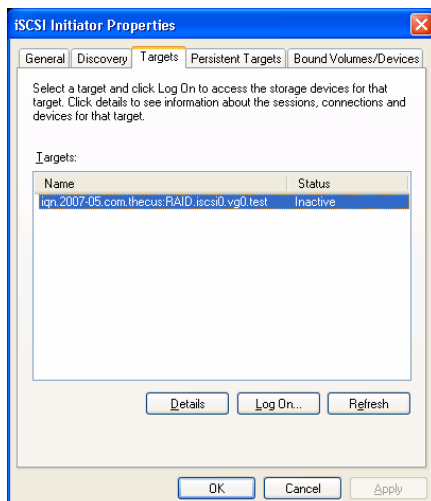


11. If you have not enabled CHAP, click **OK** to continue.

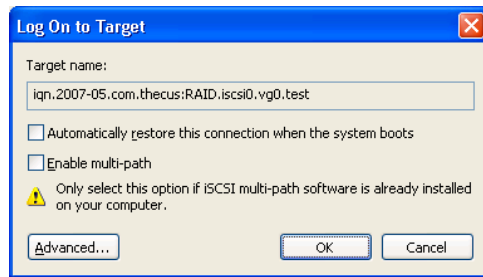


If you have enabled CHAP, click **Advanced**. Under Advanced Settings, check the **CHAP login information** checkbox and enter your username and password. Click **OK**.

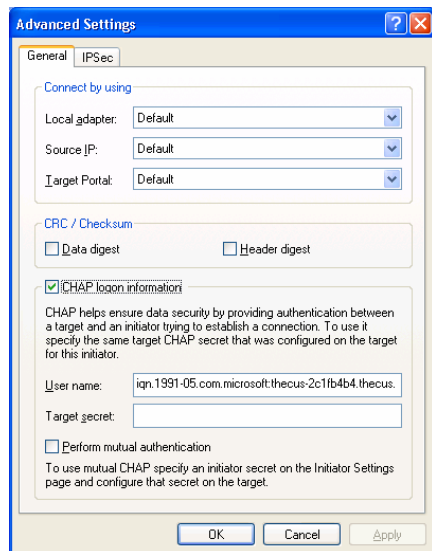

12. Right click **My Computer** on the desktop and select **Manage**.

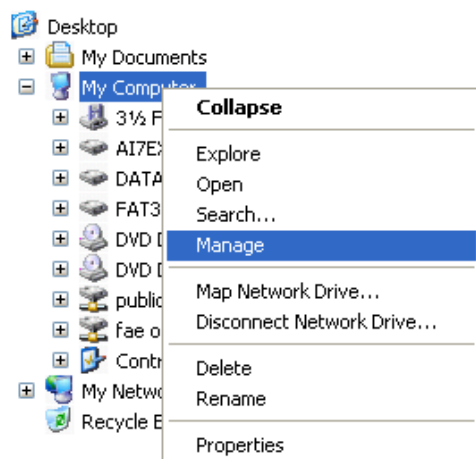

13. Click on Disk Management and you will see a new hard disk listed.

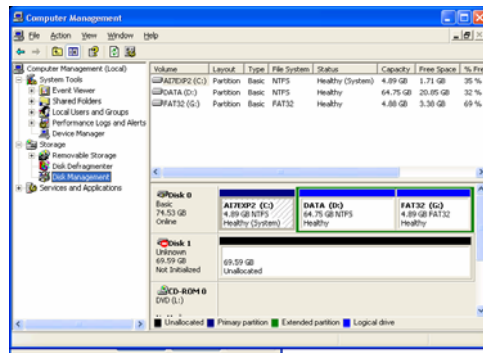

14. Initialize the new hard disk and you will then be able to use the iSCSI target as a local drive.

## Windows Vista

Because Windows Vista has the Microsoft iSCSI Initiator pre-installed, you will not have to install this piece of software. Instead, start the iSCSI Initiator and follow steps 8-14 to map the N7700 as an iSCSI drive.

## Chapter 6: Tips and Tricks

### **USB and eSATA Storage Expansion**

The N7700 supports external USB hard disks through its four USB ports. Once a USB hard disk has successfully mounted, the entire volume will be linked automatically to the default USB HDD folder. The N7700 supports up to 4 USB external storage devices. All file names on the USB disk volume are case sensitive.

The N7700 also supports eSATA hard disks with its eSATA port.

Before attaching an eSATA or USB disk drive to N7700, you have to partition and format it on a desktop computer or a notebook first. The attached device will be located at \\192.168.1.100\usbhdd\sdf1 where 192.168.1.100 means the IP address of N7700 and sdf1 stands for the first partition on disk #6, the eSATA or USB disk drive. If it is an NTFS partition, NAS users can open or copy files from \\192.168.1.100\usbhdd\sdf1 but cannot add new files or modify existing files.

#### **NOTE**

If you want to write to an USB storage device, the file system must be FAT32.

USB Storage	FAT32 Partition	NTFS Partition
Read	OK	OK
Write	OK	-

### **Adding a Spare Disk**

With a RAID 1, RAID 5, RAID 6, or RAID 10 volume, you can add a spare disk after the initial RAID is setup. To add a spare disk, follow the steps below:

1. On the **RAID Configuration Screen**, tick the checkbox of the hard disk you wish to designate as a spare disk.
2. Click **Add Spare**. The disk will be configured as a spare disk. The system automatically rebuilds the spare disk when one of the disks in the RAID set fails.

### **Remote Administration**

You can set up your N7700 for remote administration. With remote administration, you can access your N7700 over the Internet, even if your N7700 is behind a router. This is especially useful if you are traveling and suddenly need a file from your N7700.

Setting up remote administration is a three-part process, and will require the following equipment:

- Thecus N7700 NAS device
- Cable / DSL Router with Dynamic DNS support
- Home PC
- Internet Connection

#### **NOTE**

Router setup will differ slightly depending on router used. For this example, we will use the Asus WL500g because it has support for Dynamic DNS. Contact your router hardware vendor for setup help.

## Part I - Setup a DynDNS Account

1. Go to <http://www.dyndns.org> from your home PC.
2. Click on the **Sign Up Now** link.
3. Check the Check boxes, select a user name (i.e.: N7700), enter your email address (i.e.: xxx@example.com), check **Enable Wildcard**, and create a password (i.e.: xxxx).
4. Wait for an email from [www.dyndns.org](http://www.dyndns.org).
5. Open the email and click on the link to activate your account

## Part II - Enable DDNS on the Router

1. Go to the router setup screen and select **IP Config > Miscellaneous DDNS Setting** from your Home PC.
2. Click on **Yes** for **Enable the DDNS Client?**
3. Select **www.dyndns.org**.
4. Go to router setup screen, and enter the following information:
  - a. User Name or E-mail Address: **xxx@example.com**
  - b. Password or DDNS Key: **xxxx**
  - c. Host Name: **www.N7700.dyndns.org**
  - d. Enable wildcard? Select **Yes**
  - e. Update Manually: Click **Update**

## Part III - Setting up Virtual Servers (HTTPS)

1. Navigate to **NAT Setting > Virtual Server**.
2. For **Enable Virtual Server?**, select **Yes**
3. Setup the HTTPS Server
  - a. **Well-Known Applications**: Select **User Defined**
  - b. **Local IP**: Enter **192.168.1.100**
  - c. **Port Range**: **443** (the default HTTPS port setting on the N7700)
  - d. **Protocol**: select **TCP**
  - e. Click **Add**.
  - f. Click **Apply**.
4. Test the HTTPS connection from another computer on the Internet
  - a. From a remote computer, open your browser and enter **https://www.N7700.dyndns.org**
  - b. You should see the login page of N7700.

## Firewall Software Configuration

If you are using a software firewall (i.e. Norton Internet Security) and are having trouble connecting to the N7700, you can try the following steps:

1. Double click the **NIS** icon on system tray, and then configure the **Personal Firewall**.
2. On the **Programs** page, find the **SetupWizard.exe** and change its permission to "Permit All". If it's not in the program list, use the **Add** or **Program Scan** buttons to find it.
3. On the **Networking** page, manually add N7700 IP address (i.e. 192.168.1.100) to the **Trusted** list.



## ***Replacing Damaged Hard Drives***

If you are using RAID 1, RAID 5, or RAID 6 you can easily replace a damaged hard drive in the Thecus N7700 while keeping your data secure with the system's automatic data recovery.

### **Hard Drive Damage**

When a hard drive is damaged and data in the RAID volume, the system LCD will display warning message also the system beeps.

### **Replacing a Hard Drive**

To replace a hard disk drive in the N7700:

1. Remove the tray with the damaged hard disk.
2. Unscrew the damaged hard disk and remove it from the tray.
3. Slide a new hard disk into the tray and fasten the screws.
4. Insert the hard disk tray back into the N7700 until it snaps into place. You can also lock it with a key if desired.
5. The LED blinks green when the HDD is accessed.

### **RAID Auto-Rebuild**

When using RAID 1, 5, 6, or 10 on the N7700, you can use the auto-rebuild function when an error is detected.

1. When a hard disk fails the system beeps and/or an email notification is sent to specified receivers.
2. Check the LCD to see which disk has failed.
3. Follow the steps mentioned above to replace the failed hard disk.
4. The system automatically recognizes the new hard disk and starts the auto-rebuild sequence to resume its status before the hard disk crash.

## Chapter 7: Troubleshooting

### ***Forgot My Network IP Address***

If you forget your network IP address and have no physical access to the system, you can find out the IP address by either looking directly onto the N7700's LCD panel, or by using the setup wizard to retrieve the IP of your N7700.

1. Start the Setup Wizard, and it will automatically detect all Thecus IP storage products on your network.
2. You should be able to find the IP address of the N7700 which you have forgotten in the **Device Discovery** screen.

### ***Can't Map a Network Drive in Windows XP***

You may have problems mapping a network drive under the following conditions:

1. The network folder is currently mapped using a different user name and password. To connect using a different user name and password, first disconnect any existing mappings to this network share.
2. The mapped network drive could not be created because the following error has occurred: **Multiple connections to a server or shared resource by the same user, using more than one user name, are not allowed.** Disconnect all previous connections to the server or shared resource and try again.

To check out existing network connections, type `net use` under the DOS prompt. You may refer the URL below for more network mapping information.

[http://esupport.thecus.com/support/index.php?\\_m=downloads&\\_a=viewdownload&downloaditemid=57&nav=0](http://esupport.thecus.com/support/index.php?_m=downloads&_a=viewdownload&downloaditemid=57&nav=0)

### ***Restoring Factory Defaults***

From the **System** menu, choose the **Factory Default** item and the **Reset to Factory Default** screen appears. Press **Apply** to reset the N7700 to factory default settings.

#### **WARNING**

Resetting to factory defaults will not erase the data stored in the hard

### ***Problems with Time and Date Settings***

The administrator is able to select an NTP Server to keep the N7700's time synchronized. However, if the N7700 can not access the Internet, you may encounter a problem when setting the Time and Time Zone. If this happens:

1. Login to the Web Administration Interface.
2. Navigate to **System Management > Time**.
3. Under **NTP Server**, select **No**.

4. Set the **Date**, **Time**, and **Time Zone**.
5. Click **Apply**.

In addition, if the N7700 is able to access the Internet and you want to keep the NTP Server clock.isc.org by default, please make sure the DNS Server is correctly entered, thereby allowing the NTP Server name to correctly resolve. (See **System Network > WAN > DNS Server**)

### ***Dual DOM Supports for Dual Protection***

The most advance and useful of N7700 is Dual DOM implemented. In the normal circumstance, it has no need to have this feature involved. But with irresistible cause like power cut or human error by accident occurred especially during system booting stage, this will become the great feature to prevent system down time. Practically while it happened, system will try to recovery the DOM 1 from DOM 2 first. If it is unachievable then system can boot from DOM 2. And all of this procedure can be operated by LCM.

#### **NOTE**

The Dual DOM in DOM1 is default master and FW upgrading will only execute in DOM1 unlike DOM2 is 'Read only" initially.  
Any circumstance occurred, while DOM2 successes recover DOM1. The FW will be version of DOM2. Therefore, it may need to upgrade to the version of DOM1 it has.  
If DOM1 can not be recovery from DOM2, then system will boot up from DOM2. The original configuration in DOM1 may need to setup again with DOM2 operation.


## Chapter 8: Revision updated (FW 3.00.03 to 3.00.06)

### *What's New*


There are additional features implemented into the new 3.00.04 version firmware.

### RAID Expansion for iSCSI Target Volume

First, the iSCSI volume is now able to expand its capacity from unused space. From the volume list, simply select the iSCSI volume you like to expand and click the **Expand** button:

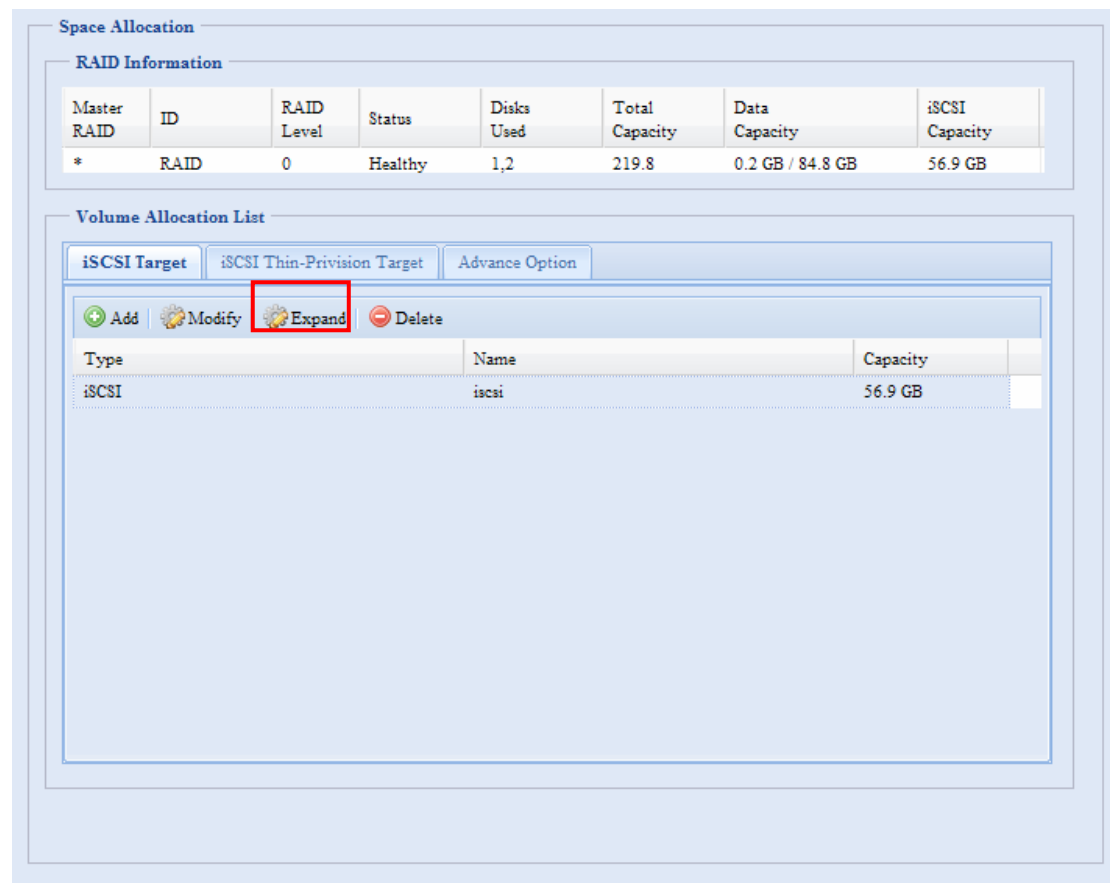

You will then see the dialog box displayed below. Drag the **Expand Capacity** bar to the size you want. Then press **Expand** to confirm the operation.

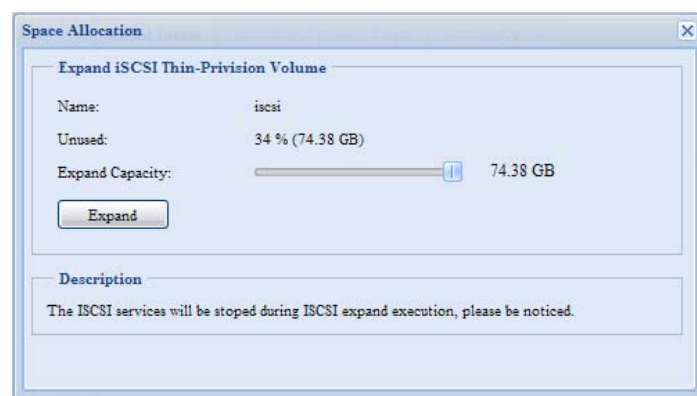

## RAID Volume Encryption

With firmware v3.00.04, you can protect your data by using RAID Volume Encryption function to prevent the risk of data exposure. To activate this function, the **Encryption** option needs to be enabled while the RAID is created and followed by password input for identification. Also, an external writable USB disk plugged into any USB port on the system is required to save the password you have entered while the RAID volume is being created. See the screenshot below for details.

Disk No.	Capacity (MB)	Model	Status	Used	Spare
1	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>
2	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>
3	76,318	WDC WD800JD...	OK	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>
5	N/A	N/A	N/A	<input type="checkbox"/>	<input type="checkbox"/>

RAID Level: ☒ JBOD ☐ RAID 0 ☐ RAID 1 ☐ RAID 5 ☐ RAID 6 ☐ RAID 10

RAID ID:  (Allow 0-9, a-z, A-Z) ☐ Master RAID - Take effect after checked box


Encryption: ☒ Password:  Confirm Password:

Stripe Size:

Data Percentage:  95 %

File System:

Once the **Create** button has been pressed with the **Encryption** checkbox enabled, the following message pop-up will appear for confirmation.

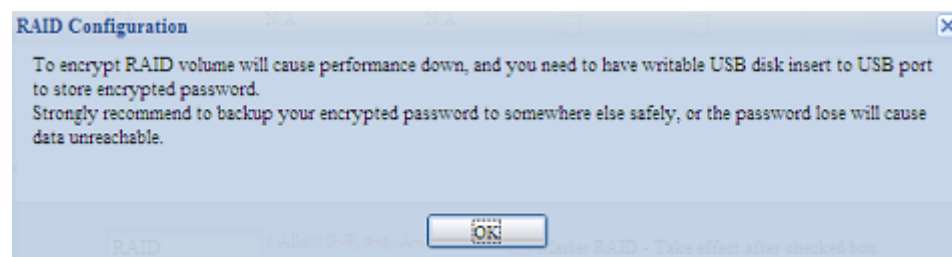

After the RAID volume has been created, you may remove this USB disk until the next time the system boots. The RAID volume can not be mounted if the USB disk with key can not be found in any system USB port when the volume is accessed. To activate the encrypted volume, plug the USB disk containing the encryption key and into any system USB port.

We are strongly recommended copying the RAID volume encryption key to a safe place. You can find the encryption key file from the USB disk in the following format:

(RAID volume created date)\_xxxxxx.key


### WARNING

Please keep USB disk in a safe place and also backup the encrypted key.  
**There is no way to rescue data back if the key is lost.**

## NOTE

1. With RAID volume encryption enabled, the system performance will go down.
2. With RAID volume encryption enabled, RAID volume expansion will operated in off line mode.

RAID volumes with encryption enabled will be displayed with a key lock symbol next to volume ID name.

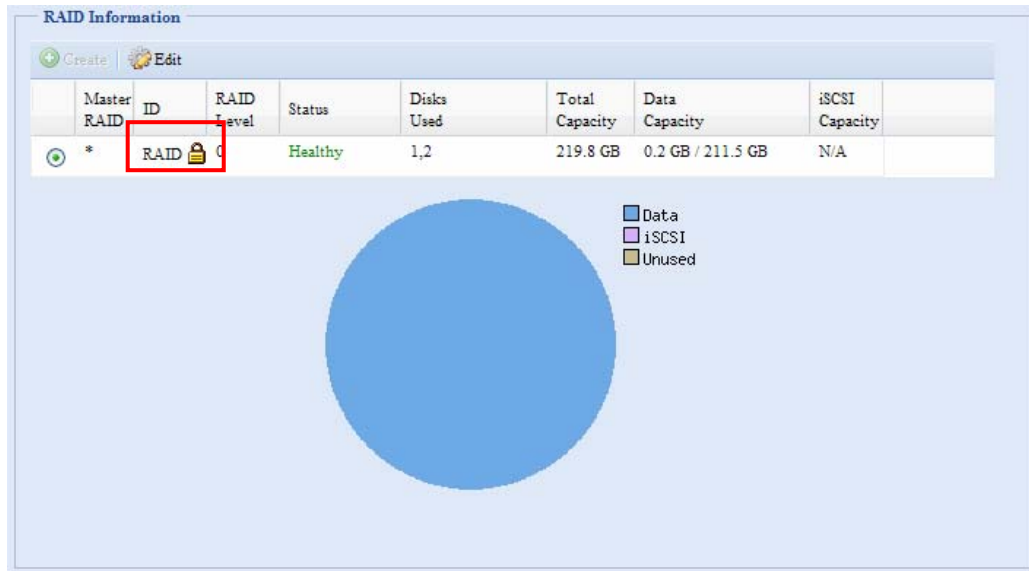


## iSCSI Thin-Provisioning


An advanced thin-provisioning for iSCSI feature is available in this firmware release. With this function, the iSCSI capacity can be more flexible and more efficiently serve more users.

The idea for iSCSI thin-provisioning is sharing the available physical capacity to a number of iSCSI target volumes and also setup virtual capacity to expand the physical size while it needed.


To setup iSCSI thin-provisioning, go to **Space Allocation** under the **Storage** category. The iSCSI thin-provisioning volume needs to be created first. Simply click **iSCSI Thin-Provision Target**. You can refer the screen shot below.

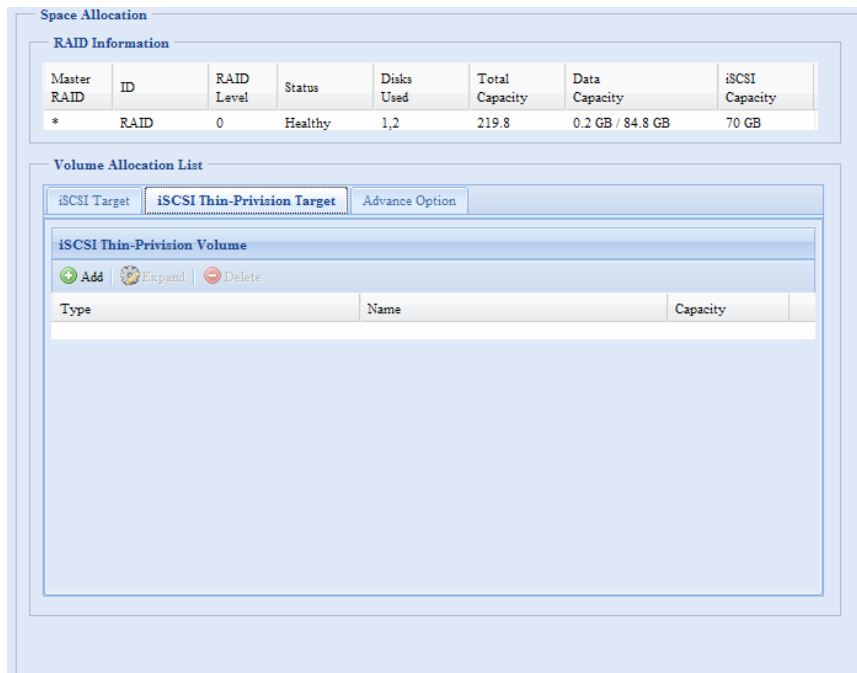

Next, setup the physical capacity for iSCSI thin-provision volume by dragging the **Allocation** bar to the desired size.

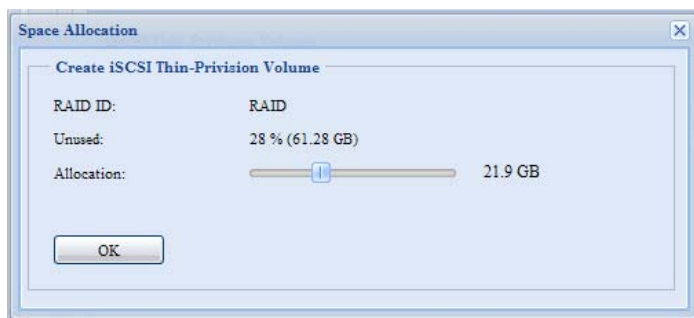

After the size has been determined, click **OK** to confirm. Now you will see the iSCSI thin-provisioning volume is available from the list. Please refer to the screenshot below.

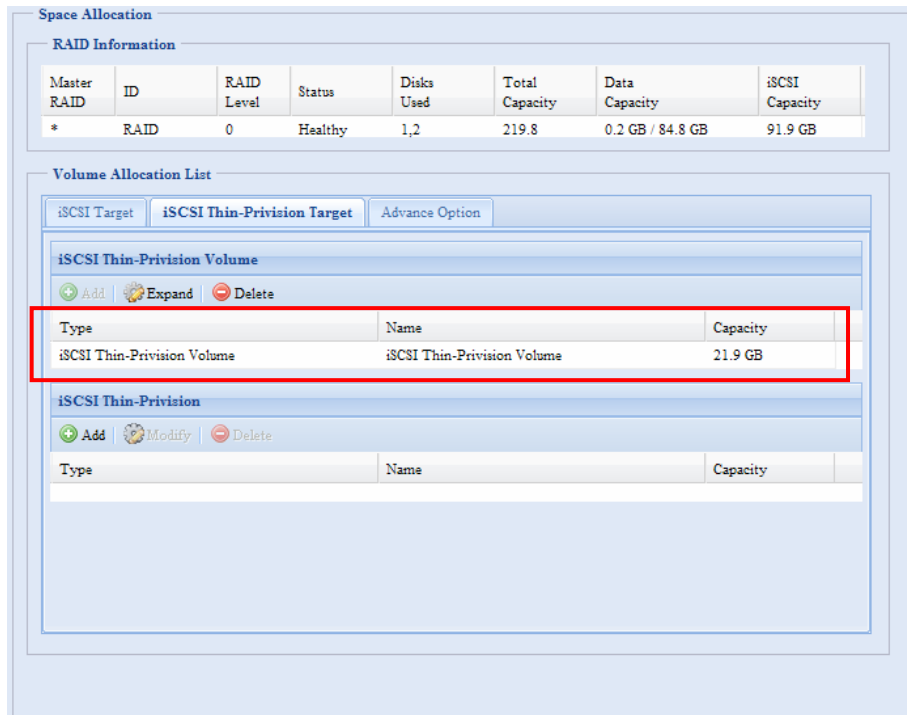


Now you can start to create iSCSI targets to join the newly-created iSCSI thin-provision volume. Basically, the iSCSI target under iSCSI thin-provisioning has exactly same settings screen as the standard iSCSI target volume creation. The only difference is the "Virtual Size" of capacity.


Unlike creating standard iSCSI target volumes, the capacity has been physically allocated. The iSCSI target volume creation under thin-provisioning can virtually be up to 16000GB (16TB).

Let's take the example below:

1. The physical size for the iSCSI thin-provision volume is 333.88GB. You can refer the screenshot above.
2. The iSCSI target volume under thin-provisioning starts with 333.38GB in physical size and you may use drag the Virtual Size bar to select the desired virtual size. The maximum virtual size is 16000GB.
3. In this case, if you make the iSCSI target volume 1700GB, then the virtual size is available for the next iSCSI target volume under thin-provisioning is 14300GB (16000-1700).
4. The limit is 5 iSCSI target volumes under thin-provisioning or a virtual size of 16000GB.

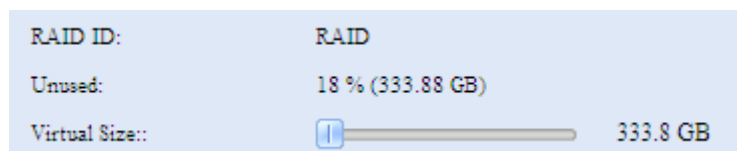

iSCSI Thin-provision physical size starts with 333.8GB

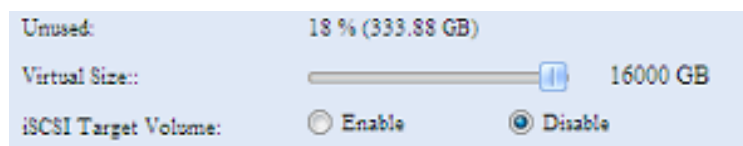

The virtual capacity is limited to 16000GB



The screen shot for iSCSI target volume creation under thin-provisioning; the physical capacity 333.8GB.

**Space Allocation**

Create iSCSI Thin-Provision

RAID ID: RAID

Unused: 18 % (333.88 GB)

Virtual Size: 333.8 GB

iSCSI Target Volume: ☐ Enable ☒ Disable

Target Name:  Limit:(0~9, a~z)

iqn\_Year: 2009

iqn\_Month: 08

LUN ID: 2

Authentication: ☒ None ☐ CHAP

Username:  Limit:(0~9, a~z, A~Z)

Password:  Limit:(0~9, a~z, A~Z,length between 12~16)

Password Confirm:

OK

**Description**

The iSCSI block size can be set under system advance option, default is 512 Bytes.  
Please using [ 4K ] block size while more than 2TB capacity will be configured in Windows XP.  
Please using [ 512 Bytes ] block size for application like VMware etc.

The screen shot to setup an iSCSI target volume under thin-provisioning of 1700GB.

iSCSI Thin-Provision Volume		
<input type="button" value="Add"/> <input type="button" value="Expand"/> <input type="button" value="Delete"/>		
Type	Name	Capacity
iSCSI Thin-Provision Volume	iSCSI Thin-Provision Volume	333.8 GB

iSCSI Thin-Provision		
<input type="button" value="Add"/> <input type="button" value="Modify"/> <input type="button" value="Delete"/>		
Type	Name	Capacity
iSCSI Thin-Provision	n55304601	1700 GB

iSCSI target volume creation. The maximum virtual size is 14300GB (16000GB – 1700GB(1<sup>st</sup> iSCSI target volume)).

**Space Allocation**

Create iSCSI Thin-Provision

RAID ID: RAID

Unused: 18 % (333.88 GB) 14300GB

Virtual Size: 333.8 GB

iSCSI Target Volume: ☐ Enable ☒ Disable

Target Name:  Limit:(0~9, a~z)

iqn\_Year: 2009


This screenshot lists iSCSI target volumes created under thin-provisioning. The 2<sup>nd</sup> iSCSI target volume under thin-provisioning has been created with a capacity of 14300GB.

iSCSI Thin-Provision Volume		
Add            Expand            Delete		
Type	Name	Capacity
iSCSI Thin-Provision Volume	iSCSI Thin-Provision Volume	333.8 GB

iSCSI Thin-Provision		
Add            Modify            Delete		
Type	Name	Capacity
iSCSI Thin-Provision	n55304601	1700 GB
iSCSI Thin-Provision	n554036002	14300 GB

This message appears if there is no more room for new iSCSI target creation.

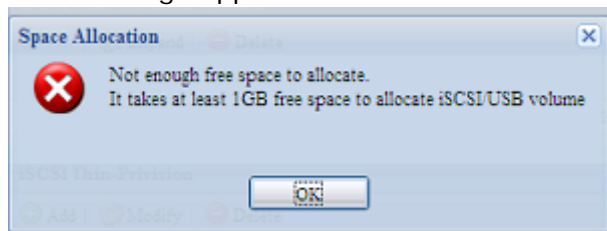

## NOTE

1. Each RAID volume can only create one iSCSI thin-provision volume.
2. Each thin-provision volume can only create 5 iSCSI target volumes.
3. The notification will send out while the physical size of iSCSI thin-provision capacity has used up to 90%.

## iSCSI LUN ID

When iSCSI target volume has been created, there is a default LUN ID of 0 in previous firmware versions which was un-configurable. From v3.00.04, it is configurable from 1 to 254 with a default of the next available number in ascending numerical order. The LUN ID is unique and can not be duplicated except for LUN ID 0.

**Space Allocation**

**Create iSCSI Volume**

RAID ID: RAID

Unused: 16 % (296.78 GB)

Allocation:  296.78 GB

iSCSI Target Volume: ☐ Enable ☒ Disable

Target Name: n55304603 Limit:(0~9, a~z)

iqn\_Year: 2009

iqn\_Month: 08

LUN ID: 6

Authentication: 0 ☐ CHAP

Username: 6 Limit:(0~9, a~z, A~Z)

Password: 7 a~z, A~Z,length between 12~16)

Password Confirm: 8

OK

**Description**

The iSCSI block size can be set under system advance option, default is 512 Bytes.  
Please using [ 4K ] block size while more than 2TB capacity will be configured in Windows XP.  
Please using [ 512 Bytes ] block size for application like VMware etc.

## Error Corrections

None


## Chapter 9: Revision updated up to FW 3.00.08

### ***What's New***

There are additional features implemented into the new 3.00.08 version firmware.

### **Updated Login User Interface**

There is a brand new design for the admin login UI.

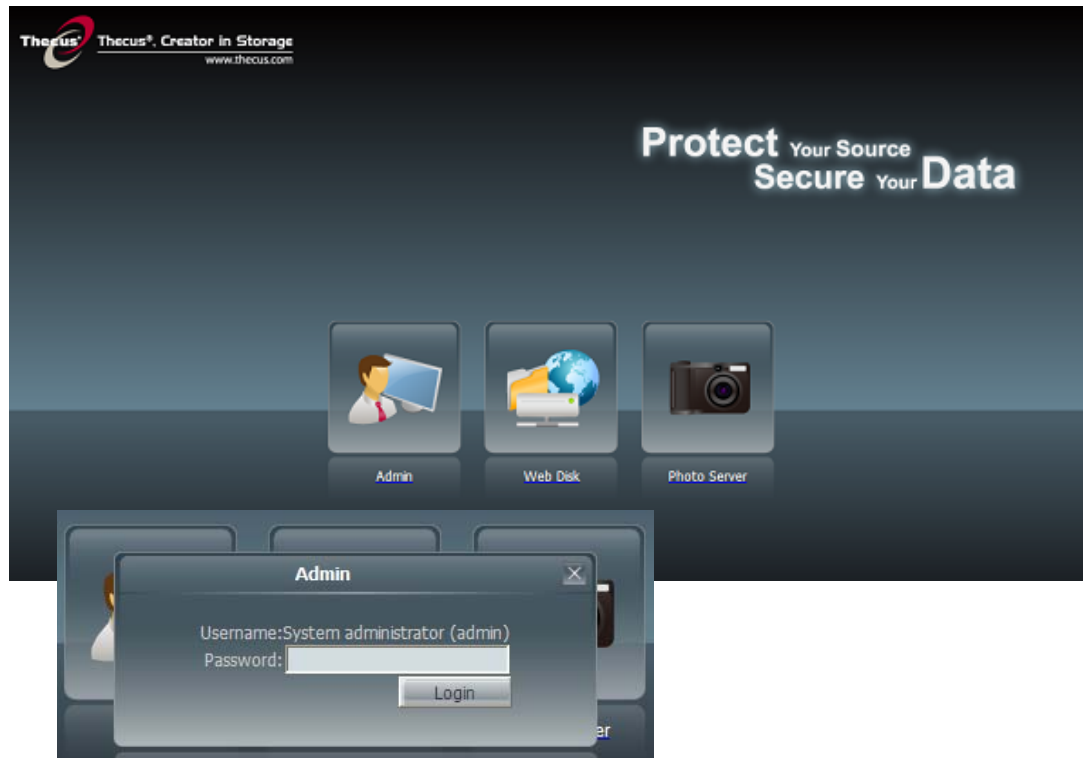


### **NOTE**

The previous chapters have screenshots of the original user interface. Please note that all changes are visual only. There are no functional changes.

### **Updated Photo Server User Interface**

Same as the admin login user interface, the photo server has a brand new art design from its previous version.

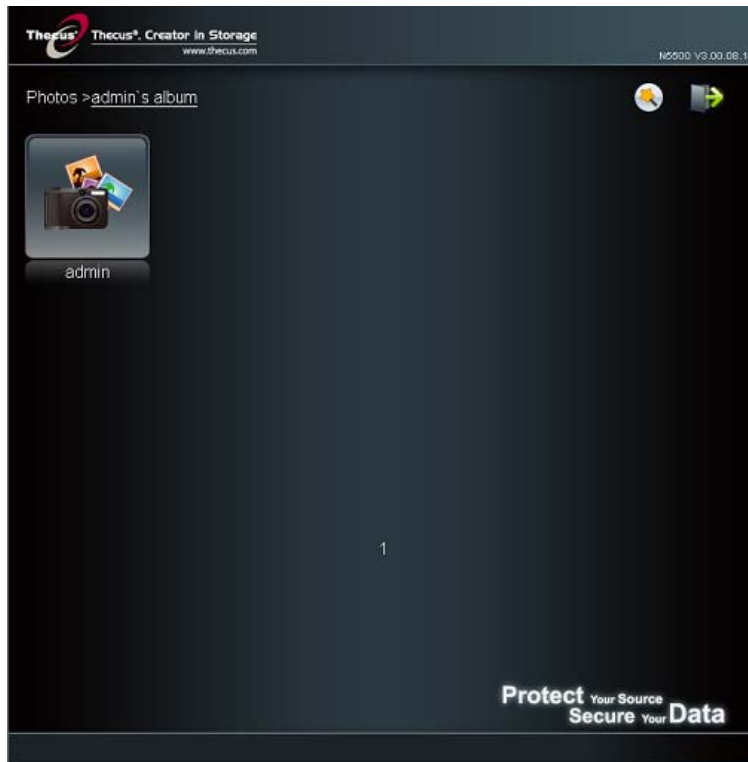

### Disclaimer Page Added

The following disclaimer page has been added to this firmware release. Please click the check box if you do not want to have this page displayed during the next login.

**Disclaimer**

THECUS has no liability, consequential, incidental or special damages. These include, without limitation, loss of recorded data, the cost of recovery of lost data, lost profits and the cost of the installation or removal of any THECUS products, the installation of replacement THECUS products, and any inspection, testing, or redesign caused by any defect or by the repair or replacement of Products arising from a defect in any THECUS products.

Users can now register their Thecus NAS online. Simply go to the online registration page and enable the registration function. The registration page states what system information will be kept in the archive. Users will receive firmware upgrade and module release notice regularly.

☐ I agree. Don't show this message next time.

OK


## Updated Main User Interface

The look and icons of the main user interface have been updated.




## Add On-Line Register Service

From main menu tree, there is a new “On-line Register” option added with this firmware release.

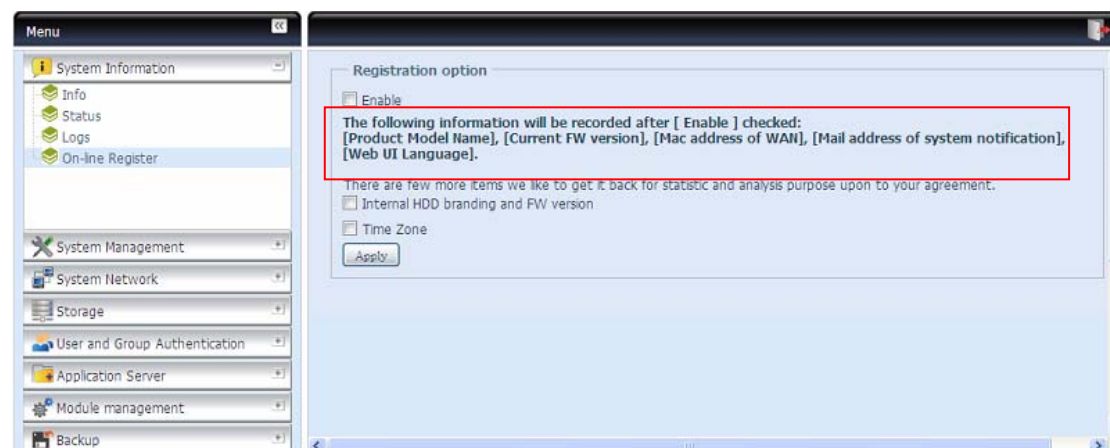


This on-line register service can periodically update the user when new firmware and software modules are released by Thecus. To enable this service, simply check the “Enable” check box. By enabling this service, the items in bold will be sent to Thecus via the Internet.

Other than the defined items sent upon registration, there are also two additional items: “HDD Info” and “Time Zone”. These two optional items can also be sent to Thecus anonymously for analysis and statistics purposes. To send these items, simply check the desired checkboxes to help Thecus improve its products and services.

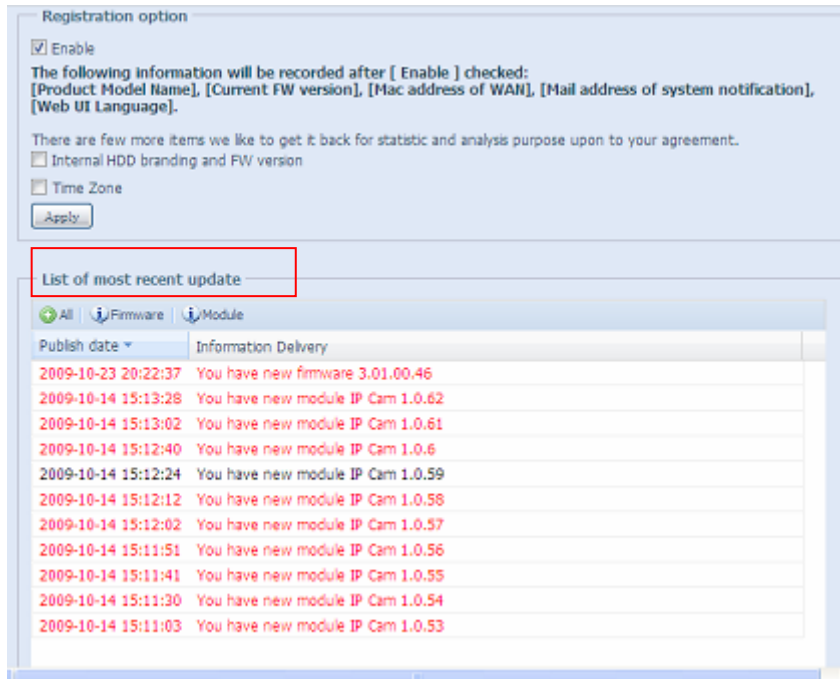

## Added Rsync Setting under Nsync Target

The Thecus Nsync feature has added a third way to use Rsync to replicate data between two systems. For the target side to allow source cross data, the Rsync target server needs to first select "Enable" and then assign a username and password for authentication.

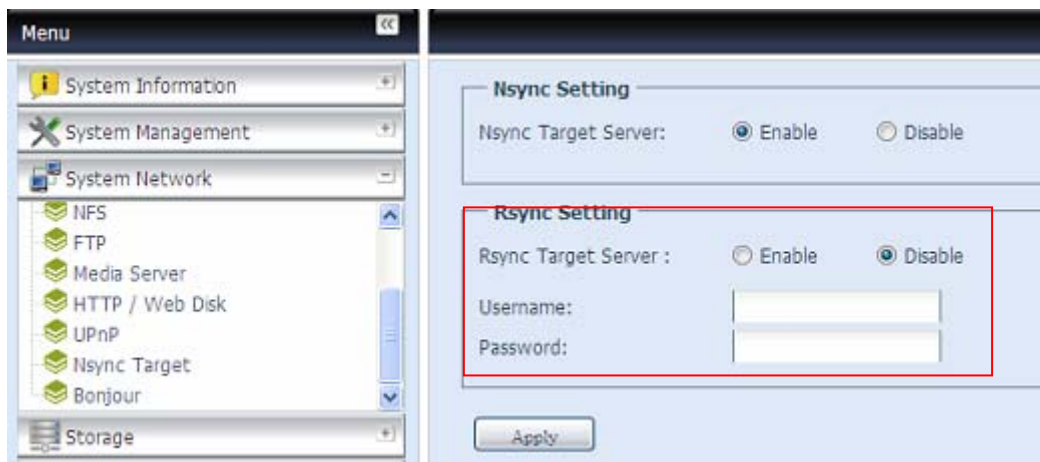

### NOTE


The Rsync target server username and password is used for this replication feature only. It is not related to the standard local user.

## Added Rsync Backup Feature

Thecus Nsync now provides backup features to other Thecus NAS with VPN protection or legacy FTP server with the added Rsync option.

Using "Rsync" to backup data to other Thecus NAS devices uses the exact same procedure as the original Nsync method. The only thing that needs to be done is to


enable the sync target server and input a valid username and password to grant access permission.

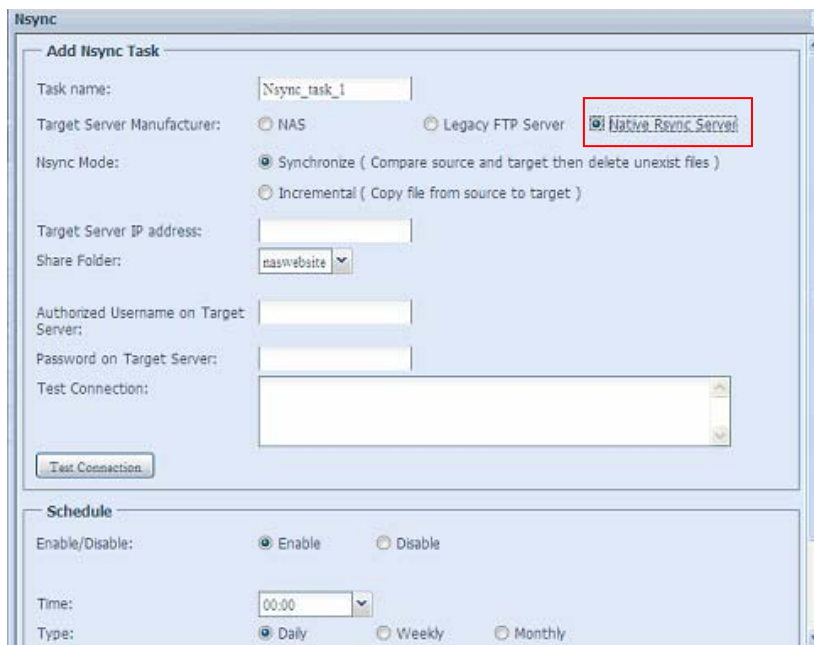

The image shows the 'Nsync' configuration window. Under the 'Add Nsync Task' section, the 'Task name' is 'Nsync\_task\_1'. The 'Target Server Manufacturer' has three radio buttons: 'NAS', 'Legacy FTP Server', and 'Native Sync Server', with the latter being selected and highlighted by a red box. The 'Nsync Mode' has two radio buttons: 'Synchronize ( Compare source and target then delete unexist files )' (selected) and 'Incremental ( Copy file from source to target )'. The 'Target Server IP address' is empty. The 'Share Folder' is 'naswebsite'. The 'Authorized Username on Target Server' and 'Password on Target Server' are empty. There is a 'Test Connection' button. Below this is the 'Schedule' section with 'Enable/Disable' set to 'Enable', 'Time' set to '00:00', and 'Type' set to 'Daily'.

## Added 2<sup>nd</sup> Gateway for Clients of DHCP Server Route

The adding of a 2<sup>nd</sup> gateway has been phased in to serve clients that use their Thecus NAS as a DHCP server to have another route to balance traffic bandwidth.

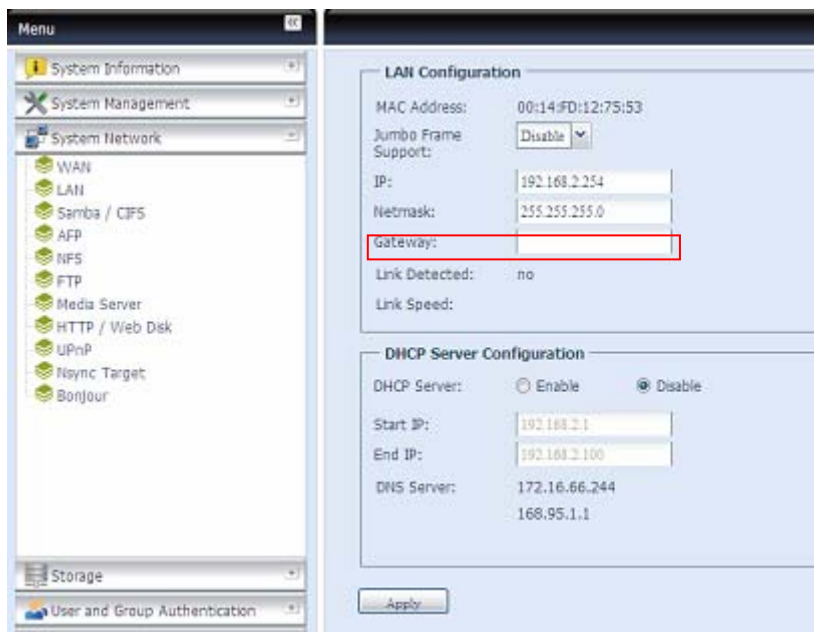

The image shows the 'LAN Configuration' window. The left sidebar has a 'Menu' with 'System Information', 'System Management', 'System Network', 'Storage', and 'User and Group Authentication'. Under 'System Network', there are icons for WAN, LAN, Samba / CIFS, AFP, NFS, FTP, Media Server, HTTP / Web Disk, UPnP, Nsync Target, and Bonjour. The main area has 'LAN Configuration' and 'DHCP Server Configuration' sections. In 'LAN Configuration', 'MAC Address' is '00:14:FD:12:75:53', 'Jumbo Frame Support' is 'Disable', 'IP' is '192.168.2.254', 'Netmask' is '255.255.255.0', and 'Gateway' is empty (highlighted by a red box). 'Link Detected' is 'no' and 'Link Speed' is empty. In 'DHCP Server Configuration', 'DHCP Server' has 'Enable' and 'Disable' radio buttons, with 'Disable' selected. 'Start IP' is '192.168.2.1', 'End IP' is '192.168.2.100', and 'DNS Server' is '172.16.66.244' and '168.95.1.1'. There is an 'Apply' button at the bottom.

### NOTE

If the IP sharing mode setting is set to "Enable" under WAN port, then this 2<sup>nd</sup> gateway cannot be configured.



## Added Dual DOM for Auto Repair

The unique Dual DOM feature can now perform “Auto Repair”. The Thecus NAS will backup up to five versions of the system configuration either by the default timing of 1:00am every day automatically or as scheduled by the user.

This unique “Auto Repair” will be triggered if the primary DOM has a booting issue. In this instance, the 2<sup>nd</sup> DOM will take over the boot function. Then, the system will automatically load the most recent system configuration backup image to repair the primary DOM.

The screenshot displays the 'Dual DOM Schedule Backup' configuration page in the Thecus NAS web interface. On the left is a 'Menu' sidebar with options: System Information, System Management, System Network, Storage, User and Group Authentication, Application Server, Module management, Backup, Nsync, and Dual DOM Backup. The main content area is titled 'Dual DOM Schedule Backup' and includes a checkbox for 'Enable/Disable Dual DOM schedule backup' which is checked. Below this are radio buttons for scheduling: 'Auto' (selected), 'Daily' (with a time dropdown set to 00:00), 'Weekly' (with a day dropdown set to Sunday and a time dropdown set to 00:00), and 'Monthly' (with a day dropdown set to 1 and a time dropdown set to 00:00). There is a 'Status:' label and two buttons, 'Manually' and 'Apply'. Below the scheduling options is a section titled 'Dual DOM Backup Status' containing a table with backup history.

Task name	Date	Firmware
backup_0000004	2009/11/10 01:00	3.00.08.10
backup_0000003	2009/10/28 19:30	3.00.08.10
backup_0000002	2009/10/27 19:30	3.00.08.10
backup_0000001	2009/10/26 19:30	3.00.08.10

## Appendix A: Product Specifications

### Hardware Specifications

Product Model	N7700 / N7700PRO
Network Interfaces	
WAN	Gigabit RJ-45 connector
LAN	Gigabit RJ-45 connector
Storage	
HDD Bays	7 x 3.5" SATA HDD, hot-swappable
eSATA	1 x eSATA connector for capacity expansion
I/O Interfaces	
USB Ports	4 x USB type A ports (Host mode),
System Information	
LCD Control Panel	For basic configurations and status display
System LED Display	6 x LED ( Power LED, System LED, Network Activity x 2, USB Copy, eSATA activity)
Physical	
Height	230 mm
Width	190 mm
Depth	240 mm
Power Supply	Server-rated AC power supply 100/220V AC, 50/60Hz, Auto-detect
Security	Lockable disk trays
Environment	
Temperature	5 ~ 40°C
Humidity	20 ~ 85% relative humidity (non-condensing)
Certifications	CE, FCC, BSMI, C-Tick, RoHS Compliant

### Software Specifications

Network File Protocols	Microsoft Networks (CIFS/SMB) Apple Filing Protocol (AFP 3.0) Network File System (NFS v3) File Transfer Protocol (FTP) Hyper Text Transfer Protocol (HTTP) Secure Hyper Text Transfer Protocol (HTTPS)
Authentication	Local User Account Microsoft Active Directory Authentication (AD)*
Network Client Type	Microsoft Windows NT/2000/XP/2003/Vista Unix/Linux/BSD MAC OS X/9
Network Configuration	Fixed IP address Dynamic IP address 802.3ad based failover and link aggregation
Disk Management	Disk status monitoring (S.M.A.R.T.) Disk idle spin-down
RAID	RAID 0, 1, 5, 6, 10 and JBOD Supports multiple RAID modes – users can create multiple RAID volumes with different RAID levels in one system Auto rebuild Hot swappable

	Hot spare Disk roaming RAID level migration RAID expansion
iSCSI Target	Supports: Microsoft iSCSI Initiator v2.0.4 StarPort Initiator V3.5.2 MAC OS: globalSAN iSCSI initiator version 3.0 (1150) Linux: open-iscsi 2.0-865
Folder Management	Share and sub-folders level permission Public folder
Quota Management	Share folder quota control
Backup	Thecus Backup Utility (Windows XP/2000 and MAC OS X) Thecus Nsync
System Management	Web GUI Multilingual support (English, French, German, Italian, Traditional Chinese, Simplified Chinese, Japanese, Korean, Spanish, Russian and Polish) NTP support Wake-on-LAN Scheduled Power On/Off
Event Notification	Email notification Buzzer notification LCD
UPS Support	UPS monitoring via RS-232 or USB interface , and system shutdown on low battery
Printer Server	USB Printer (IPP support)
Supported USB Devices	USB Printer External HDD/flash disk USB IEEE 802.11 b/g dongle w/AP mode support**
Setup Utility	Windows 2000/XP/2003 /7 MAC OS X

\*AD support: Works as a client member in a Microsoft Active Directory domain, allowing the N7700 to utilize the domain users and groups setting for authentication to the system and authorization to the share folders.

\*\*For supported USB dongles, please contact [sales@thecus.com](mailto:sales@thecus.com)

## Appendix B: Customer Support

If your N7700 is not working properly, we encourage you to check out **Chapter 7: Troubleshooting**, located in this manual. You can also try to ensure that you are using the latest firmware version for your N7700. Thecus is committed to providing free firmware upgrades to our customers. Our newest firmware is available on our Download Center:

<http://www.thecus.com/download.php>

If you are still experiencing problems with your N7700, or require a Return Merchandise Authorization (RMA), feel free to contact technical support via our Technical Support Website:

[http://www.thecus.com/support\\_tech.php](http://www.thecus.com/support_tech.php)

Customers in the US should send all technical support enquiries to the US contact window included in the following web page:

[http://www.thecus.com/support\\_tech.php](http://www.thecus.com/support_tech.php)

For Sales Information you can e-mail us at:

[sales@thecus.com](mailto:sales@thecus.com)

# Thank you for choosing Thecus!



## **Appendix C: RAID Basics**

### **Overview**

A Redundant Array of Independent Disks (RAID) is an array of several hard disks that provide data security and high performance. A RAID system accesses several hard disks simultaneously, which improves I/O performance over a single hard disk. Data security is enhanced by a RAID, since data loss due to a hard disk failure is minimized by regenerating redundant data from the other RAID hard disks.

### **Benefits**

RAID improves I/O performance, and increases data security through fault tolerance and redundant data storage.

### **Improved Performance**

RAID provides access to several hard disk drives simultaneously, which greatly increases I/O performance.

### **Data Security**

Hard disk drive failure unfortunately is a common occurrence. A RAID helps prevent against the loss of data due to hard disk failure. A RAID offers additional hard disk drives that can avert data loss from a hard disk drive failure. If a hard drive fails, the RAID volume can regenerate data from the data and parity stored on its other hard disk drives.

### **RAID Levels**

The Thecus N7700 supports standard RAID levels 0, 1, 5, 6, 10, and JBOD. You choose a RAID level when you create a system volume. The factors for selecting a RAID level are:

- Your requirements for performance
- Your need for data security
- Number of hard disk drives in the system, capacity of hard disk drives in the system

The following is a description of each RAID level:

#### **RAID 0**

RAID 0 is best suited for applications that need high bandwidth but do not require a high level of data security. The RAID 0 level provides the best performance of all the RAID levels, but it does not provide data redundancy.

RAID 0 uses disk striping and breaking up data into blocks to write across all hard drives in the volume. The system can then use multiple hard drives for faster read and write. The stripe size parameter that was set when the RAID was created determines the size of each block. No parity calculations complicate the write operation.

#### **RAID 1**

RAID 1 mirrors all data from one hard disk drive to a second one hard disk drive, thus providing complete data redundancy. However, the cost of data storage capacity is doubled.

This is excellent for complete data security.

## **RAID 5**

RAID 5 offers data security and it is best suited for networks that perform many small I/O transactions at the same time, as well as applications that require data security such as office automation and online customer service. Use it also for applications with high read requests but low write requests.

RAID 5 includes disk striping at the byte level and parity information is written to several hard disk drives. If a hard disk fails the system uses parity stored on each of the other hard disks to recreate all missing information.

## **RAID 6**

RAID 6 is essentially an extension of RAID level 5 which allows for additional fault tolerance by using a second independent distributed parity scheme (dual parity) Data is striped on a block level across a set of drives, just like in RAID 5, and a second set of parity is calculated and written across all the drives; RAID 6 provides for an extremely high data fault tolerance and can sustain two simultaneous drive failures.

This is a perfect solution for mission critical applications.

## **RAID 10**

RAID 10 is implemented as a striped array whose segments are RAID 1 arrays. RAID 10 has the same fault tolerance as RAID level 1.

RAID 10 has the same overhead for fault-tolerance as mirroring alone. High I/O rates are achieved by striping RAID 1 segments.

Under certain circumstances, RAID 10 array can sustain up to 2 simultaneous drive failures

Excellent solution for applications that would have otherwise gone with RAID 1 but need an additional performance boost.

## **JBOD**

Although a concatenation of disks (also called JBOD, or "Just a Bunch of Disks") is not one of the numbered RAID levels, it is a popular method for combining multiple physical disk drives into a single virtual one. As the name implies, disks are merely concatenated together, end to beginning, so they appear to be a single large disk.

As the data on JBOD is not protected, one drive failure could result total data loss.

## ***Stripe Size***

The length of the data segments being written across multiple hard disks. Data is written in stripes across the multiple hard disks of a RAID. Since multiple disks are accessed at the same time, disk striping enhances performance. The stripes can vary in size.

## ***Disk Usage***

When all 7 disks are of the same size, and used in RAID, N7700 disk usage percentage is listed below:

<b>RAID Level</b>	<b>Percentage Used</b>
RAID 0	100%
RAID 1	$1/n \times 100\%$
RAID 5	$(n-1)/n \times 100\%$
RAID 6	$(n-2)/n \times 100\%$
RAID 10	50%
JBOD	100%

n : HDD number

## **Appendix D: Active Directory Basics**

### ***Overview***

With Windows 2000, Microsoft introduced Active Directory (ADS), which is a large database/information store. Prior to Active Directory the Windows OS could not store additional information in its domain database. Active Directory also solved the problem of locating resources; which previously relied on Network Neighborhood, and was slow. Managing users and groups were among other issues Active Directory solved.

### ***What is Active Directory?***

Active Directory was built as a scalable, extensible directory service that was designed to meet corporate needs. A repository for storing user information, accounts, passwords, printers, computers, network information and other data, Microsoft calls Active Directory a "namespace" where names can be resolved.

### ***ADS Benefits***

ADS lets the N7700 integrate itself with the existing ADS in an office environment. This means the N7700 is able to recognize your office users and passwords on the ADS server. Other major benefits ADS support provides include:

1. Easy integration of the N7700 into the existing office IT infrastructure

The N7700 acts as a member of the ADS. This feature significantly lowers the overhead of the system administrator. For example, corporate security policies and user privileges on an ADS server can be enforced automatically on the N7700.

2. Centralized user/password database

The N7700 does not maintain its own copy of the user/password database. This avoids data inconsistency between the N7700 and other servers. For example, without ADS support, an administrator might need to remove a specific user privilege on the N7700 and each individual server. With ADS support, the change on an ADS server is known to all of its ADS members.



## Appendix E: UPS Compatibility List

Brand	Series	Model	Notes
Ablerech	MS-RT		
ActivePower	1400VA		
AEC	MiniGuard UPS 700 M2501 cable		
APC	Back-UPS Pro		
	Matrix-UPS		
	Smart-UPS		
	Back-UPS	940-0095A/C cables, 940-0020B/C cables, 940-0023A cable	
	Back-UPS Office	940-0119A cable	
	Masterswitch Not a UPS - 940-0020 cable		
	Back-UPS RS 500 custom non-USB cable		
Belkin	Regulator Pro serial		
	Resource		
	Home Office	F6H350-SER, F6H500-SER, F6H650-SER	
	Universal UPS	F6C800-UNV, F6C120-UNV, F6C1100-UNV, F6H500ukUNV	
Best Power	Fortress (newer)		
	Fortress Telecom		
	Axxium Rackmount		
	Patriot Pro		
	Patriot Pro II		
	Patriot INT51 cable		
	Micro-Ferrups		
	Fortress/Ferrups f-command support		
Centralion	Blazer		
Clary	ST-800		
Compaq	T1500h		
Cyber Power Systems		320AVR, 500AVR, 650AVR, 700AVR, 800AVR 850AVR, 900AVR, 1250AVR, 1500AVR, Power99 550SL, 725SL, CPS825VA, 1100AVR, 1500AVR-HO	
Deltec	PowerRite Pro II		
Dynex	975AVR		
Effekta	MI/MT/MH 2502 cable		
Energy Sistem	(various)		
ETA	mini+UPS WinNT/Upsoft cable		
ETA	mini+UPS PRO UPS Explorer cable		
Ever UPS	NET *-DPC		
	AP *-PRO		
Ever-Power	625/1000		
Exide	NetUPS SE		
Fenton Technologies	PowerPal P-series		
	PowerPal L-series		
	PowerOn		
	PowerPure		
Fairstone		L525/L625/L750	

Brand	Series	Model	Notes
Fideltronik	Ares 700 and larger		
	Other Ares models		
Fiskars	PowerRite MAX		
	PowerServer	10, 30	
Gamatronic	All models with alarm interface		
	MP110/210		
	MS-T		
	MS		
	µPS3/1		
Gemini	UPS625/UPS1000		
HP	R3000 XR		
	R5500 XR		
INELT	Monolith 1000LT		
Infosec	iPEL	350, 500, 750, 1000	
Ippon	(various)		
Liebert	UPStation GXT2 contact-closure cable		
Masterguard	(various)		
Meta System	HF Line	1..4 boards, /2 5..8 boards	
	HF Millennium	810, 820	
	HF TOP Line	910, 920, 930, 940, 950, 960, 970, 980	
	ECO Network	750, M1000, M1050, M1500, M1800 M2000, M2100, M2500, M3000	
	ECO	305, 308, 311, 511, 516, 519, 522	
	ally HF	800, 1000, 1250, 1600, 2000, 2500	
	Megaline	1250, 2500, 3750, 5000, 6250, 7500, 8750, 10000	
MGE UPS SYSTEMS	NOVA AVR 600 Serial		
	NOVA AVR 1100 Serial		
	Pulsar Ellipse	USBS Serial cable, S, Premium USBS Serial cable, Premium S	
	Ellipse Office	600 Serial cable, 750 Serial cable, 1000 Serial cable, 1500 Serial cable	
	Pulsar EXtreme C / EX RT		
	Comet EX RT	Serial port, 3:1 Serial port	
	Pulsar Esprit		
	Evolution S	1250, 1750, 2500, 3000	Serial Port
	Pulsar M	2200, 3000, 3000 XL	Serial Port
	Pulsar	700, 1000, 1500, 1000 RT2U, 1500 RT2U, MX 4000 RT, MX 5000 RT Evolution, EXtreme C, ES+, ESV+, SV, ESV, EX, EXL, PSX, SX, EXtreme	Serial Port
	Comet EXtreme		
	Comet / Galaxy (Serial)	Utalk Serial Card (ref 66060), HID COM Serial Card (ref 66066)	
MicroDowell	B.Box BP	500, 750, 1000, 1500	
Microsol	Solis	1.0 1000VA, 1.5 1500VA, 2.0 2000VA, 3.0 3000VA	
	Rhino	6.0 6000VA, 7.5 7500VA, 10.0 10000VA, 20.0 20000VA	
Mustek	Various		
	Powermust	400VA Plus, 600VA Plus, 800VA Pro 1000VA Plus, 1400VA Plus, 2000VA USB	
Nitram	Elite	500, 2002	

Brand	Series	Model	Notes
Oneac	EG/ON Series advanced interface		
Online	P-Series		
OnLite	AQUA 50		
Orvaldi	various not 400 or 600		
Powercom	SMK-800A		
	ULT-1000		
	TrustTrust 425/625		
Powercom	<a href="#">BNT-1000AP</a>		
	Advice Partner/King Pr750		
	BNT-2000AP		
PowerGuard	PG-600		
PowerKinetics	9001		
PowerTech	Comp1000 DTR cable power		
Power Walker	Line-Interactive VI1000		
Powerware		3110, 3115, 5119, 5125, 5119 RM, PW5115 PW5125PW9120, PW9125, 9120, 9150, 9305	
Powerwell	PM525A/-625A/-800A/-1000A/-1250A		
Repotec	RPF525/625/800/1000		
	RPT-800A		
	RPT-162A		
SMS (Brazil)	Manager III		
SOLA		325, 520, 610, 620, 330	
SOLA/BASIC Mexico	various ISBMEX protocol		
Socomec Sicon	Egys 420 VA		
Soltec	Winmate 525/625/800/1000		
Soyntec	Sekury C	500, 800	
SquareOne Power	QP1000		
SuperPower	HP360, Hope-550		
Sweex	500/1000 smart - shipped with SafeNet		
	500/1000 contact closure - shipped with UPSmart		
	BC100060 800VA		
Sysgration	UPGUARDS Pro650		
Tecnoware	Easy Power 1200		
Tripp-Lite	SmartUPS		
	SmartOnline		
	(various) Lan 2.2 interface - black 73-0844 cable		
Trust	UPS 1000 Management PW-4105		
UNITEK	Alpha	500 IC, 1000Is, 500 ipE	
UPSonic	LAN Saver 600		
	Power Guardian		
Victron/IMV	(various)		
	Lite crack cable		

## NOTE

- The UPSes marked **Blue** have been tested and work well
- If your UPS is not in the support list, be sure that the UPS supports one of following protocols:
  - SEC protocol
  - Generic RUPS model
  - Generic RUPS 2000 (Megatec M2501 cable)
  - PhoenixTec protocol
  - Safenet software

## Appendix F: Licensing Information

### Overview

This product included copyrighted third-party software licensed under the terms of GNU General Public License. Please see THE GNU General Public License for extra terms and conditions of this license.

### Source Code Availability

Thecus Technology Corp. has exposed the full source code of the GPL licensed software. For more information on how you can obtain our source code, please visit our web site, <http://www.thecus.com>.

### Copyrights

- This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)).
- This product includes software developed by Mark Murray.
- This product includes software developed by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)).
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).
- This product includes PHP, freely available from (<http://www.php.net/>).
- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by the Apache Group for use in the Apache HTTP server project (<http://www.apache.org/>).
- This product includes software developed by Softweyr LLC, the University of California, Berkeley, and its contributors.
- This product includes software developed by Bodo Moeller.
- This product includes software developed by Greg Roelofs and contributors for the book, "PNG: The Definitive Guide," published by O'Reilly and Associates.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Yen Yen Lim and North Dakota State University.
- This product includes software developed by the Computer Systems Engineering Group at Lawrence Berkeley Laboratory.
- This product includes software developed by the Kungliga Tekniska Högskolan and its contributors.
- This product includes software developed by the Nick Simicich.
- This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.

## ***CGIC License Terms***

### Basic License

CGIC, copyright 1996, 1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004 by  
Thomas Boutell and Boutell.Com, Inc.

Permission is granted to use CGIC in any application, commercial or noncommercial, at no cost. HOWEVER, this copyright paragraph must appear on a "credits" page accessible in the public online and offline documentation of the program. Modified versions of the CGIC library should not be distributed without the attachment of a clear statement regarding the author of the modifications, and this notice may in no case be removed. Modifications may also be submitted to the author for inclusion in the main CGIC distribution.

## ***GNU General Public License***

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc.  
51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### PREAMBLE

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what

they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

#### TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program).

Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
  - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
  - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
  - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under

these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.



4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### END OF TERMS AND CONDITIONS